Tram-rac® 4A Housing

Service Manual (Two Board)

2002029-021

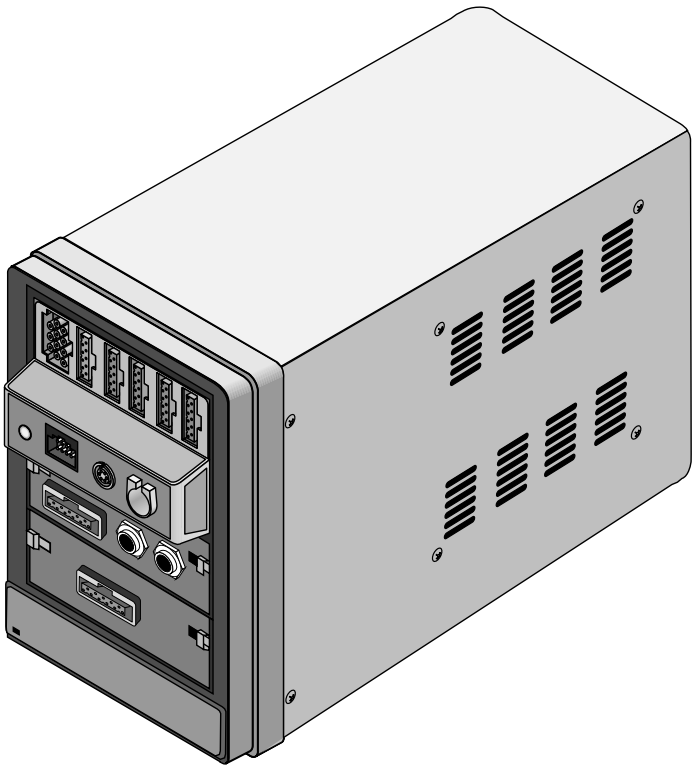

GE Medical Systems
Information Technologies

gemedicalsystems.com

NOTE:

Due to continuing product innovation, specifications in this manual are subject to change without notice.

Trademarks

Listed below are GE Medical Systems *Information Technologies* trademarks. All other trademarks contained herein are the property of their respective owners.

900 SC, ACCUSKETCH, AccuVision, APEX, AQUA-KNOT, ARCHIVIST, Autoseq, BABY MAC, C Qwik Connect, CardioServ, CardioSmart, CardioSys, CardioWindow, CASE, CD TELEMETRY, CENTRA, CHART GUARD, CINE 35, CORO, COROLAN, COROMETRICS, Corometrics Sensor Tip, CRG PLUS, DASH, Digistore, Digital DATAQ, E for M, EAGLE, Event-Link, FMS 101B, FMS 111, HELLIGE, IMAGE STORE, INTELLIMOTION, IQA, LASER SXP, MAC, MAC-LAB, MACTRODE, MANAGED USE, MARQUETTE, MARQUETTE MAC, MARQUETTE MEDICAL SYSTEMS, MARQUETTE UNITY NETWORK, MARS, MAX, MEDITEL, MEI, MEI in the circle logo, MEMOPORT, MEMOPORT C, MINISTORE, MINNOWS, Monarch 8000, MULTI-LINK, MULTISCRIPTOR, MUSE, MUSE CV, Neo-Trak, NEUROSCRIPT, OnlineABG, OXYMONITOR, Pres-R-Cuff, PRESSURE-SCRIBE, QMI, QS, Quantitative Medicine, Quantitative Sentinel, RAC RAMS, RSVP, SAM, SEER, SILVERTRACE, SOLAR, SOLARVIEW, Spectra 400, Spectra-Overview, Spectra-Tel, ST GUARD, TRAM, TRAM-NET, TRAM-RAC, TRAMSCOPE, TRIM KNOB, Trimline, UNION STATION, UNITY logo, UNITY NETWORK, Vari-X, Vari-X Cardiomatic, VariCath, VARIDEX, VAS, and Vision Care Filter are trademarks of GE Medical Systems *Information Technologies* registered in the United States Patent and Trademark Office.

12SL, 15SL, Access, AccuSpeak, ADVANTAGE, BAM, BODYTRODE, Cardiomatic, CardioSpeak, CD TELEMETRY®-LAN, CENTRALSCOPE, Corolation, EDIC, EK-Pro, Event-Link Cirrus, Event-Link Cumulus, Event-Link Nimbus, HI-RES, ICMMS, IMAGE VAULT, IMPACT.wf, INTER-LEAD, IQA, LIFEWATCH, Managed Use, MARQUETTE PRISM, MARQUETTE® RESPONDER, MENTOR, MicroSmart, MMS, MRT, MUSE CardioWindow, NST PRO, NAUTILUS, O_2SENSOR, Octanet, OMRS, PHi-Res, Premium, Prism, QUIK CONNECT V, QUICK CONNECT, QT Guard, SMART-PAC, SMARTLOOK, Spiral Lok, Sweetheart, UNITY, Universal, Waterfall, and Walkmom are trademarks of GE Medical Systems *Information Technologies*.

© GE Medical Systems *Information Technologies*, 2001. All rights reserved.

1 **Introduction 1-1**

Manual Information 1-3
Revision History 1-3
Manual Purpose 1-3

Related Manuals 1-4
Tech Memos 1-4

Safety Information 1-5
Responsibility of the Manufacturer 1-5
Intended Use 1-5
Definitions of Warnings, Cautions, and Notes 1-6
Equipment Symbols 1-7

Service Information 1-8
Service Requirements 1-8
Equipment Identification 1-8
Warranty 1-8

2 **General Information 2-1**

Equipment Overview 2-3
Tram-rac Theory 2-3
Tram-net Communication 2-4
Tram-rac 4A Housing 2-4
Power Supply Connection 2-12

Technical Specifications 2-13

3 **Maintenance 3-1**

Controlling Electrostatic Discharge Damage 3-3
Guidelines 3-3

Maintenance Schedule 3-4
General 3-4
Inspection 3-4
General Cleaning 3-5

Electrical Safety Tests 3-6
General 3-6
Recommendations 3-6
Wall Receptacle Test 3-7
Ground (Earth) Integrity 3-7
Ground (Earth) Wire Leakage Current Tests 3-8
Enclosure Leakage Current Test 3-10

Tram-rac 4A Housing Service Kits 3-12
PN 2006853-001 3-12
PN 2006854-001 3-12
PN 2006855-001(Repair Kit–3-to-2 Board Conversion) 3-12

Accessories 3-13

Repair Log 3-14

4 **Troubleshooting 4-1**

Controlling Electrostatic Discharge Damage 4-3
Guidelines 4-3

Wall Receptacle Check 4-4
Measure Voltages 4-4
Ground-Neutral Loop Resistance Check 4-4
Check Power Cord 4-5

General Fault Isolation 4-6
First Things to Ask 4-6
Visual Inspection 4-7

Tram-rac 4A LED Troubleshooting Chart 4-8

5 **Tram-rac 4A Housing 5-1**

Theory of Operation 5-3
Overview 5-3
Top Level Block Diagram 5-3
Block Diagram of Control Signals 5-6

Indicators and Controls 5-7

Interconnection Diagram PN 900031 5-8

Input and Output Connectors 5-10

Exploded View PN 900031-005/006 5-15

Parts List PN 900031-005N/006N 5-20

6 **Tram-rac 4A Processor Acquisition PCB 6-1**

Theory of Operation 6-3
Overview 6-3
Block Diagram 6-4
Microprocessors 6-4
Microprocessor Memory 6-5
Reset Generator and Watchdog Circuit 6-5
PCB Clock Generation 6-6
Analog Multiplexers 6-6
Noise Filter and Buffer Amplifier 6-6
Analog-to-Digital Converter 6-6
RAC Field Programmable Gate Array (FPGA, U13) 6-7

Indicators and Controls 6-10

Input and Output Connectors 6-11
Module Interface (J1–J4) 6-11
Interface PCB (J5) 6-14
ISP Serial EEPROM Interface (J6) 6-15

Part Location Diagram PN 2004288-001A 6-16

Parts List PN 2004288-001A 6-19

Schematic Diagram PN 2004289-001A 6-21

7

Tram-rac 4A Interface PCB 7-1

Theory of Operation 7-3
Overview 7-3
Block Diagram 7-3

Indicators and Controls 7-8

Input and Output Connectors 7-9

Part Location Diagram PN 800516-001J/002J 7-13

Parts List PN 800516-001 7-14

Parts List PN 800516-002 7-16

Schematic Diagram PN SD800516-001D 7-18

8

Tram-rac 4A Power Supply 8-1

Theory of Operation 8-3
Overview 8-3

Indicators and Controls 8-4

Input and Output Connectors 8-5

Part Location Diagram PN 6123-211A. 8-6

Parts List PN 6123-211A 8-7

Schematic DiagramPN SD6123-211A 8-10

1 Introduction

For your notes

Manual Information

Revision History

Each page of the document has the document part number and revision letter at the bottom of the page. The revision letter changes whenever the document is updated.

Table 1. Revision History

Revision	Date	Comment
A	23 February 2001	Initial release of this manual for the Tram-rac 4A Two Board version.

Manual Purpose

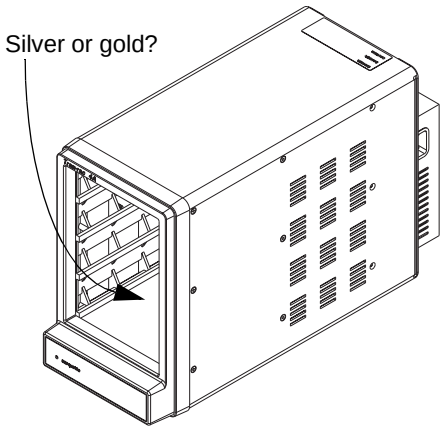

This manual supplies technical information for service representative and technical personnel so they may maintain the equipment to the assembly level. Use it as a guide for maintenance and electrical repair considered field repairable.

- This manual applies *only* to the Tram-rac 4A with the **silver** plate below the module slots. (Two Board version)
- The *Tram-rac Housing Service Manual* (PN404183-096) is for Tram-rac 4A housings with the **gold** plate below the module slots. (Three Board version)

A service kit is available to repair existing Tram-rac 4As with the **gold** plate. See "Tram-rac 4A Housing Service Kits" on page 3-12 for the available kit.

Users of this manual are expected to have a strong background in electronics, including analog and digital circuity with microprocessor and micro-controller architecture.

Related Manuals

Check these documents if you need additional information about related producets.

Table 2. Service Documents	
Part Number	**Name**
404183-006	Tram-rac Chassis Service Manual (For Tram-rac 3 and Tram-rac 4 Housing)
404183-048	Tramscope 12C Monitor Service Manual
404183-094	Tramscope 12 Monitor Service Manual
404183-096	Tram-rac Housing Service Manual
404183-150	Modular Patient Monitor Accessories Manual
404422-001	Tram 100-600 Modules Service Manual
404422-065	Tram 100-850 A & SL Modules Service Manual
405040-002	Centralscope 12 Central Station Service Manual
405040-018	Centralscope 12C Central Station Service Manual
405040-117	Modular Centralscope Central Station Service Manual
414993-001	Solar 7000/8000/View Patient Monitor Service Manual
414993-007	Solar 7000 Patient Monitor Data Manual
2000701-001	Solar 8000M Patient Monitor Service Manual
421669-001	Solar 9500 Information Monitor Service Manual

Table 3. Operator Documents
Name
Tram Critical Care Monitor Operator's Manual
Centralscope Central Station and CD Telemetry–LAN Monitoring System Operator's Manual
Solar 7000/8000 Patient Monitor Operator's Manual
Solar 8000M Patient Monitor Operator's Manual
Solar 9500 Information Monitor Operator's Manual

Tech Memos

GE Medical Systems *Information Technologies* Service issues technical memos that aid service personnel in servicing and maintaining the equipment. Tech Memos supply important information about changes to the equipment, typical problems, and how to solve those problems. Tech Memos are also written to describe hardware and software upgrades.

Tech Memos are automatically distributed to all GE Medical Systems *Information Technologies* Field Service personnel, and are available to customers by subscription. Contact Technical Support for more information or to subscribe. For the address or telephone number, see How to Reach Us...".“

Safety Information

Responsibility of the Manufacturer

GE Medical Systems *Information Technologies* is responsible for the effects of safety, reliability, and performance only if:

- Assembly operations, extensions, readjustments, modifications, or repairs are carried out by persons authorized by *Information Technologies*.
- The electrical installation of the relevant room complies with the requirements of the appropriate regulations.
- The equipment is used in accordance with the instructions for use.

Intended Use

This device is intended for use under the direct supervision of a licensed health care practitioner.

To ensure patient safety, use only parts and accessories manufactured or recommended by GE Medical Systems *Information Technologies*.

Contact *Information Technologies* for information before connecting any devices to this equipment that are not recommended in this manual.

Definitions of Warnings, Cautions, and Notes

Warnings, cautions, and notes are used throughout this manual to designate a degree or level of hazardous situations. Hazard is defined as a source of potential injury to a person.

DANGER
indicates an imminent hazard which, if not avoided, will result in death or serious injury.

WARNING
indicates a potential hazard or unsafe practice which, if not avoided, could result in death or serious injury.

CAUTION
indicates a potential hazard or unsafe practice which, if not avoided, could result in minor personal injury or product/property damage.

NOTE: provides application tips or other useful information to assure that you get the most from your equipment.

Equipment Symbols

The following symbols appear on the equipment.

NOTE

Some symbols may not appear on all equipment.

ATTENTION: Consult accompanying documents before using the equipment.

In Europe, this symbol means dangerous or high voltage. In the United States, this symbol represents the caution notice below:
To reduce the risk of electric shock, do NOT remove cover (or back). Refer servicing to qualified personnel.

Defibrillator-proof type CF equipment; type CF equipment is specifically designed for applications where a conductive connection directly to the heart is established. The paddles indicate the equipment is defibrillator proof.

Defibrillator-proof type BF equipment; type BF equipment is specifically designed for applications intentional external and internal application to the patient, excluding direct cardiac application. Type BF equipment is type B equipment with an F-type isolated (floating) part. The paddles indicate the equipment is defibrillator proof.

Type B equipment; type B equipment is suitable for intentional external and internal application to the patient, excluding direct cardiac application.

Equipotentiality

Alternating current (AC)



Power; **I** = ON; **O** = OFF



Fuse

Indicates where to press to open the door on the Series 7160 Direct Digital Writer.

Service Information

Service Requirements

Follow the service requirements listed below.

- Refer equipment servicing to GE Medical Systems *Information Technologies*' authorized service personnel only.
- Any unauthorized attempt to repair equipment under warranty voids that warranty.
- It is the user's responsibility to report the need for service to GE Medical Systems *Information Technologies* or to one of their authorized agents.
- Failure on the part of the responsible individual, hospital, or institution using this equipment to implement a satisfactory maintenance schedule may cause undue equipment failure and possible health hazards.
- Regular maintenance, irrespective of usage, is essential to ensure that the equipment will always be functional when required.

Equipment Identification

Every GE Medical Systems *Information Technologies* device has a unique serial number for identification. The serial number appears on the product label on the base of each unit under the Trim knob control.

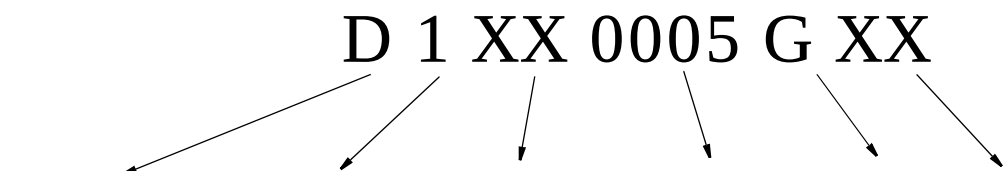

Month Manufactured
A = January
B = February
C = March
D = April
E = May
F = June
G = July
H = August
J = September
K = October
L = November
M = December

Year Manufactured
1 = 2001
2 = 2002
3 = 2003
(and so on)

Product Code
Two-character product descriptor
ST = Tram-rac 4A

Product Sequence Number
Manufacturing number (of total units manufactured.)

Division
F = Diagnostic
G = Monitoring
N = Freiburg Hellige

Device Characteristics
One or 2 letters that further describe the unit, for example:
P = prototype not conforming to marketing specification
R = refurbished equipment
S = special product documented under Specials part numbers
U = upgraded unit

Warranty

1 year.

2 General Information

For your notes

Equipment Overview

Tram-rac Theory

The Tram-rac housing (**r**emote **a**cquisition **c**ase) acquires the patient data for the patient monitor. It provides an interface between the patient monitor and a Tram module or discrete parameter module. An interface cable provides the communications media between the Tram-rac 4A and the host monitor. If the Tram-rac 4A is an unpowered RAC (pn 900031-005), the cable provides +16.5V power. If a Tram-rac housing is located more than 20 feet from the patient monitor, the Tram-rac housing needs its own power supply.

NOTE

For an equipment overview of other products used in the Tram Critical Care Monitoring system, refer to Table 2, "Service Documents," on page 1-4.

Communication options and Tram-net communication are explained in "Tram-net Communication" on page 2-4.

There are three Tram-rac housings available for the patient monitor:

- Tram-rac 2 housing, which houses a single Tram module or two discrete modules,
- Tram-rac 2A housing, which houses a single Tram module or two discrete modules,
- Tram-rac 4A housing, which houses a Tram module and two discrete parameter modules or no Tram module and four discrete parameter modules.

  NOTE

  If your system contains a Tram-rac 4 (not 4A) housing, it houses only two discrete parameter modules and a Tram module in the top slot.

This manual addresses *only* the Tram-rac 4A.

Tram-net Communication

Tram-net communication permits connection to the Tram-rac housing and other bedside peripherals. The Tram-net communication is one form of local area network that provides a data and power link from the monitor to peripheral devices. The connector makes a communication processor available for the peripheral devices. The Tram-net controller processor is built into the communication PCB assembly which frees up the main processor in the monitor.

To avoid confusion, consider Tram-net communication as a small area network (SAN) contained in one room or at the patient bedside. For more details about communication networks, refer to the appropriate monitor service manual.

Tram-rac 4A Housing

Shown below is a Tram-rac 4A housing with a Tram module and one BP and one BP/Dual Temperature module inserted.

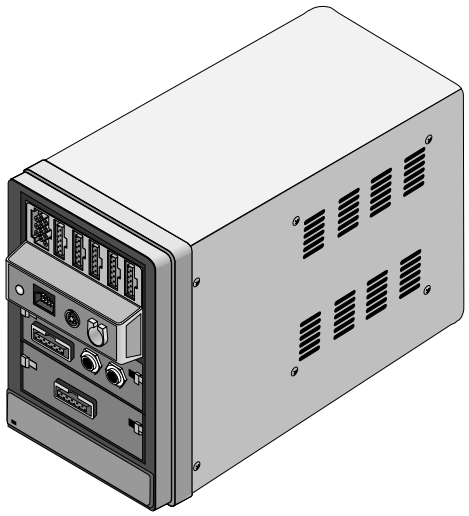

The Tram-rac 4A housing has three communication connectors:

- The 15-pin yellow color-coded connector is used for analog output,
- The two 9-pin blue color-coded connectors are for:
  - Tram-net communication with a patient monitor,
  - Tram-net hub,
  - remote control, or
  - an additional Tram-rac housing.

The number of peripheral devices is dependent upon the software version of the host monitor. When you use an optional power supply, there is an additional hidden connector on the back panel for the power supply connection.

Below are examples of the rear label of the Tram-rac 4A housing with and without a power supply. Further explanation about connection and labeling of the male and female Tram-net connectors is found on the following pages.

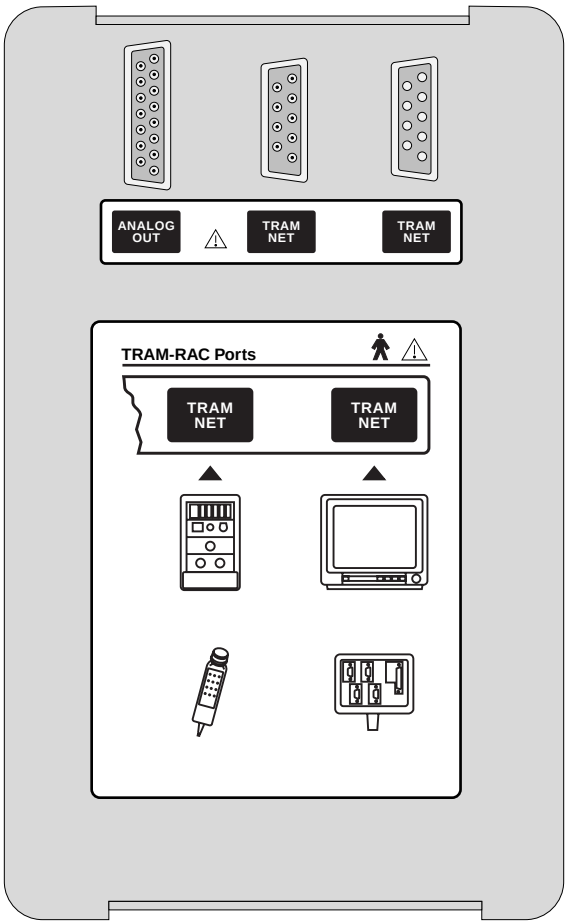

Tram-rac without Power Supply

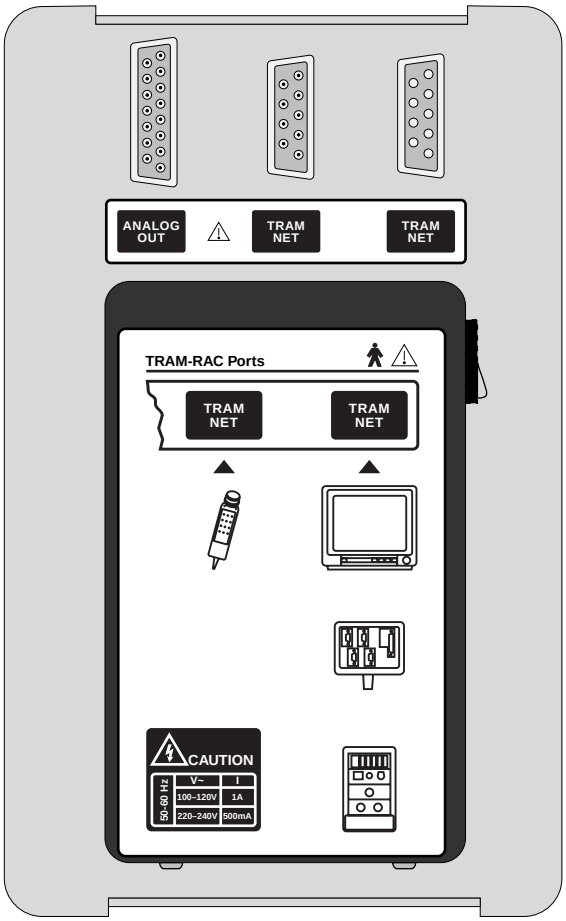

Tram-rac with Power Supply

Solar 7000/8000 Monitor Connection

The Solar patient monitor can support two Tram-rac housings.

The *right* Tram-net connector may be connected to the following:

- a monitor,
- a Tram-net hub, or
- another Tram-rac housing if this Tram-rac housing has a power supply.

The *center* Tram-net connector may be connected to the following:

- a remote control or
- to another Tram-rac 4A housing with a power supply.

NOTE

The Tram-rac housing *furthest* from the monitor must have a power supply.

Shown below are examples of how to connect dual Tram-rac housing to a Solar 7000 or 8000 monitor. Note that the Solar 8000 has a horizontal orientation.

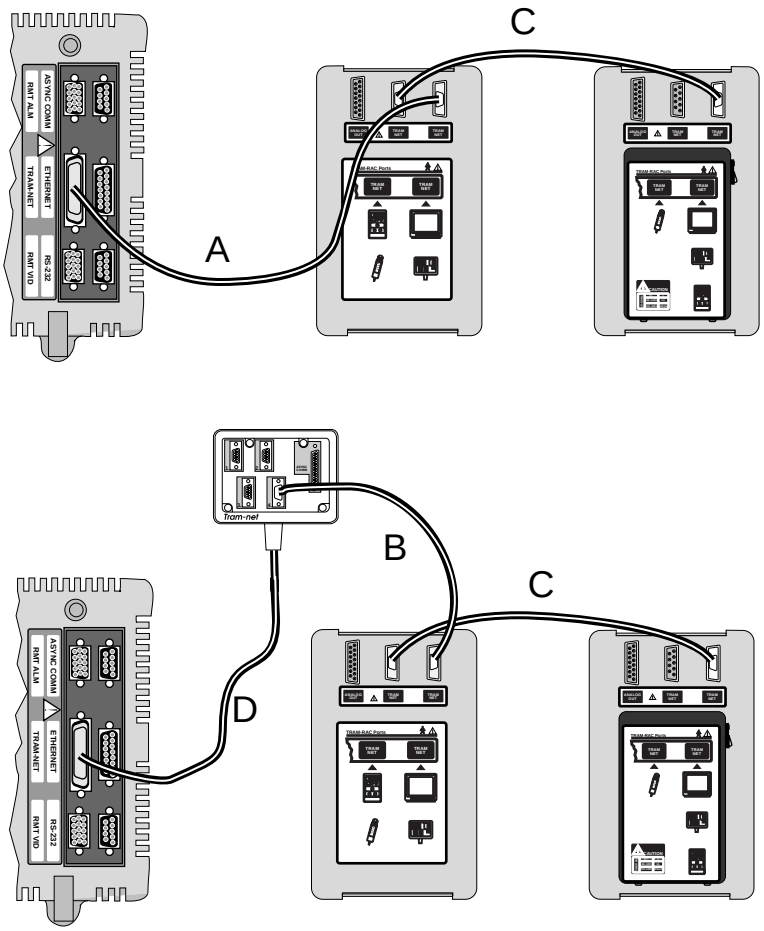

See "Accessories" on page 3-13 for cables and cable part numbers.

Solar 8000M Monitor Connection

The Solar patient monitor can support two Tram-rac housings.

The *right* Tram-net connector may be connected to the following:

- a monitor,
- a Tram-net hub, or
- another Tram-rac housing if this Tram-rac housing has a power supply.

The *center* Tram-net connector may be connected to the following:

- a remote control or
- to another Tram-rac 4A housing with a power supply.

NOTE

The Tram-rac housing *furthest* from the monitor must have a power supply.

See below to connect dual Tram-rac housing to a Solar 8000M monitor

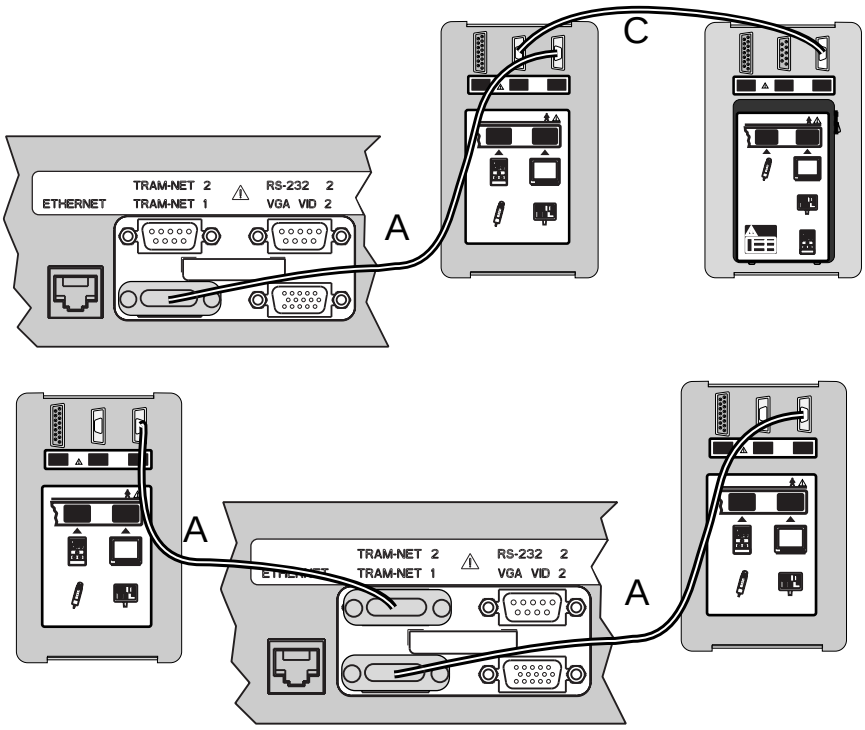

See "Accessories" on page 3-13 for cables and cable part numbers.

WARNING

Equipment damage. Connect the Octanet and Tram-rac housing to the Solar 8000M patient monitor BEFORE plugging the power cord into an AC outlet. Connecting these devices to a powered Solar 8000M patient monitor could damage the connectors.

Tramscope Monitor Connection

The level of software used in the connected patient monitor determines how the two Tram-net connectors on the Tram-rac 4A may be used.

Tramscope V6/V7 Software

If your Tramscope monitor uses V6 or V7 software, the monitor may only support one Tram-rac housing.

The *right* Tram-net connector may be connected to the following:

- the monitor or
- a Tram-net hub.

The *center* Tram-net connector may be connected a remote control but NOT to another Tram-rac housing.

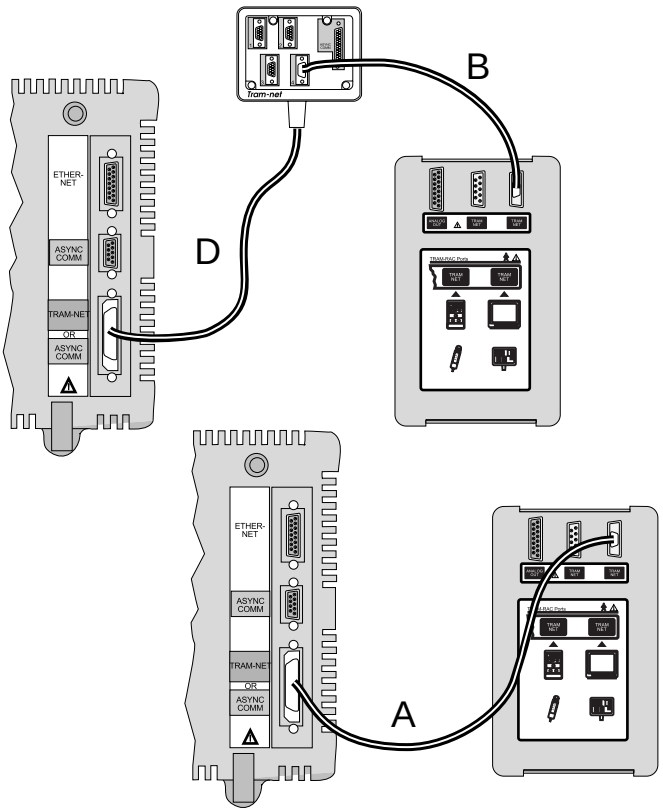

See "Accessories" on page 3-13 for cables and cable part numbers.

Tramscope V17 Software

If your Tramscope monitor uses V17 software, the monitor may support two Tram-rac housings.

The *right* Tram-net connector may be connected to the following:

- a monitor,
- a Tram-net hub, or
- another Tram-rac housing if this Tram-rac housing has a power supply.

The *center* Tram-net connector may be connected to the following:

- a remote control or
- to another Tram-rac 4A housing with a power supply.

NOTE

The Tram-rac housing furthest from the monitor must have a power supply. If older models of Tram-rac housing are used, a Tram-net hub is necessary.

Shown below are examples of how to connect dual Tram-rac housing to a monitor.

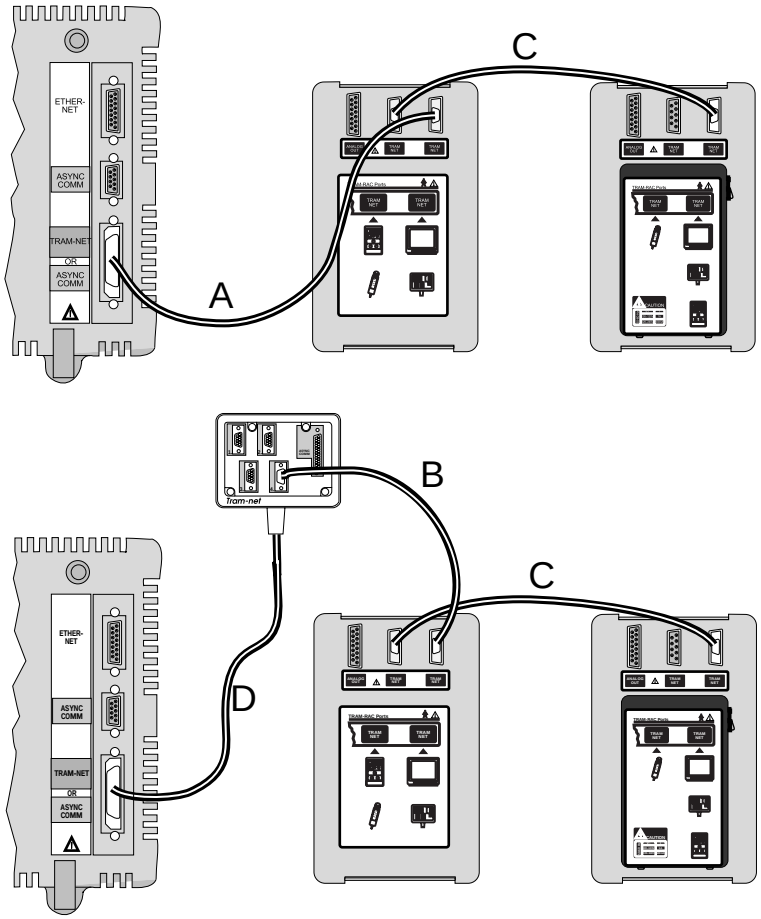

See "Accessories" on page 3-13 for cables and cable part numbers.

Analog Output Connection

The analog out connector is provided for customized uses for other peripheral devices. The yellow color-coded 15-pin connector provides an analog output waveform signal.

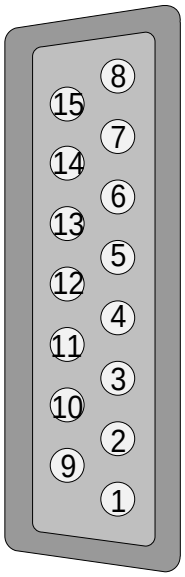

Note the parameter numbers indicated on the front of the Tram-rac 4A housing.

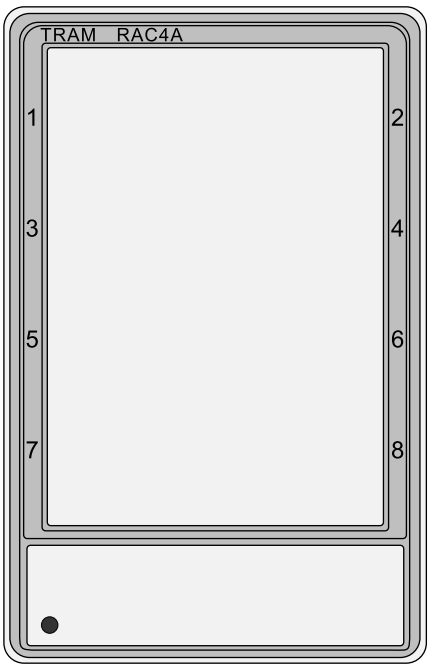

When a Tram or discrete parameter module is inserted into the housing, the slot number of the parameter and its analog output waveform is available at a designated pin of the analog out connector. Refer to the list below

NOTE

The Tram module must be in the top slot in order to receive the Tram signals listed below.

Table 1. Analog Output Signals

Analog Output Pin	Signal Name	Bezel Number For BP
Pin 1	Signal Ground for Tram Waveforms	–
Pin 2	Trace 1	Tram[1]
Pin 3	Tram BP3 or SPO_2 Value	Tram[1]
Pin 4[2]	Slot 1 Discrete Module Waveform A	1
Pin 5	Tram ART 1 or BP1	Tram
Pin 6	Slot 3 Discrete Module Waveform A	6
Pin 7	Slot 4 Discrete Module Waveform A	8
Pin 8	Signal Ground for Discrete Module Waveforms	
Pin 9	Tram ECG II	Tram[1]
Pin 10	Tram ECG V	Tram[1]
Pin 11	Tram BP4 or RESP	Tram[1]
Pin 12[2]	Slot 1 Discrete Module Waveform B	2
Pin 13	Tram BP2 or SPO_2 Waveform	Tram
Pin 14	Slot 3 Discrete Module Waveform B	5
Pin 15	Slot 4 Discrete Module Waveform B	7

NOTE

The superscript number 1 indicates that this signal remains unchanged after entering the Tram-rac 4A housing and is controlled by Tram module software. All other signals are generated by the DAC (digital-to-analog converter) on the Tram-rac 4 interface PCB assembly.

The asterisk indicates reserved for future use.

Power Supply Connection

The power supply is required where one or more of the following conditions apply:

- The Tram-rac 4A is more the 20 feet from the monitor,
- The Tram-rac 4A operates in an environment with high electrical noise,
- One Tram-rac without a power supply is already connected to the monitor (or Tram-net hub), or
- You exceeded the monitor power supply capability.

Technical Specifications

Table 2. Performance Specifications for Analog Output	
Item	**Description**
ECG (From Tram or Discrete Parameter Module)	
Trace I and II gain	1 V/mV ±10%
Range	±5 mV
Frequency response	0.05 Hz to 100 Hz
Respiration (From Tram module only)	
Lead	Displayed lead
Gain	1 V/ohm
Range	0.4 ohm to 10 ohms
Frequency response	0.05 Hz to 2.2 Hz
Blood Pressure (From Tram or Discrete Parameter Module)	
Outputs	Tram: Arterial BP, BP 2, BP 3, BP 4 Discrete Parameter Module: Up to 3 additional BP signals for slots 5, 6 and 8 (Dependent on Tram-rac housing size.)
Gain	10 mV/mm Hg ±5%
Frequency response	0 to 50 Hz
Range	-25 mm Hg to 300 mm Hg; 0 mm Hg = 0.0V ±0.005V

Table 3. Communication Specifications	
Item	**Description**
Communications to monitor provided by Tram-net communication	
Data acquisition	Intel 80C31, 8-bit, 14.7 MHz
Communication to display	Intel 80C152, 8-bit, 14.7 MHz

Table 4. Environmental Specifications	
Item	**Description**
Tram-rac housing 4A with power supply	
Power requirements	220 ±40 VAC, 50/60 Hz, single phase
Power consumption	120 watts
Low voltage shutdown	90 VAC/180 VAC
Cooling	Convection
Heat dissipation	238 Btu/hr (70 watts)
Tram-rac housing 4A without power supply	
Maximum distance from monitor	3.67 m (20 ft)
Power requirements from monitor	16.5 V @ 3.5 A
Tram-rac housing (All)	
Operation conditions ■ Ambient temperature ■ Relative humidity	 10° C to 35° C (50° F to 95° F) 40% to 95% (noncondensing)
Storage conditions ■ Temperature ■ Relative humidity	 –10° C to 50° C (14° F to 122° F) 0% to 95% (noncondensing)

Table 5. Physical Specifications	
Item	**Description**
Height	22.9 cm (9.0 in)
Width	14.5 cm (5.7 in)
Depth	33.5 cm (13.2 in)
Depth w/ power supply	38.4 cm (15.1 in)
Weight	2.9 kg (6.4 lb)
Weight w/power supply	3.5 kg (7.9 lb)

Table 6. Certification	
Item	**Description**
Safety standards	UL544 listed, IEC 601 certified Meets current ANSI/AAMI safety and performance standards Complies with CSA No. 125

3 Maintenance

For your notes

Controlling Electrostatic Discharge Damage

All components of the Tram Critical Care Monitoring System make extensive use of CMOS components. CMOS components are used because they are more immune to noise and consume less power than standard TTL or NMOS components. However, by their nature CMOS components are more vulnerable to electrostatic discharge (ESD) damage than other semiconductors.

ESD damage, usually a subtle weakening of semiconductor junctions, can range from corruption of digital memory to catastrophic failure, rendering a component or a number of components permanently unusable. Although it is more common for CMOS components to fail from ESD damage, no semiconductor device is completely safe from ESD damage.

The inputs and outputs of all of the components are protected from ESD damage, so they are no more susceptible to ESD damage during normal operation than any other device. However, when you service components, you expose the components to several sources of static electricity, ranging from human hands to improperly grounded test equipment. For this reason, it is recommended that all service workstations be as static-free as possible.

Guidelines

The following guidelines can help make your workstation more resistant to the damage that can be caused by static electricity.

- Discharge any static charge you may have built up before handling semiconductors or assemblies containing semiconductors.
- A grounded, antistatic wristband or heelstrap should be worn at all times when repairing assemblies containing semiconductors.
- Use only properly grounded soldering and test equipment.
- Use a static-free surface when working on assemblies containing semiconductors.
- Do NOT remove semiconductors or assemblies containing semiconductors from antistatic containers (bags) until needed.
- Make sure power to an assembly is turned off before removing or inserting a semiconductor.
- Do NOT slide semiconductors or assemblies containing semiconductors across any surface.
- Do NOT touch semiconductor leads unless absolutely necessary.
- Semiconductors and assemblies containing semiconductors should be stored only in antistatic bags or boxes.

Maintenance Schedule

General

An effective maintenance schedule should be established for the Tram-rac 4A. The schedule should include inspection, general cleaning, performance testing, and safety testing on a regular basis.

Safety tests are recommended to be performed every twelve months or if any internal components have been altered.

WARNING
A failure, on the part of the responsible individual hospital or institution employing the uses of this monitoring equipment, to implement a satisfactory maintenance schedule may cause undue equipment failure and possible health hazards.

Inspection

Inspect the Tram-rac 4A on a regular basis. Follow these guideline when you inspect the equipment.

- Inspect the equipment for obvious physical damage and replace damaged items.
- Inspect all connectors for bent pins or prongs. Replace or repair any bad cables or connectors.

  NOTE
  Only qualified service personnel should replace the connectors.

- Inspect all cable insulation. Qualified service personnel should repair or replace damaged or deteriorated cables.
- Inspect fuses.

General Cleaning

Exterior Cleaning

Clean the Respiratory Mechanics Module on a regular basis.

Clean the exterior surfaces of the device with a dampened lint-free cloth. Use one of the following approved solutions:

- ammonia (diluted),
- Cidex,
- sodium hypochlorite bleach (diluted), or
- mild soap (diluted).

To avoid damage to the equipment, follow these rules.

CAUTION
Failure to follow these rules may melt, distort, or dull the finish of the case, blur lettering on the labels, or cause equipment failures.

Always dilute the solutions according to the manufacturer's suggestions.

Always wipe off all the cleaning solutions with a dry cloth after cleaning.

Never use wax containing a cleaning substance.

Never pour water or any cleaning solution on the equipment or permit fluids to run behind switches, into the connectors, or into any ventilation openings in the equipment.

Never use these cleaning agents:

- abrasive cleaners or solvents of any kind,
- acetone,
- alcohol based cleaning agents (except for cleaning the thermal print head), or
- Betadine.

Interior Cleaning

On a regular basis, qualified service personnel should open the RM-M or RM module and blow dust from unit with compressed air.

Electrical Safety Tests

General

Electrical safety tests provide a method of determining if potential electrical health hazards to the patient or operator of the device exist.

These tests are for Tram-rac 4A units with the optional power supply. If your Tram-rac 4A does NOT have a power supply, see the test procedure in the service manual of the host monitor(i.e., Solar 8000, Solar 9500, etc.).

Recommendations

GE Medical Systems *Information Technologies* recommends electrical safety tests be performed:

- upon receipt of the module,
- every twelve months thereafter, and
- each time the module is opened or repaired.

- To safety test a Tram-rac 4A *without* a power supply, leave it connected to a monitor during the safety tests.
- Safety test a Tram-rac 4A *with* a power supply separately.

Record the date and results on the "Repair Log" on page 3-14 (at the end of this chapter).

Required Tests

These instructions are intended for for Tram-rac 4A units with the optional power supply. Listed below are the safety tests.

- Wall receptacle test,
- Ground (Earth) integrity,
- Ground (Earth) leakage current tests, and
- Enclosure leakage current tests.

Checkout procedures, safety tests, and leakage tests are described in the "Maintenance" chapter of the appropriate patient monitor. See Table 2, "Service Documents," on page 1-4 for the appropriate manual.

NOTE

Perform the safety tests for the Tram modules or discrete parameter modules used in the Tram-rac 4A according to the directions in their respective service manuals.

If a Tram-rac 4A under test fails the leakage tests, call Tech Support for assistance. (See "How to Reach Us.")

Test Conditions

All electrical safety tests may be performed under normal ambient temperature, humidity, and pressure conditions.

Test Equipment

A Leakage Current Tester is needed.

Wall Receptacle Test

Before starting the tests, the wall receptacle from which the device will get electrical power must be checked. This test checks the condition of the wall receptacle to ensure correct results from leakage tests.

For international wall receptacles, refer to the internal standards agencies of that particular country. Use a digital multimeter to ensure the wall receptacle is wired properly.

If other than normal polarity and ground is indicated, corrective action must be taken before proceeding. The results of the following tests will be meaningless unless a properly wired wall receptacle is used.

Ground (Earth) Integrity

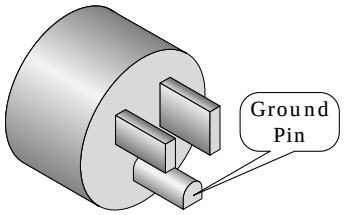

Listed below are two methods for checking the ground (earth) integrity, “Ground Continuity Test” and “Impedance of Protective Earth Connection.” These tests determine whether the device's exposed metal and power inlet's earth (ground) connection has a power ground fault condition.

Perform the test method below that is required by your Country/Local governing safety organization.

Ground Continuity Test

Completion of this test is checked by the following steps:

1. Disconnect the DUT (device under test) from the wall receptacle.
2. Connect the negative(–) lead of the ohm meter to the protective earth terminal (ground pin in power in-let connector) or the protective earth pin in the MAINS PLUG (ground pin in power cord). Refer to the US 120Vac power cord figure on the left.
3. Set the Ohm meter to the milliohm (mΩ) range.
4. Connect the positive (+) lead of the Ohm meter to all exposed metal surfaces on the DUT. If the metal surfaces are anodized or painted scrape off a small area in a inconspicuous area for the probe to make contact with the metal.

5. Resistance should read to pass:
   - 0.1 ohm or less without power cord
   - 0.2 ohms or less with power cord

Impedance of Protective Earth Connection

This test unlike a ground continuity test will also stress the ground system by using special ground bond testers i.e. Kikusui (model 872 or TOS 6100) or Associated Research model HYAMP® Jr. Model 3030D.

This test normally is only required as a manufacturing production test to receive safety agency compliance (i.e. IEC601-1).

Some country agency's do require this test after field equipment repairs (i.e. Germany's DIN VDE 0751 standards).

Consult your country/local safety agency if in question.

Compliance is checked by the following steps:

1. A current not less than 10A and not exceeding 25 A from a current source with a frequency of 50 or 60 Hz with a no-load voltage not exceeding 6 V is passed for at least 5 s through the PROTECTIVE EARTH TERMINAL or the protective earth pin in the MAINS PLUG and each ACCESSIBLE METAL PART which could become LIVE in case of failure in BASIC INSULATION.
2. The voltage drop between the parts described is measured and the impedance determined from the current and voltage drop. It shall not exceed the values indicated.

For EQUIPMENT without a POWER SUPPLY CORD the impedance between the PROTECTIVE EARTH TERMINAL and any ACCESSIBLE METAL PART which is PROTECTIVELY EARTHED shall not exceed 0.1 ohms

For EQUIPMENT with a POWER SUPPLY CORD the impedance between the protective earth pin in the MAINS PLUG and any ACCESSIBLE METAL PART which is PROTECTIVELY EARTHED shall not exceed 0.2 ohms.

When taking this measurement move the customer's power cord around, no fluctuations in resistance should be observed.

Ground (Earth) Wire Leakage Current Tests

Perform this test to measure current leakage through the ground (earth) wire of the equipment during normal operation.

1. Set the leakage tester switches as follows:
   - GND switch - OPEN,
   - Polarity switch - NORM,
   - Power switch - OFF.

2. Connect the DMM to the METER jacks on the leakage tester. Set the DMM to measure AC millivolts.
3. Connect the power cord of the device under test to the power receptacle on the rear of the leakage tester.

   NOTE

   The device under test is to be tested at its normal operating voltage.

4. Set the leakage tester power switch to ON.
5. Set the power switch of the device under test to ON.
6. Read the current leakage indicated on DMM. If the reading is greater than the appropriate specification below, the device under test fails and should be repaired and tested again.

   - 300 µA (0.3 volts on the DMM), and the device under test is powered from 100-120 V/50-60 Hz
   - 300 µA (0.3 volts on the DMM), and the device under test is powered from a centered-tapped 200-240 V/50-60 Hz, single phase circuit
   - 500 µA (0.5 volts on the DMM), and the device under test is powered from a non-center-tapped, 200-240 V/50-60 Hz, single-phase circuit

   NOTE

   Center-tapped and non-center-tapped circuits produce different leakage currents and the UL and IEC limits are different.

7. Set the polarity switch on the leakage tester to RVS (reverse).
8. Read the current leakage indicated on DMM. If the reading is greater than the appropriate specification below, the device under test fails and should be repaired and tested again.

   - 300 µA (0.3 volts on the DMM), and the device under test is powered from 100-120 V/50-60 Hz
   - 300 µA (0.3 volts on the DMM), and the device under test is powered from a centered-tapped 200-240 V/50-60 Hz, single phase circuit
   - 500 µA (0.5 volts on the DMM), and the device under test is powered from a non-center-tapped, 200-240 V/50-60 Hz, single-phase circuit

   Center-tapped and non-center-tapped circuits produce different leakage currents and the UL and IEC limits are different.

9. Set the leakage tester power switch to OFF.

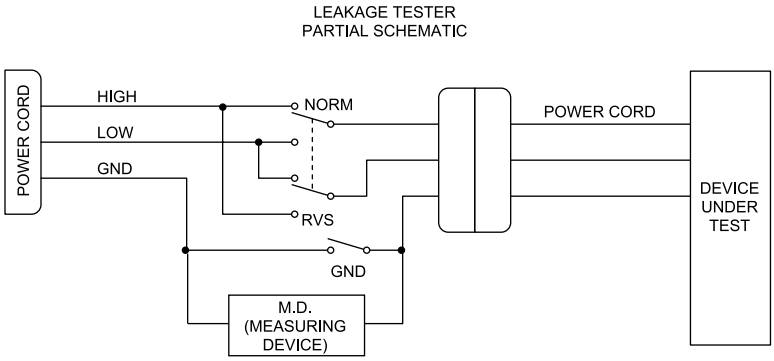

NOTE

The MD (measuring device) is the circuitry defined by the appropriate standard for measuring leakage current.

The measuring devices, defined by various standard organizations (IEC, UL, etc.), produce almost identical test measurement results.

Enclosure Leakage Current Test

Perform this test to measure current leakage through exposed conductive surfaces on the device under test during normal operation.

1. Set the leakage tester switches as follows:
   - GND switch - OPEN,
   - Polarity switch - NORM.
2. Connect a meter lead between the CHAS connector on the rear of the leakage tester and an unpainted, non-anodized chassis ground on the unit under test.
3. Set the leakage tester power switch to ON.
4. Read the current leakage indicated on DMM. If the reading is greater than the appropriate specification below, the device under test fails and should be repaired and tested again.
   - 300 µA (0.3 volts on the DMM), and the device under test is powered from 100-120 V/50-60 Hz
   - 300 µA (0.3 volts on the DMM), and the device under test is powered from a centered-tapped 200-240 V/50-60 Hz, single phase circuit
   - 500 µA (0.5 volts on the DMM), and the device under test is powered from a non-center-tapped, 200-240 V/50-60 Hz, single-phase circuit

NOTE

Center-tapped and non-center-tapped circuits produce different leakage currents and the UL and IEC limits are different.

5. Set the polarity switch to RVS and observe the same meter readings as in the previous step.
6. Set the GND switch on the leakage tester to CLOSED.
7. Read the current leakage indicated on DMM. If the reading is greater than the appropriate specification below, and the device under test is powered from 100-240 V/50-60 Hz, the device under test fails and should be repaired and tested again.
   - 100 microamperes (0.1 volts on the DMM), and the device under test is powered from 100-240 V/50-60 Hz
8. Set the polarity switch to RVS and observe the same meter readings as in the previous step.
9. Set the leakage tester power switch to OFF and remove the meter lead connected in step 2.

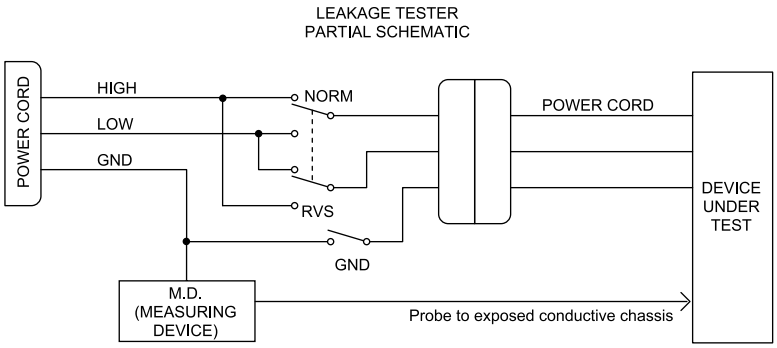

Tram-rac 4A Housing Service Kits

The following part lists are given for ordering purposes. These kits are available to aid troubleshooting by swapping a suspect component.

NOTE

When ordering these kits, note that each kit contains only the latest revision of the PCB assemblies. Contact Service—Tech Support to verify if the latest revision is compatible with your system.

PN 2006853-001

This kit can be ordered as an aid to troubleshooting a Tram-rac 4A chassis without a power supply.

Table 7. Tram-rac 4A Service Kit

Description	Part Number	Qty
Tram-rac4A Processor Acquisition PCB	2004288-001	1
Tram-rac4A Interface PCB	800516-001	1

PN 2006854-001

This kit can be ordered as an aid to troubleshooting a Tram-rac 4A chassis with a power supply.

Table 8. Tram-rac 4A w/Power Supply Service Kit

Description	Part Number	Qty
Tram-rac4A Processor Acquisition PCB	2004288-001	1
Tram-rac4A Interface PCB	800516-002	1
Tram-rac 4A Power Supply	6123-211	1

PN 2006855-001(Repair Kit–3-to-2 Board Conversion)

This kit can be ordered to repair an older Tram-rac 4A (with the gold plate below the module slots). Use this kit to repair an older Tram-rac 4A if the 800514 or the 800518 PCBs are damaged. The 2004288 PCB replaces the functions on the two older PCB assemblies. The new light pipe and silver bottom plate allow for the front bezel LED to be visible.

Table 9. Tram-rac 4A Repair Kit–3-to-2 Board Conversion

Description	Part Number	Qty
Tram-rac4A Processor Acquisition PCB	2004288-001	1
Tram-rac4A Power Light Pipe	2004496-001	1
Tram-rac 4A Bottom Cover	400766-004	1
Grommet, Non-metallic, 3/16 inch ID	2006427-001	1
CD, Service Manual	2002029-025	1

Accessories

You can order the following accessories from GE Medical Systems *Information Technologies* (see "Solar 7000/8000 Monitor Connection" on page 2-6, "Solar 8000M Monitor Connection" on page 2-7, or "Tramscope Monitor Connection" on page 2-8 for cable placement.):

Table 10. Tram-rac Accessories

	Item	Description	Part Number
A	Cables for Tram-rac 4A *without* HUB interconnects (**Solar 8000M**); 9-pin to 9-pin	1.2 meter (4 foot) cable; CPU to Tram-rac	700520-001
		3 meter (10 foot) cable; CPU to Tram-rac	700520-002
		4.5 meter (15 foot) cable; CPU to Tram-rac	700520-003
		7.5 meter (25 foot) cable; CPU to Tram-rac	700520-004
	Cables for Tram-rac 4A *without* HUB interconnects (**Solar 7000/8000, Tramscope**); 9-pin to 25-pin	1 meter (3.5 foot) cable; CPU to Tram-rac	409753-001
		2.4 meter (8 foot) cable; CPU to Tram-rac	409753-002
		6 meter (20 foot) cable; CPU to Tram-rac	409753-003
		9.1 meter (30 foot) cable; CPU to Tram-rac	409753-004
	NOTE Cable lengths less than 6 meters (20 feet) do not require a Tram-rac with a power supply.		
B	Cables for Tram-rac 4A *with* HUB interconnects (connects a Tram-rac 4A to a hub).	1.2 meter (4 foot) cable; HUB to Tram-rac	409752-001
		3 meter (10 foot) cable; HUB to Tram-rac	409752-002
		4.5 meter (15 foot) cable; HUB to Tram-rac	409752-003
C	Daisy-chain Cables to connect a Tram-rac 4A to a Tram-rac 4A; 9-pin to 9-pin.	0.3 meter (1 foot)	411090-001
		0.5 meter (1.5 foot)	411090-002
		0.8 meter (2.5 foot)	411090-003
D	Tram-net HUB (Not used with Solar 8000M)	Connects the patient monitor to multiple peripheral devices. Hub only.	409754-001
	Tram-net HUB (Not used with Solar 8000M)	Connects the patient monitor to multiple peripheral devices. Hub with mounting hardware.	410217-001
--	Analog Output Cable for Tram-rac 4A	Includes instruction sheet	411170-001
--	Un-terminated Defib Sync Cable	4.5 meter (15 foot) cable	403936-001
--	Extension Cables for Tram-rac 4A *without* HUB	30.4 meter (100 foot) cable; CPU to 409753-001 cable.	700164-001
		60.9 meter (200 foot) cable; CPU to 409753-001 cable.	700164-002
	Extension Cables for Tram-rac 4A *with* HUB	30.4 meter (100 foot) cable; CPU to 409753-001 cable.	700159-001
		60.9 meter (200 foot) cable; CPU to 409753-001 cable.	700159-002
	NOTE ■ Can be pulled through conduit; one end must be terminated in the field. Requires pn409753-001 cable to connect to the Tram-rac 4A to the power supply. ■ Cost of labor is extra if the cables are *not* included with the original equipment purchase.		

Repair Log

Unit Serial Number: Institution Name:		
Date	**Maintenance/Repair**	**Technician**

Unit Serial Number:
Institution Name:

Date	Maintenance/Repair	Technician

For your notes

4 Troubleshooting

For your notes

Controlling Electrostatic Discharge Damage

All components of the Tram Critical Care Monitoring System make extensive use of CMOS components. CMOS components are used because they are more immune to noise and consume less power than standard TTL or NMOS components. However, by their nature CMOS components are more vulnerable to electrostatic discharge (ESD) damage than other semiconductors.

ESD damage, usually a subtle weakening of semiconductor junctions, can range from corruption of digital memory to catastrophic failure, rendering a component or a number of components permanently unusable. Although it is more common for CMOS components to fail from ESD damage, no semiconductor device is completely safe from ESD damage.

The inputs and outputs of all of the components are protected from ESD damage, so they are no more susceptible to ESD damage during normal operation than any other device. However, when you service components, you expose the components to several sources of static electricity, ranging from human hands to improperly grounded test equipment. For this reason, it is recommended that all service workstations be as static-free as possible.

Guidelines

The following guidelines can help make your workstation more resistant to the damage that can be caused by static electricity.

- Discharge any static charge you may have built up before handling semiconductors or assemblies containing semiconductors.
- A grounded, antistatic wristband or heelstrap should be worn at all times when repairing assemblies containing semiconductors.
- Use only properly grounded soldering and test equipment.
- Use a static-free surface when working on assemblies containing semiconductors.
- Do NOT remove semiconductors or assemblies containing semiconductors from antistatic containers (bags) until needed.
- Make sure power to an assembly is turned off before removing or inserting a semiconductor.
- Do NOT slide semiconductors or assemblies containing semiconductors across any surface.
- Do NOT touch semiconductor leads unless absolutely necessary.
- Semiconductors and assemblies containing semiconductors should be stored only in antistatic bags or boxes.

Wall Receptacle Check

The Tram-rac chassis power supply requires a 120-V, 50/60-Hz main supply. (240 V may be required for international systems.)

Using a multimeter, confirm that the AC outlet is wired properly. This consists of two steps:

1. Measure the voltage between the three connections in the outlet and
2. Measure the ground-neutral loop resistance.

A standard 120-VAC/240-VAC outlet consists of three connections:

- Line,
- Neutral, and
- Ground.

Line and neutral are the rectangular openings with neutral being the wider of the two. Ground is the third opening and is either round or horseshoe shaped.

Measure Voltages

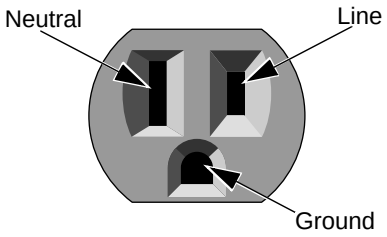

Select the AC voltage scale on the multimeter. Measure the voltage from line to neutral, line to ground, and neutral to ground. A correctly wired should have these readings:

- Line to neutral: 120 VAC or 240 VAC
- Line to ground: 120 VAC or 240 VAC
- Neutral to ground: <3 VAC

Readings other than these indicate improper wiring. Have the outlet checked by a qualified electrician.

Ground-Neutral Loop Resistance Check

After you have confirmed that the wiring is correct, measure the ground-neutral loop resistance.

CAUTION
Do NOT check the ground-neutral loop resistance unless the outlet is wired correctly.

1. Select the milli-ohms scale on the multimeter.
2. Measure across the power cord neutral and ground.
3. Measure from the ground lug at the rear of the Tramscope or Remote Display and any exposed metal (fan guard).

   The resistance between the ground and neutral connections must be less than 100 milli-ohms. If not, have the outlet checked by a qualified electrician.

Check Power Cord

Make sure the power cords being are good. A failure in the power cord, caused by pulling on the cord to disconnect it from the wall outlet, is very common. If in doubt, test for continuity through each wire of the cord.

Check to see that the line, neutral, and ground wires are all connected firmly to the plug and that they are not shorted together. Rewire the plug to correct this problem.

General Fault Isolation

First Things to Ask

If the unit is not working properly, save yourself some time troubleshooting by asking yourself these basic questions:

- Is the power cord connected?
- Is the unit turned ON?
- Does the display LED illuminate?
- Are all the communication cables firmly connected?
- Were there any changes in the use, location, or environment of the equipment that could cause the failure?
- Has the unit been modified in any way, either in software or hardware?
- Is operator error the cause of the problem? Try to repeat the user's scenario exactly and compare that to the proper operation of the equipment. Check the operator's manual as necessary.

Visual Inspection

A thorough visual inspection of the equipment can save time. Small things—disconnected cables, foreign debris on circuit boards, missing hardware, loose components—can frequently cause symptoms and equipment failures that may appear to be unrelated and difficult to track.

Take time to make all the recommended visual checks listed in the visual inspection chart below before starting any detailed troubleshooting procedures.

Table 1. Visual Inspection Chart

Area	Look for the following problems:
I/O Connectors and Cables	■ Fraying or other damage ■ Bent prongs or pins ■ Cracked housing ■ Loose screws in plugs
Fuses	■ Type and rating. Replace as necessary.
Interface Cables	■ Excessive tension or wear ■ Loose connection ■ Strain reliefs out of place
Circuit Boards	■ Moisture, dust, or debris (top and bottom) ■ Loose or missing components ■ Burn damage or smell of over-heated components ■ Socketed components not firmly seated ■ PCB not seated properly in edge connectors ■ Solder problems: cracks, splashes on board, incomplete feedthrough, prior modifications or repairs
Ground Wires/Wiring	■ Loose wires or ground strap connections ■ Faulty wiring ■ Wires pinched or in vulnerable position
Mounting Hardware	■ Loose or missing screws or other hardware, especially fasteners used as connections to ground panes on PCBs
Power Source	■ Faulty wiring, especially AC outlet ■ Circuit not dedicated to system (Power source problems can cause static discharge, resetting problems, and noise.)

WARNING

Solder multilayer and surface mount PCB assemblies at your own risk! Improper repair methods can damage the PCB assemblies even further. Only qualified service personnel with the proper laboratory equipment should attempt to repair PCB assemblies.

Tram-rac 4A LED Troubleshooting Chart

Use the following chart to determine if the Tram-rac 4A is functioning properly. This chart refers to LEDs on the Processor Acquisition PCB. For problems, refer to the appropriate manual for more information about troubleshooting a patient monitor and Tram-rac housing together. Service manuals are listed in Table 2, "Service Documents," on page 1-4.

Table 1. Processor Acquisition PCB Indicators

LED/Color	Signal Name	Function	Condition
DS6/Green	Power Indicator	Proper Operation ■ Visible on Tram-rac 4A front bezel (lower left)	■ On Continuous: normal operation ■ Flashing Quickly (2Hz): ADC Error ■ Flashing Slowly (0.5Hz): watchdog timeouts ■ LED Off: power off, supply fault, RAC FPGA configuration fault
DS5/Red	Network Activity	I hear talking on TRAM-net	■ On mostly steady: TRAM-RAC connected ■ Flickers low: TRAM-net not connected(I hear myself talk)
DS4/Green	Transmit Enable	I am talking on TRAM-net	■ Flickers occasionally: when talking ■ On continuous: while graphing
DS3/Yellow	Error Detect	I detect an error on this PCB	■ Off: normal operation
DS2/Red	RAC COMM 80C152	COMM Processor is OK	■ Flashes with DS1 (twice per second): normal operation
DS1/Red	RAC DAS 80C31	DAS Processor is OK	■ Flashes with DS2 (twice per second): normal operation

NOTE

[1]"I hear talking on my TRAM-net" LED flashes:

- with the "I am talking on TRAM-net" LED and
- alone when someone else is talking.

5 Tram-rac 4A Housing

For your notes

Theory of Operation

Overview

The Tram-rac 4A housing is a housing for a Tram module and two additional discrete parameter modules or no Tram module and four discrete parameter modules. It connects the modules with the patient monitor via the Tram-net communication network.

The light-emitting diode (LED) on the front bezel is used as an indicator of proper operation. It normally illuminates to indicate power is applied, but it may be disabled under microprocessor control.

The Tram-net hub connector at the rear of the Tram-rac 4A housing is for daisy-chaining multiple Tram-rac housings. The analog output connector provided at the rear of the Tram-rac 4A housing allows access to analog outputs from all modules.

Top Level Block Diagram

Below is the top level block diagram for the Tram-rac 4A housing with and without the optional power supply.

- PN 900031-006 uses a different Tram-rac4A interface PCB assembly and has a connection for an additional power supply.
- PN 900031-005 does not have a connection for a power supply.

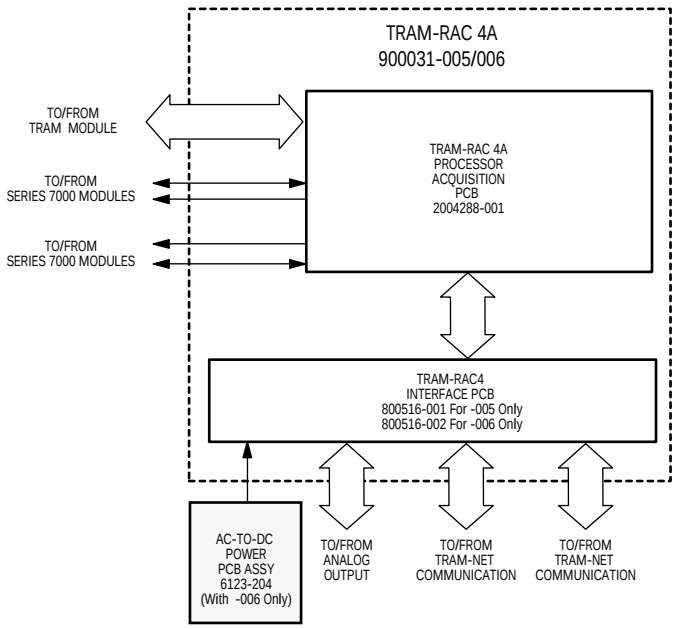

The following paragraphs describe the basic functions of the Tram-rac 4A housing

Patient Data Acquisition

From each of the four discrete parameter module slots, two channels of analog patient signals are acquired. Digital patient data is acquired using the discrete parameter synchronous serial (shift-register) communication interface. As analog and digital data is collected, it is packaged and sent to other devices using the Tram-net communication network.

The Tram module does not use discrete parameter synchronous serial communication, but communicates directly on the Tram-net communication network without intervention by any of the Tram-rac processors.

Two channels of analog data from each of the module slots are sampled 240 times a second. The analog data is converted to digital data with an input range of ±10.0V and a resolution of 12 bits (4.9 mV). The offset of the analog acquisition circuitry is adjusted continuously by RAC 4A hardware. The data acquisition bandwidth and system accuracy is determined by the specific module used.

Analog Output Signals

A total of 13 software dependent analog output signals are provided. Eight analog outputs are generated by the data acquisition microprocessor which typically reproduces the eight analog data input channels from the modules slot. The eight analog outputs are buffered so that cables up to 6000 feet long may be driven. The maximum analog output gain error is ±2% and the offset error (zero-level error) is typically less than ±18 mV (±40 mV maximum).

Five of the analog outputs are generated by the Tram module used in the Tram-rac 4A housing. Two special analog outputs (typically BP3 and BP4 signals) are provided from the second slot to accommodate a Tram module; otherwise all slots are equivalent. Three more analog signals (typically ECG I, ECG II, and ECG V signals) are sent to all slots, so take care that only one module sources these signals.

All invasive blood pressure signals are produced at a 24.415mV/mm Hg scale, regardless of whether they are acquired by the Tram or discrete parameter module. Scaling and zero-level offset is accomplished by the data acquisition microprocessor software.

When you use a discrete parameter blood pressure input module, the blood pressure zero-level offset has a range of ±150 mm Hg. The 6-dB bandwidth of the analog output circuitry in the Tram-rac 4A housing is 120Hz.

Data Communication

Communication of patient data to other devices within the bedside care area occurs with a patient monitor using the Tram-net communication network. The Tram-rac 4A housing contains an intermediate internal Tram-net hub that gives access to the Tram-rac 4 processor, each of the four module slots, and one external Tram-net device such as a remote control, Tram-net interface adapter, or another Tram-rac housing.

Optional Power Supply

You can have the Tram-rac 4A housing equipped with a power supply for applications where one or more of the following conditions apply:

- The Tram-rac 4A housing is located more than 20 feet from the monitor;
- The Tram-rac 4A housing is operating in an environment with high electrical noise;
- Another Tram-rac housing without a power supply is already connected to the monitor; or
- The power supply capability has been exceeded for another reason.

Block Diagram of Control Signals

This block diagram presents the signals paths between the two circuit boards inside the Tram-rac 4A housing. For more detailed information, refer to the theory of operation for each PCB presented below.

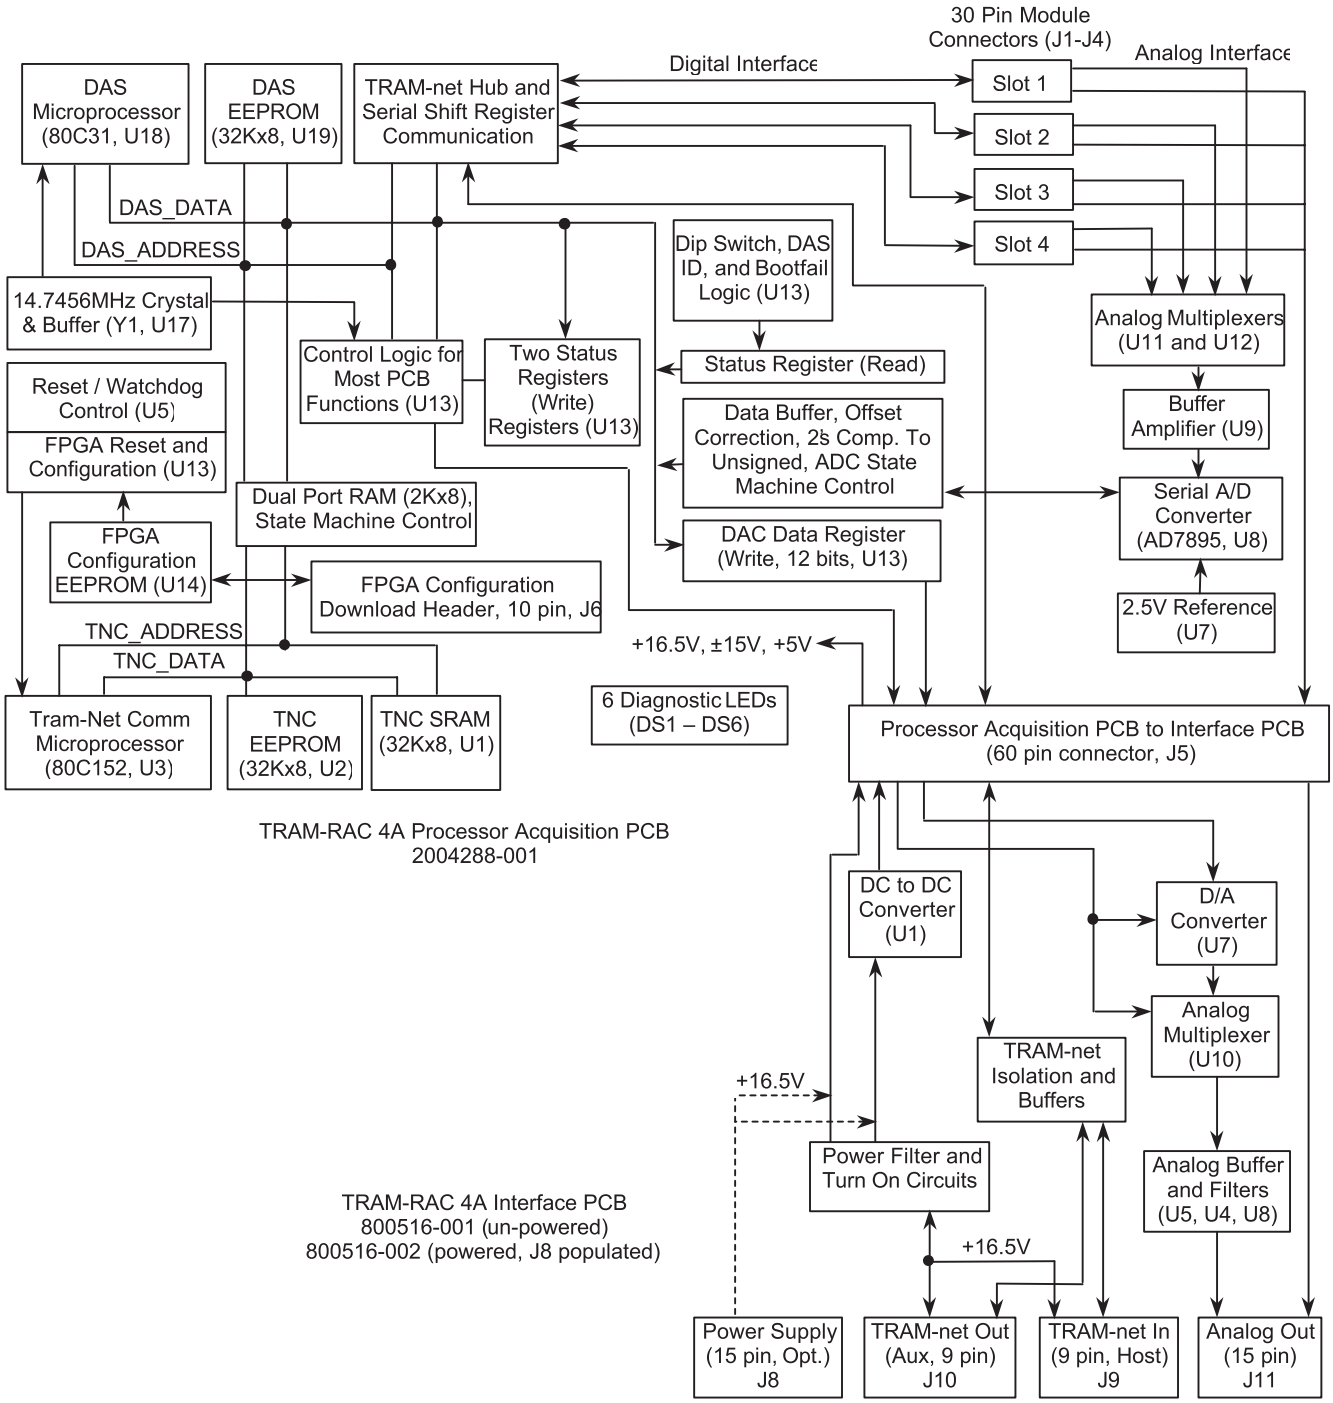
30 Pin Module Connectors (J1-J4)
Digital Interface
Analog Interface
DAS Microprocessor (80C31, U18)
DAS EEPROM (32Kx8, U19)
TRAM-net Hub and Serial Shift Register Communication
Slot 1
Slot 2
Slot 3
Slot 4
DAS_DATA
DAS_ADDRESS
Dip Switch, DAS ID, and Bootfail Logic (U13)
14.7456MHz Crystal & Buffer (Y1, U17)
Analog Multiplexers (U11 and U12)
Control Logic for Most PCB Functions (U13)
Two Status Registers (Write) Registers (U13)
Status Register (Read)
Reset / Watchdog Control (U5)
FPGA Reset and Configuration (U13)
Data Buffer, Offset Correction, 2's Comp. To Unsigned, ADC State Machine Control
Buffer Amplifier (U9)
Dual Port RAM (2Kx8), State Machine Control
Serial A/D Converter (AD7895, U8)
FPGA Configuration EEPROM (U14)
FPGA Configuration Download Header, 10 pin, J6
DAC Data Register (Write, 12 bits, U13)
2.5V Reference (U7)
TNC_ADDRESS
TNC_DATA
+16.5V, ±15V, +5V
6 Diagnostic LEDs (DS1 – DS6)
Tram-Net Comm Microprocessor (80C152, U3)
TNC EEPROM (32Kx8, U2)
TNC SRAM (32Kx8, U1)
Processor Acquisition PCB to Interface PCB (60 pin connector, J5)
TRAM-RAC 4A Processor Acquisition PCB
2004288-001
DC to DC Converter (U1)
D/A Converter (U7)
Analog Multiplexer (U10)
TRAM-net Isolation and Buffers
+16.5V
Power Filter and Turn On Circuits
Analog Buffer and Filters (U5, U4, U8)
TRAM-RAC 4A Interface PCB
800516-001 (un-powered)
800516-002 (powered, J8 populated)
+16.5V
Power Supply (15 pin, Opt.) J8
TRAM-net Out (Aux, 9 pin) J10
TRAM-net In (9 pin, Host) J9
Analog Out (15 pin) J11

Indicators and Controls

Listed below is the function of the LED located on the Tram-rac 4A housing. There are no other controls or switches and no calibration procedures. For details on indicator functions, see "Tram-rac 4A LED Troubleshooting Chart" on page 4-8 or "Indicators and Controls" on page 6-10.

Table 1. LED Function

LED/Color	Signal Name	Function	Normal Condition
Green	Power Indicator	Indicator of proper operation.	ON when power applied

Interconnection Diagram PN 900031

1 of 2

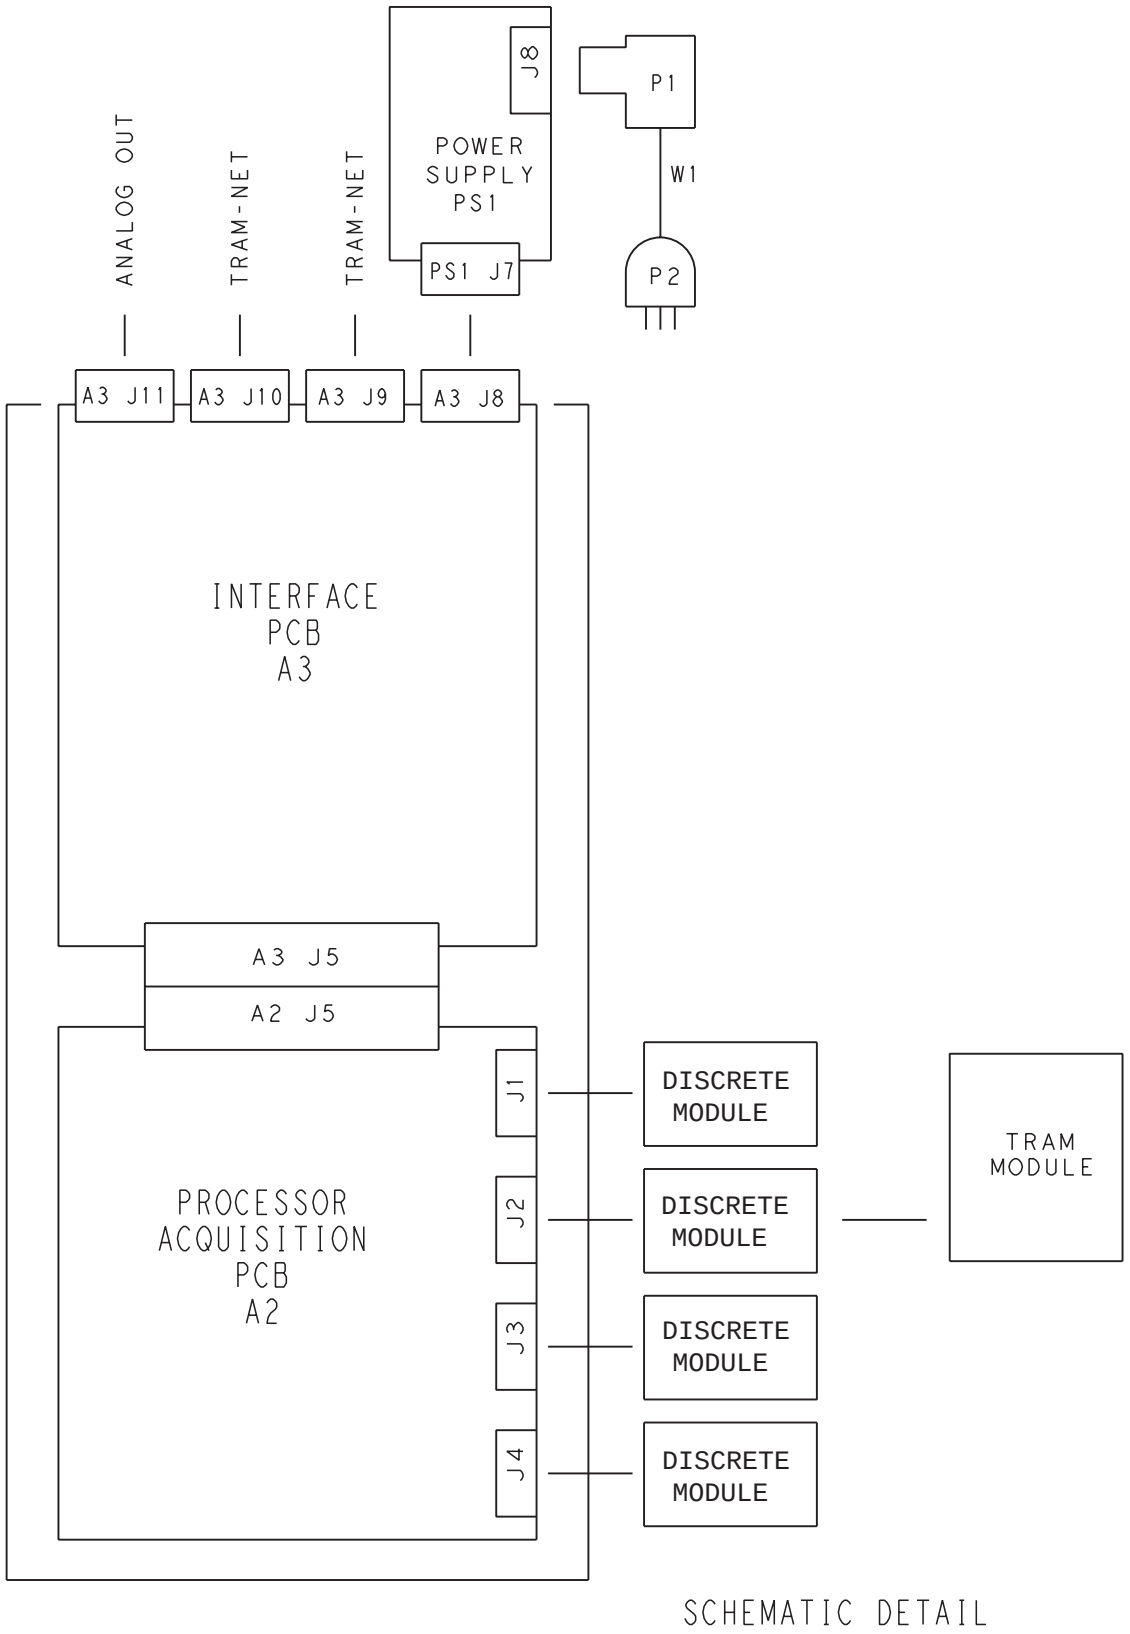

2 of 2

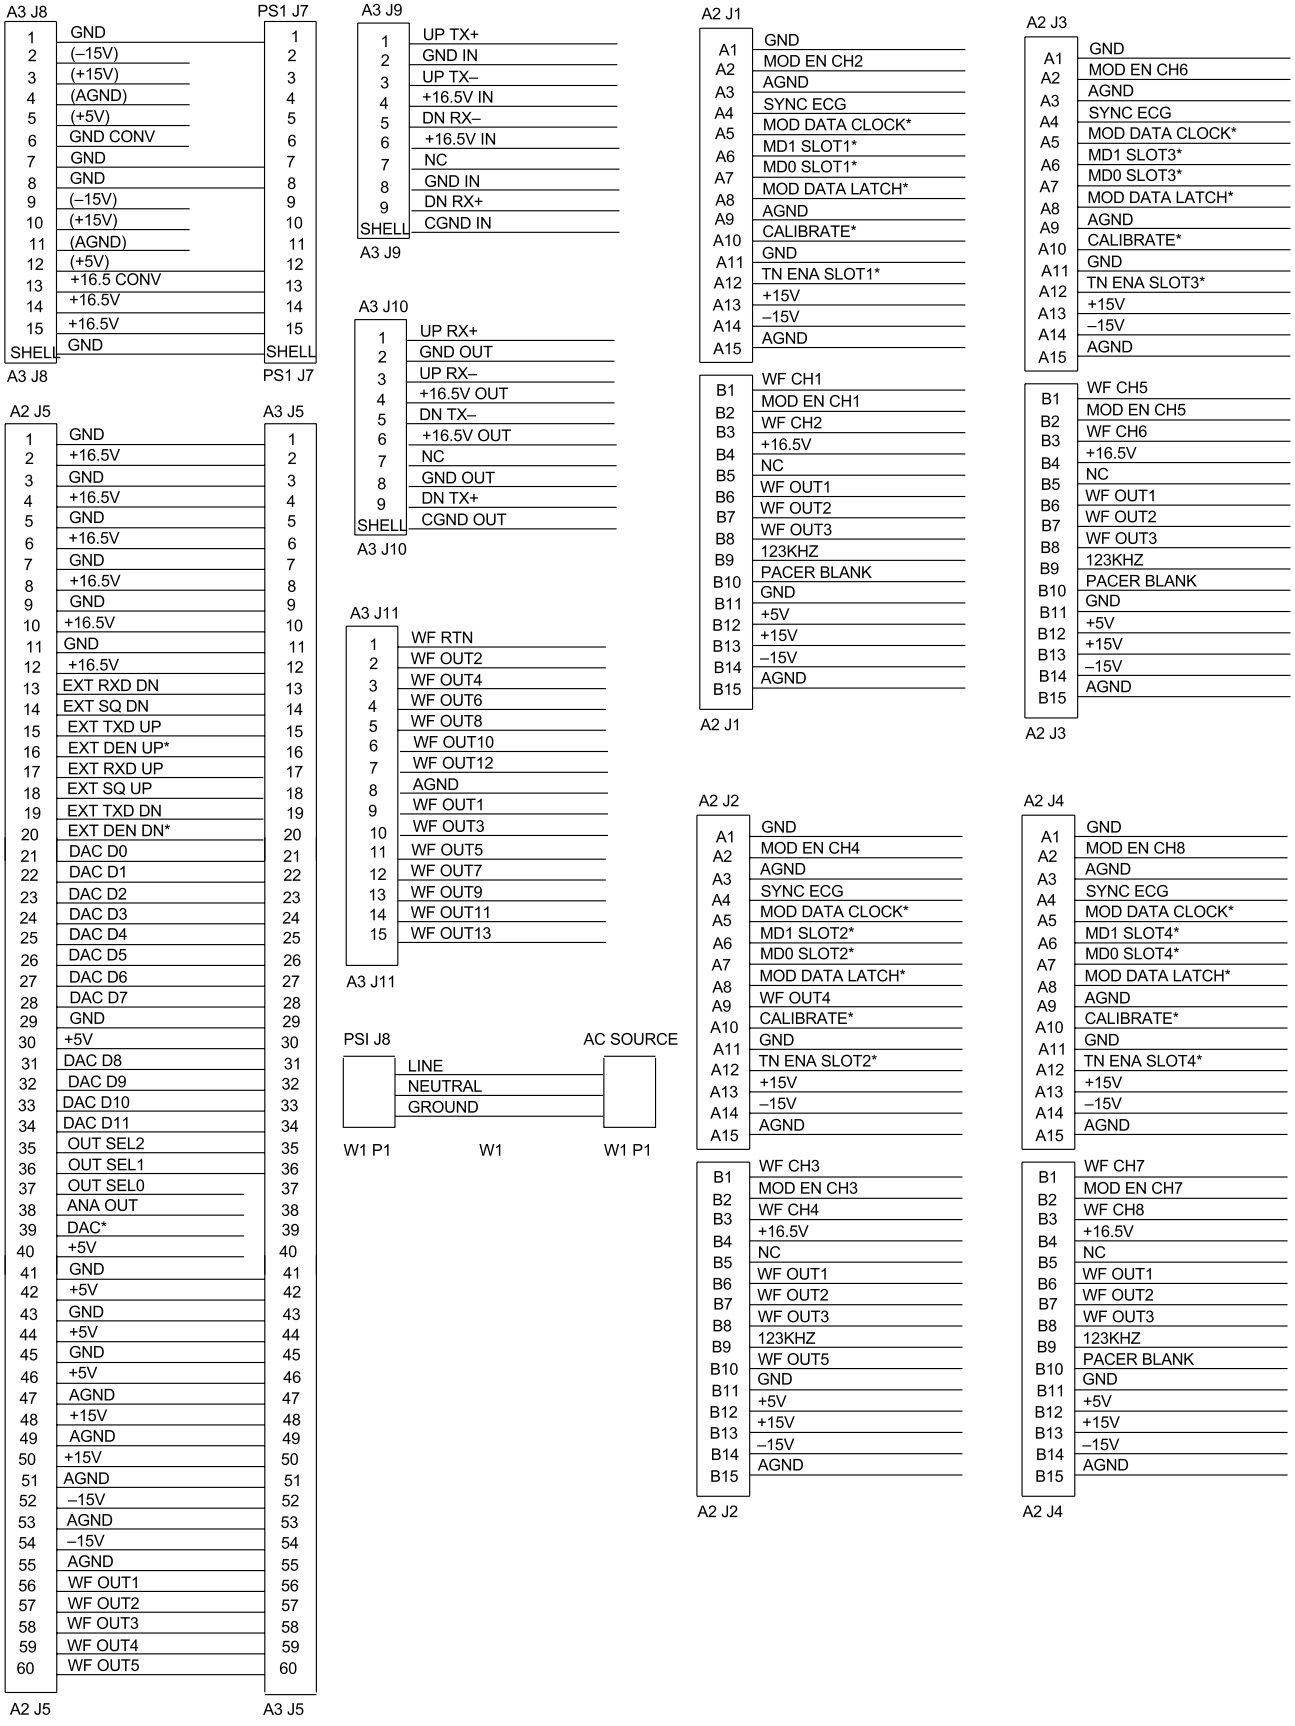
A3 J8
1 GND
2 (–15V)
3 (+15V)
4 (AGND)
5 (+5V)
6 GND CONV
7 GND
8 GND
9 (–15V)
10 (+15V)
11 (AGND)
12 (+5V)
13 +16.5 CONV
14 +16.5V
15 +16.5V
SHELL GND
A3 J8
PS1 J7
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 SHELL
PS1 J7
A3 J9
1 UP TX+
2 GND IN
3 UP TX–
4 +16.5V IN
5 DN RX–
6 +16.5V IN
7 NC
8 GND IN
9 DN RX+
SHELL CGND IN
A3 J9
A3 J10
1 UP RX+
2 GND OUT
3 UP RX–
4 +16.5V OUT
5 DN TX–
6 +16.5V OUT
7 NC
8 GND OUT
9 DN TX+
SHELL CGND OUT
A3 J10
A3 J11
1 WF RTN
2 WF OUT2
3 WF OUT4
4 WF OUT6
5 WF OUT8
6 WF OUT10
7 WF OUT12
8 AGND
9 WF OUT1
10 WF OUT3
11 WF OUT5
12 WF OUT7
13 WF OUT9
14 WF OUT11
15 WF OUT13
A3 J11
A2 J1
A1 GND
A2 MOD EN CH2
A3 AGND
A4 SYNC ECG
A5 MOD DATA CLOCK*
A6 MD1 SLOT1*
A7 MD0 SLOT1*
A8 MOD DATA LATCH*
A9 AGND
A10 CALIBRATE*
A11 GND
A12 TN ENA SLOT1*
A13 +15V
A14 –15V
A15 AGND
B1 WF CH1
B2 MOD EN CH1
B3 WF CH2
B4 +16.5V
B5 NC
B6 WF OUT1
B7 WF OUT2
B8 WF OUT3
B9 123KHZ
B10 PACER BLANK
B11 GND
B12 +5V
B13 +15V
B14 –15V
B15 AGND
A2 J1
A2 J3
A1 GND
A2 MOD EN CH6
A3 AGND
A4 SYNC ECG
A5 MOD DATA CLOCK*
A6 MD1 SLOT3*
A7 MD0 SLOT3*
A8 MOD DATA LATCH*
A9 AGND
A10 CALIBRATE*
A11 GND
A12 TN ENA SLOT3*
A13 +15V
A14 –15V
A15 AGND
B1 WF CH5
B2 MOD EN CH5
B3 WF CH6
B4 +16.5V
B5 NC
B6 WF OUT1
B7 WF OUT2
B8 WF OUT3
B9 123KHZ
B10 PACER BLANK
B11 GND
B12 +5V
B13 +15V
B14 –15V
B15 AGND
A2 J3
A2 J2
A1 GND
A2 MOD EN CH4
A3 AGND
A4 SYNC ECG
A5 MOD DATA CLOCK*
A6 MD1 SLOT2*
A7 MD0 SLOT2*
A8 MOD DATA LATCH*
A9 WF OUT4
A10 CALIBRATE*
A11 GND
A12 TN ENA SLOT2*
A13 +15V
A14 –15V
A15 AGND
B1 WF CH3
B2 MOD EN CH3
B3 WF CH4
B4 +16.5V
B5 NC
B6 WF OUT1
B7 WF OUT2
B8 WF OUT3
B9 123KHZ
B10 WF OUT5
B11 GND
B12 +5V
B13 +15V
B14 –15V
B15 AGND
A2 J2
A2 J4
A1 GND
A2 MOD EN CH8
A3 AGND
A4 SYNC ECG
A5 MOD DATA CLOCK*
A6 MD1 SLOT4*
A7 MD0 SLOT4*
A8 MOD DATA LATCH*
A9 AGND
A10 CALIBRATE*
A11 GND
A12 TN ENA SLOT4*
A13 +15V
A14 –15V
A15 AGND
B1 WF CH7
B2 MOD EN CH7
B3 WF CH8
B4 +16.5V
B5 NC
B6 WF OUT1
B7 WF OUT2
B8 WF OUT3
B9 123KHZ
B10 PACER BLANK
B11 GND
B12 +5V
B13 +15V
B14 –15V
B15 AGND
A2 J4
A2 J5
1 GND
2 +16.5V
3 GND
4 +16.5V
5 GND
6 +16.5V
7 GND
8 +16.5V
9 GND
10 +16.5V
11 GND
12 +16.5V
13 EXT RXD DN
14 EXT SQ DN
15 EXT TXD UP
16 EXT DEN UP*
17 EXT RXD UP
18 EXT SQ UP
19 EXT TXD DN
20 EXT DEN DN*
21 DAC D0
22 DAC D1
23 DAC D2
24 DAC D3
25 DAC D4
26 DAC D5
27 DAC D6
28 DAC D7
29 GND
30 +5V
31 DAC D8
32 DAC D9
33 DAC D10
34 DAC D11
35 OUT SEL2
36 OUT SEL1
37 OUT SEL0
38 ANA OUT
39 DAC*
40 +5V
41 GND
42 +5V
43 GND
44 +5V
45 GND
46 +5V
47 AGND
48 +15V
49 AGND
50 +15V
51 AGND
52 –15V
53 AGND
54 –15V
55 AGND
56 WF OUT1
57 WF OUT2
58 WF OUT3
59 WF OUT4
60 WF OUT5
A2 J5
A3 J5
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60
A3 J5
PSI J8
LINE
NEUTRAL
GROUND
AC SOURCE
W1 P1
W1
W1 P1

Input and Output Connectors

The following tables contain all connections to the Tram-rac 4A housing. Each signal includes such information as whether it is an input or output, the nominal voltage range for each signal, the type of signal, and the maximum frequency the signal may have. This is organized by connector.

The Tram-rac 4A provides connectors J1-J4 that correspond to module slots 1-4. The superscript number after the pin number indicates which slot(s) provide the given signal(s). Signal names containing slot numbers 1-4 indicate that the signals to each slot or module connector are independent. Pin numbers listed without a superscript indicate the signal is common to all four module connectors or slots.

Table 2. J1–J4 (30–Pin Connectors to Parameter Module Slots)

Pin	Signal Name	Signal Level	I/O	Signal Description
A1	GND	0V	O	**Ground:** ■ *Analog discrete parameter modules:* reference for the WF_A output. ■ *Tram-series modules:* +16.5V power return.
B1[1-4]	WF_A1-4	Analog +/– 10 V	I	**Waveform Channels A1- 4:** Analog waveforms from channel A slots 1-4. Art or BP1 signal for TRAM-series modules
A2[1-4]	MOD_EN_B1-4	Open Drain 1K 5V pull up	O	**Module Channels B1-4 enable:** This signal is the module enable for channel B slot 1- 4 of the discrete parameter modules. Signal is asserted high to enable the module to communicate via the synchronous serial "shift register" protocol.
B2[1-4]	MOD_EN_A1-4	Open Drain 1K 5V pull up	O	**Module Channels A1- 4 enable:** Signal is the module enable for channel A slots 1- 4 of the discrete parameter modules. This signal is asserted high to enable the module to communicate via the synchronous serial “shift register” protocol.
A3	AGND	0V	O	**Analog Ground:** ■ *Analog discrete parameter modules:* reference for WR_B output. ■ *Tram-series modules:* reference for the SYNC_ECG signal.
B3[1-4]	WF_B1-4	Analog +/- 10 V	I	**Waveform Channels B1- 4:** Analog waveform from channel B slots 1-4. This pin is the BP2 signal for Tram-series modules.
A4	SYNC_ECG	Analog +/- 10 V	I/O	**Sync ECG:** Tram-series modules provide this 10mV/V signal for use by other modules.
B4	+16.5V	+16.5V	O	**+16.5V power output to the modules**
A5	MOD_DATA_ CLOCK*	Open Drain 1K 5V pull up	O	**Module Data Clock:** Signal is the discrete parameter modules data clock used in the synchronous serial "shift register" protocol. The falling edge is used to shift serial data both into and out of the selected module.
B5[1-4]	No Connection	—	—	—

Table 2. J1–J4 (30–Pin Connectors to Parameter Module Slots)				
Pin	**Signal Name**	**Signal Level**	**I/O**	**Signal Description**
A6[1-4]	MDI_SLOT1-4*	5V CMOS (no tri-state)	O	**Module load/Module Data In:** Signal functions as discrete module load, module data input, and Tram-net receive data to the module for slots 1-4. The module load function is used in the synchronous serial "shift register" protocol to pre-load the module's output shift register prior to transferring data out of the module to the Tram-Rac 4A housing. When the "shift register" communication protocol is used, active low binary input data is transferred to the module's input shift register on this signal with the falling edge of the MOD_DATA_CLOCK* signal. When Tram-net communication is used, input data on this signal is Manchester-encoded and does not require a separate clock.
B6	WF_OUT1	Analog +/- 10 V	I/O	**Waveform Output no 1:** The Tram-series modules generate this signal for use by other modules. This signal is also output to the analog output connector. The waveform signal generated is under software control of the Tram module. Typically, this waveform is the ECG lead II signal.
A 7[1-4]	MDO_SLOT1-4*	TTL	I	**Module Data Out:** Signal is the module data output for slots 1-4. When the discrete parameter synchronous serial "shift register" communication protocol is used, active low binary output data is transferred from the module's output shift register on this signal with the falling edge of the module data clock signal. Otherwise, when the Tram-net communication is used, output data on this signal is Manchester-encoded and requires no separate clock.
B7	WF_OUT2	Analog +/- 10 V	I/O	**Waveform Output no 2:** The Tram-series modules generate this signal for use by other modules. This signal is also output to the analog output connector. The waveform signal generated is under software control of the Tram module. Typically, this waveform is the first displayed trace on the Tramscope monitor.
A8	MOD_DATA_ LATCH*	Open Drain 1K 5V pull up	O	**Module Data Latch:** Signal is the discrete parameter module data latch strobe used in the synchronous serial "shift register" protocol. After eight bits of input data have been shifted into the module using the module data clock, this signal strobes the input data into the module's data latch.
B8	WF_OUT3	Analog +/- 10 V	I/O	**Waveform Output no 3:** The Tram-series modules generate this signal for use by other modules. This signal is also output to the analog output connector. The waveform signal generated is under software control of the Tram module. Typically, this waveform is the ECG lead V signal.
A9[1,3,4]	AGND	0V	O	**Analog Shield Ground:** Discrete parameter modules may use this pin to terminate their shield ground.
A9[2]	WF_OUT4	Analog +/- 10 V	I	**Waveform Output no 4:** The Tram-series modules generate this signal for use by other modules. This signal is also output to the analog output connector. The waveform signal generated is under software control of the Tram module. Typically, this waveform is the BP3 signal.

Table 2. J1–J4 (30–Pin Connectors to Parameter Module Slots)				
Pin	**Signal Name**	**Signal Level**	**I/O**	**Signal Description**
B9	123KHZ	Open Drain 1K 5V pull up	O	**123 kHz Clock:** Signal provided to the modules for the purpose of modulating signals for transfer across the module's isolation barrier using an inductive coupling mechanism.
A10	CALIRATE*	Open Drain 1K 5V pull up	O	**Module Calibrate:** Signal is an active low calibrate control provided to the modules. **NOTE** This function is not currently implemented.
B10[1, 3, 4]	PACER_BLANK	Open Drain 1K 5V pull up	O	**Pacer Blank:** Signal is asserted when a pacemaker spike is detected and provided to a discrete parameter module to indicate that the spike should be rejected. **NOTE** This function is not currently implemented.
B10[2]	WF_OUT5	Analog +/- 10 V	I	**Waveform Output no 5:** The Tram-series modules generate this signal for use by other modules. This signal is also output to the analog output connector. The waveform signal generated is under software control of the Tram module. Typically, this waveform is the BP4 signal.
A11, B11	GND	0V	O	**Ground:** Logic reference and +5V return
A12[1-4]	TN_ENA_ SLOT1-4*	TTL	I	**Tram-net Enable:** Determines whether the module is capable of Tram-net communication, and also indicates to the module that the Tram-Rac 4A housing is capable of supporting Tram-net communication. A low logic level indicates Tram-net capability; a high logic level indicates synchronous serial "shift register" communication support only.
B12	+5V	+5V	O	**+5V digital power**
A13, B13	+15V	+15V	O	**+15V analog power**
A14, A15	–15V	–15V	O	**-15V analog power**
A15, B15	AGND	0V	O	**Analog power return**

Table 3. Connector J8 (15-Pin Connector to Optional Power Supply)				
Pin	**Signal Name**	**Signal Level**	**I/O**	**Signal Description**
1, 7, 8, Shell	GND	0V	I	**GROUND:** Power return for +16.5V supply, and chassis ground reference.
2, 9	-15V	–15V	I	**–15V POWER:** –15 V power.
3, 10	+15V	+15V	I	**+15V POWER:** +15 V power.
4, 11	AGND	0V	I	**ANALOG GROUND:** +5 V, +15 V, and –15 V power return.
5, 12	+5V	+5V	I	**+5V POWER:** +5 V power.
6	GND_CONV	0V	I	**CONVERTER GROUND:** +16.5 V power return for DC/DC converter.
13	+16.5V_CONV	+16.5V	I	**CONVERTER +16.5V POWER:** +16.5 V power for DC/DC converter.
14, 15	+16.5V	+16.5V	I	**+16.5V POWER:** +16.5 V power.

Table 4. Connector J9 (9-Pin Tram-net Connector to Patient Monitor)				
Pin	**Signal Name**	**Signal Level**	**I/O**	**Signal Description**
1	UP_TX+	Differential	O	**TRAM-NET UPWARD PATH NON-INVERTED TRANSMIT:** Non-inverting driver output to the upper-level hub.
2, 8	GND_IN	0V	I	**GROUND IN:** Power return for +16.5V supply into the Tram-rac 4A housing from the upper-level hub.
3	UP_TX-	Differential	O	**TRAM-NET UPWARD PATH INVERTED TRANSMIT:** Inverting driver output to the upper-level hub.
4, 6	+16.5V_IN	+16.5V	I	**+16.6V POWER IN:** +16.5 V power supply into the Tram-rac 4A housing from the upper-level hub.
5	DN_RX–	Differential	I	**TRAM-NET DOWNWARD PATH INVERTED RECEIVE:** Inverting receiver input from the upper-level hub.
7	Not Used			
9	DN_RX+	Differential	I	**TRAM-NET DOWNWARD PATH NON-INVERTED RECEIVE:** Non-inverting receiver input from the upper-level hub.
Shell	CGND_IN	0V	I	**CHASSIS GROUND IN:** Shield ground into the Tram-rac 4A housing from the upper-level hub.

Table 5. Connector J10 (9-Pin Tram-net Connector to Another Tram-net Device)				
Pin	**Signal Name**	**Signal Level**	**I/O**	**Signal Description**
1	UP_RX+	Differential	O	**TRAM-NET UPWARD PATH NON-INVERTED RECEIVE:** Non-inverting receiver input from the lower-level device or hub.
2, 8	GND_OUT	0V	I	**GROUND OUT:** Power return for +16.5V supply from the Tram-rac 4A housing to the lower-level device or hub.
3	UP_RX-	Differential	O	**TRAM-NET UPWARD PATH INVERTED RECEIVE:** Inverting receiver input from the lower-level device or hub.
4, 6	+16.5V_OUT	+16.5V	I	**+16.5V POWER OUT:** +16.5V power supply from the Tram-rac 4A housing to the lower-level device or hub.
5	DN_TX-	Differential	I	**TRAM-NET DOWNWARD PATH INVERTED TRANSMIT:** Inverting transmitter output to the lower-level device or hub.
7	Not Used			
9	DN_TX+	Differential	I	**TRAM-NET DOWNWARD PATH NON-INVERTED TRANSMIT:** Non-inverting transmitter output to the lower-level device or hub.
Shell	CGND_OUT	0V	I	**CHASSIS GROUND OUT:** Shield ground from the Tram-rac 4A housing to the lower-level device or hub.

Table 6. Connector J11 (15-Pin Analog Output Connector)

NOTE

The Tram module must be in the top slot to receive the Tram signals listed below. For dual BP discrete parameter modules, waveform A is from the right connector and waveform B is from the left connector.

NOTE[1]

The superscript number "1" indicates that this signal remains unchanged after entering the Tram-rac 4A housing and is controlled by Tram module software.

NOTE[2]

The superscript number "2" indicates that this signal is generated by the DAC on the interface PCB assembly.

Pin	Signal Name	Signal Level	Type	Signal Description
1	WF_RTN	0V	O	**WAVEFORM RETURN:** Signal return for WF_OUT1 through WF_OUT5.
2	WF_OUT2[1]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 2:** Analog waveform output number 2, typically waveform Tram Trace 1.
3	WF_OUT4[1]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 4:** Analog waveform output number 4, typically waveform Tram BP3 or SPO2.
4	WF_OUT6[2]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 6:** Analog waveform output number 6, slot 1 waveform A.
5	WF_OUT8[2]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 8:** Analog waveform output number 8, slot 2 waveform A or Tram ART 1 or BP1.
6	WF_OUT10[2]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 10:** Analog waveform output number 10, slot 3 waveform A.
7	WF_OUT12[2]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 12:** Analog waveform output number 12, slot 4 waveform A.
8	AGND	0V	O	**ANALOG GROUND:** Signal return for WF_OUT6 through WF_OUT13.
9	WF_OUT1[1]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 1:** Analog waveform output number 1, typically waveform Tram ECG II.
10	WF_OUT3[1]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 3:** Analog waveform output number 3, typically waveform Tram ECG V.
11	WF_OUT5[1]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 5:** Analog waveform output number 5, slot 2 waveform B or Tram BP4 or RESP.
12	WF_OUT7[2]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 7:** Analog waveform output number 7, slot 1 waveform B.
13	WF_OUT9[2]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 9:** Analog waveform output number 9, slot 2 waveform B or Tram BP2 or SPO2.
14	WF_OUT11[2]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 11:** Analog waveform output number 11, slot 3 waveform B.
15	WF_OUT13[2]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 13:** Analog waveform output number 13, slot 4 waveform B.
Shell	CGND	0V	O	**CHASSIS GROUND:** Chassis/shield ground

Exploded View PN 900031-005/006

1 of 5

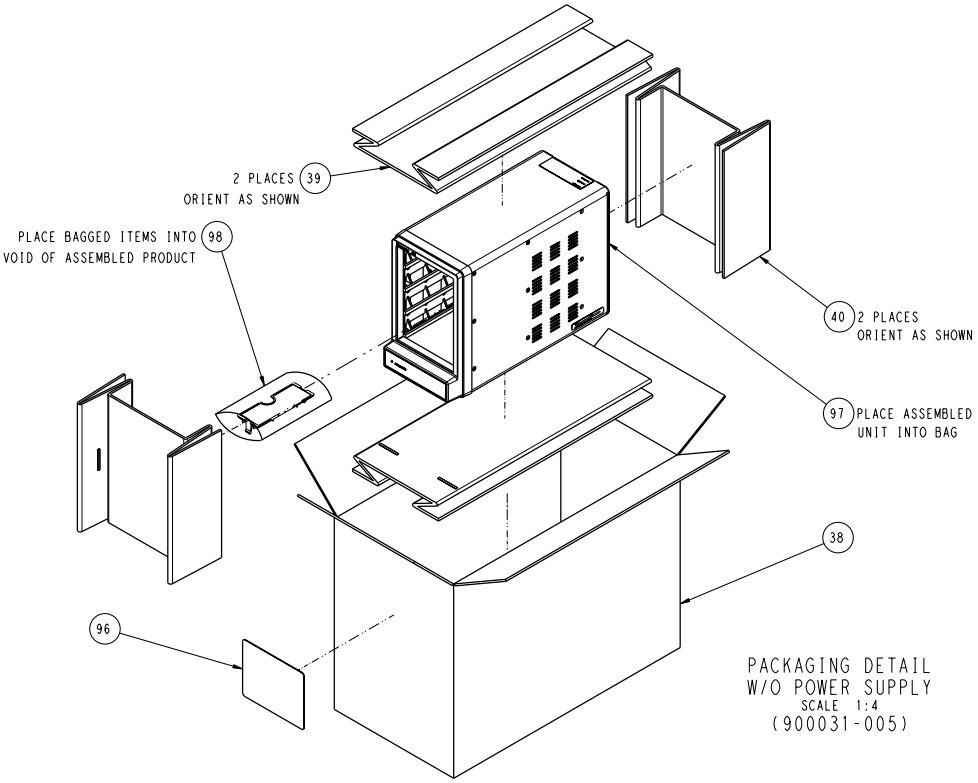

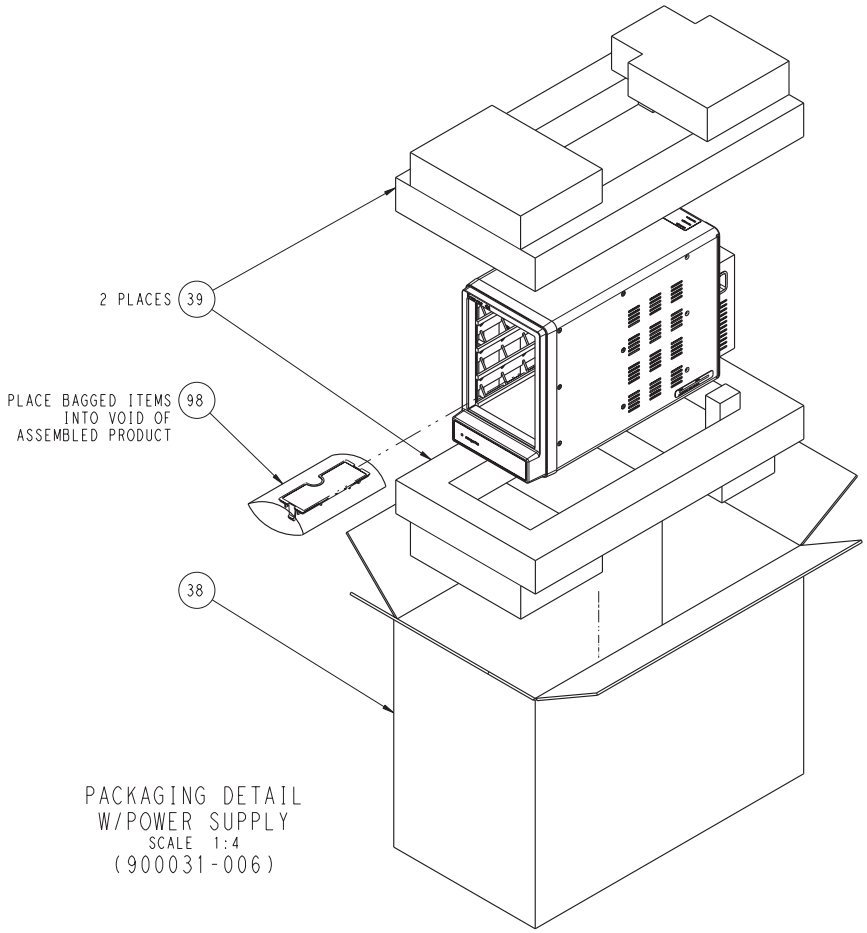

2 of 5

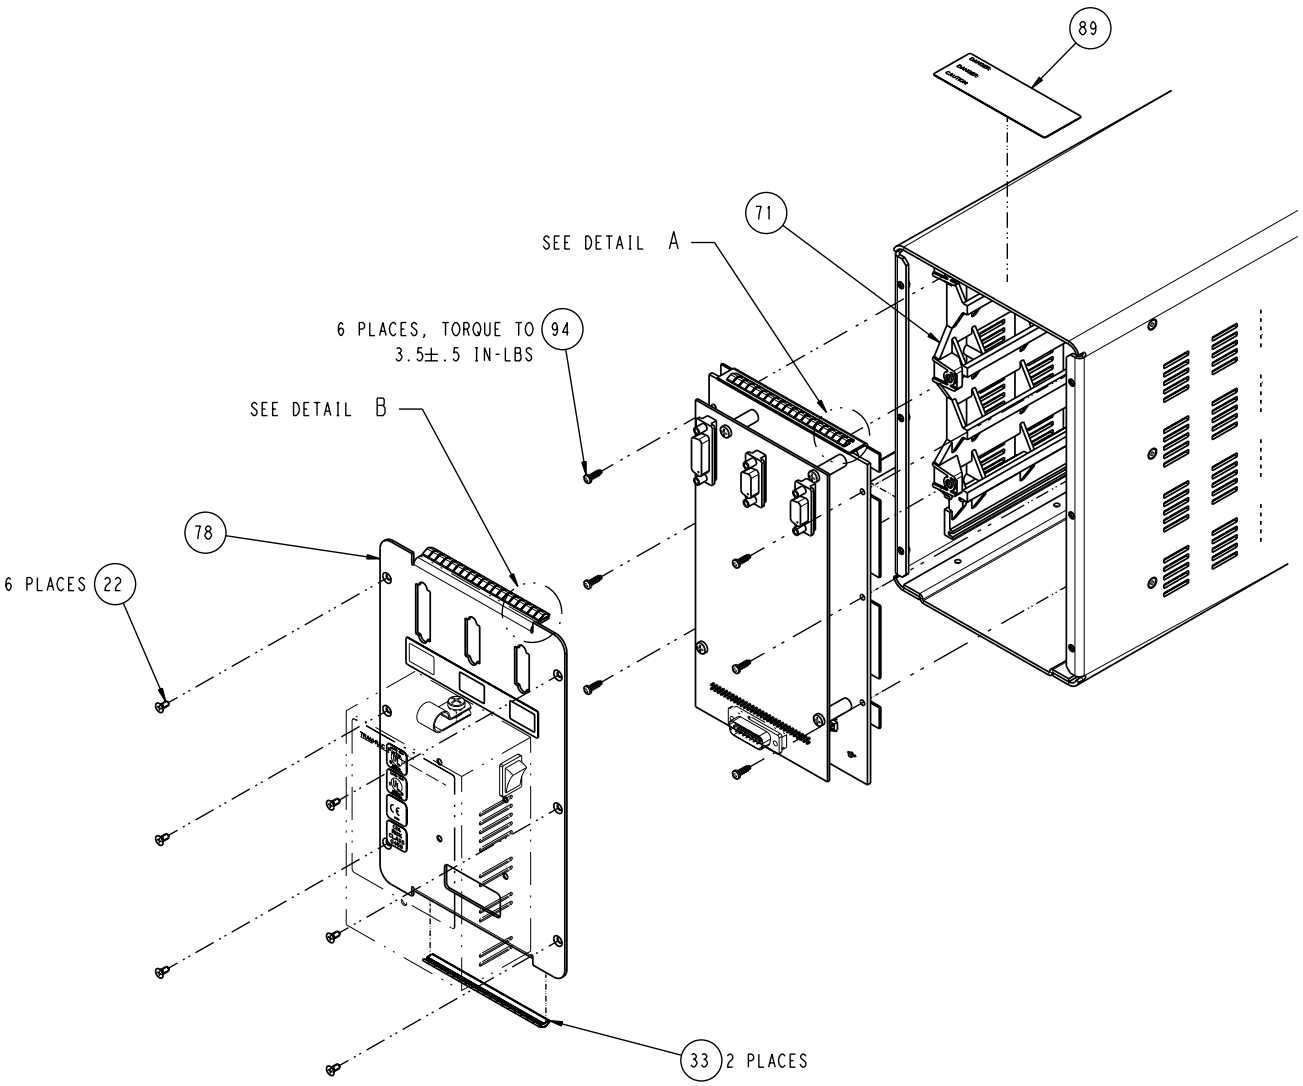
89
71
SEE DETAIL A
6 PLACES, TORQUE TO 3.5±.5 IN-LBS
94
SEE DETAIL B
78
6 PLACES
22
33
2 PLACES

3 of 5

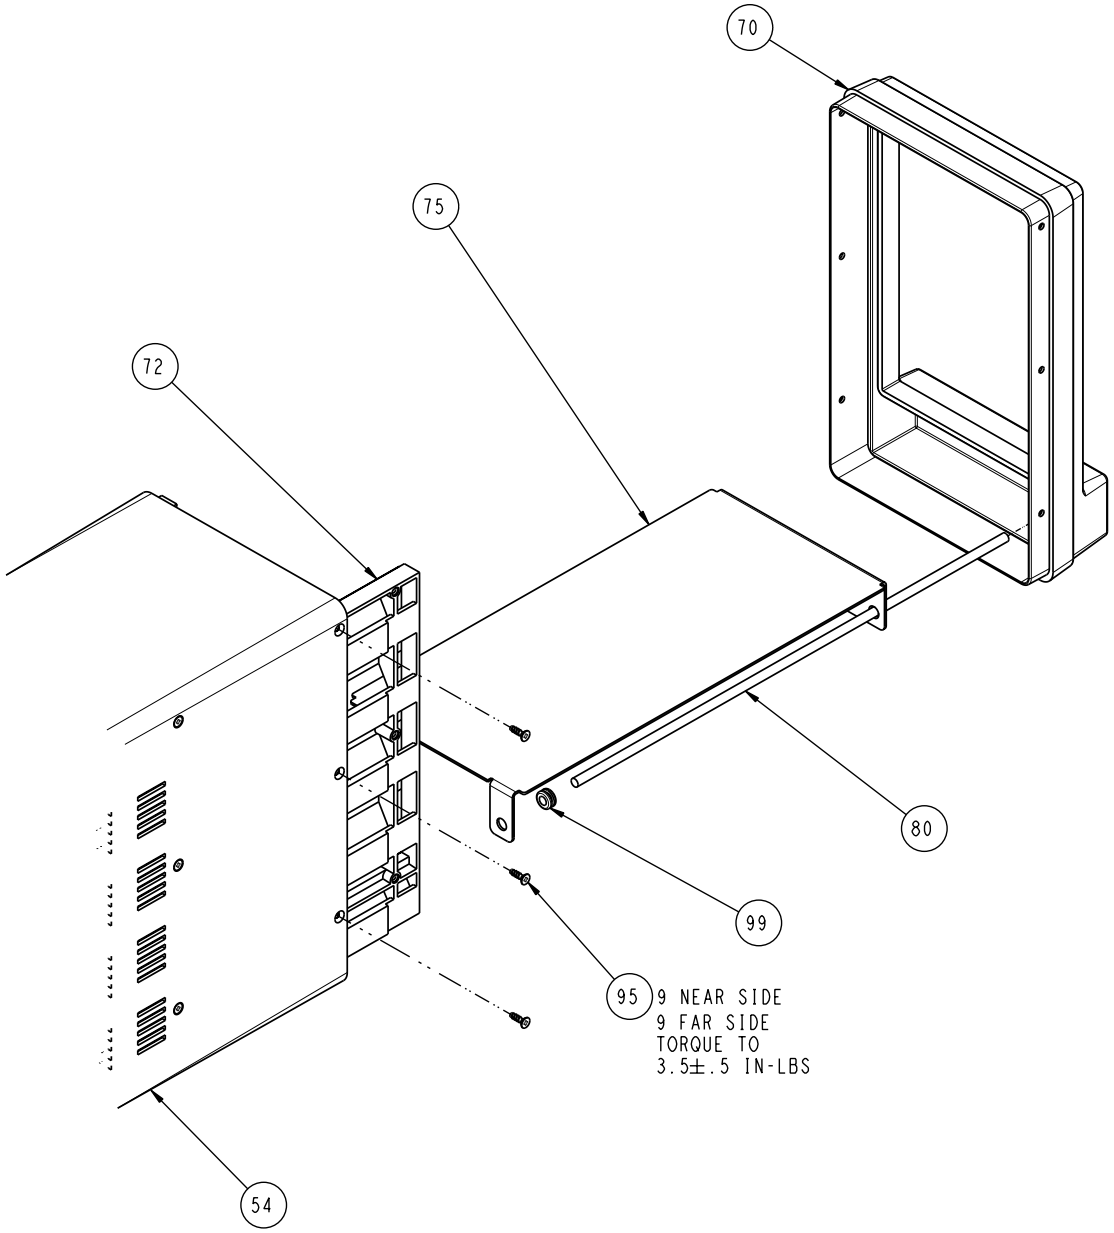

NOTES:

1. FOR -005 UNITS MARK LABEL WITH DESCRIPTION "RAC4A W/O", SERIAL NUMBER AND BAR CODE.
   FOR -006 UNITS MARK LABEL WITH DESCRIPTION "RAC4A", SERIAL NUMBER AND BAR CODE.
2. LOOSE ITEMS MAY BE SHIPPED WITH THE UNIT IF SPACE PERMITS OR PACKAGED AND SHIPPED SEPARATELY.

4 of 5

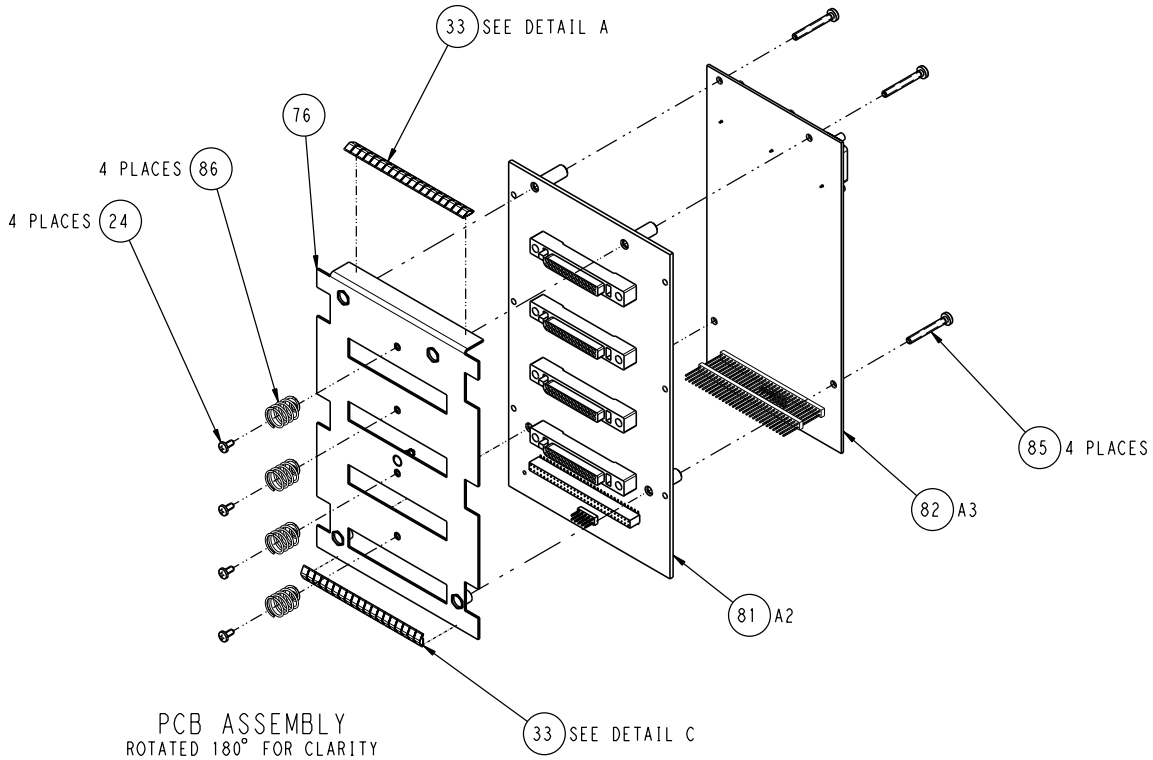

PCB ASSEMBLY
ROTATED 180° FOR CLARITY

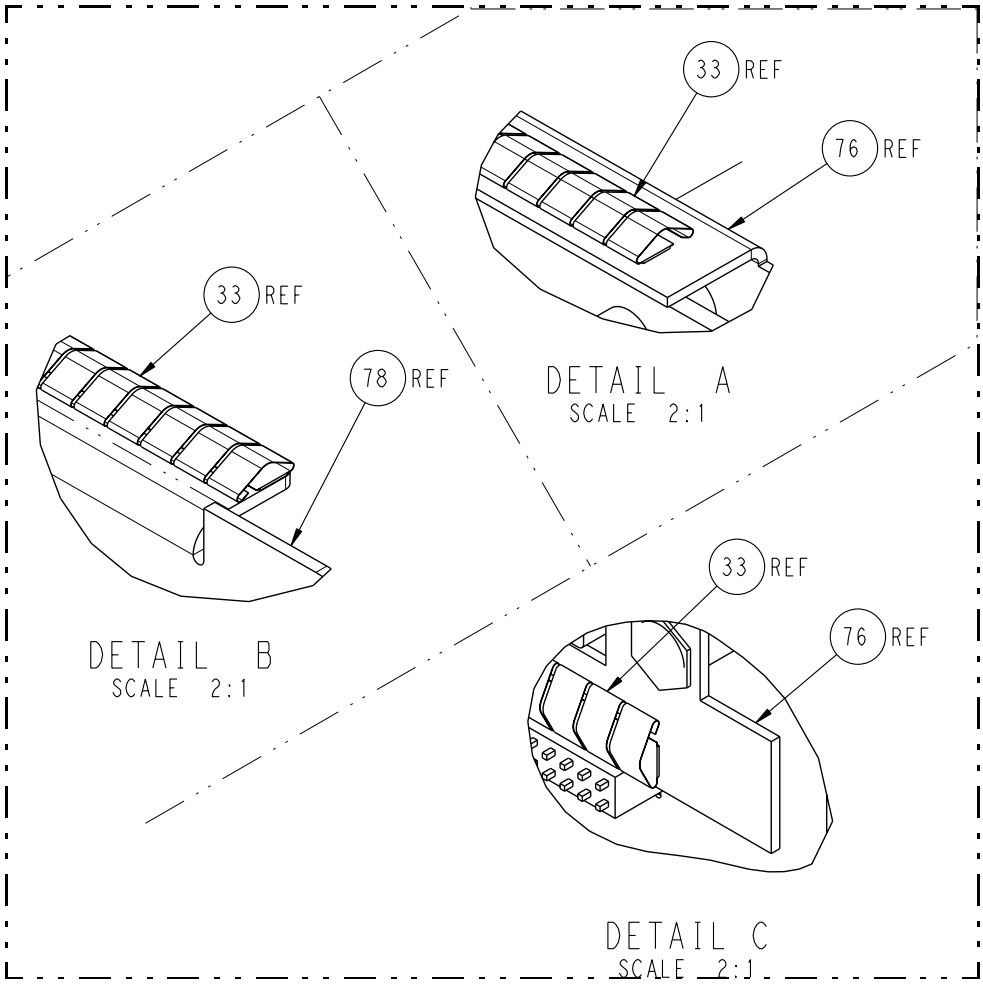

5 of 5

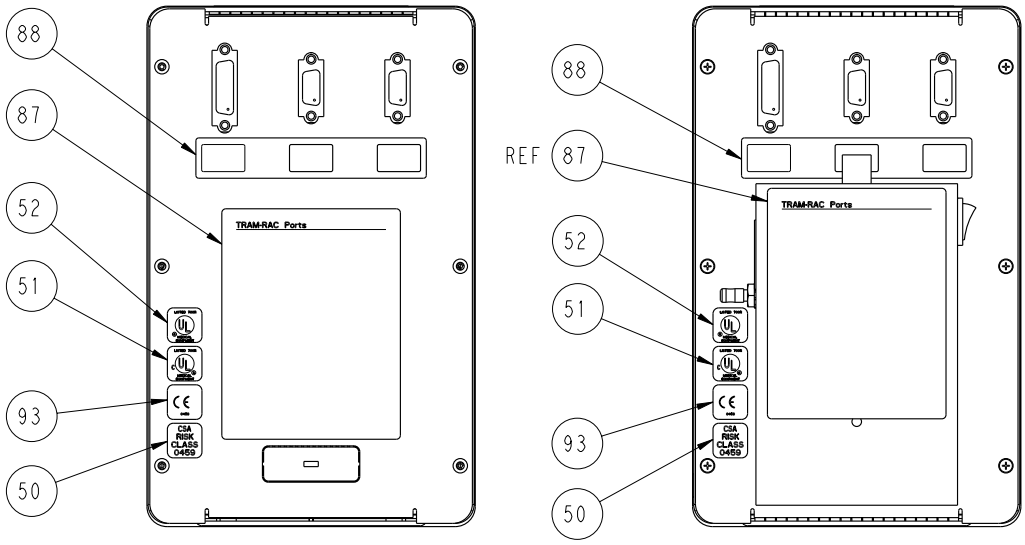

REAR VIEW
W/O POWER SUPPLY

REAR VIEW
W/POWER SUPPLY

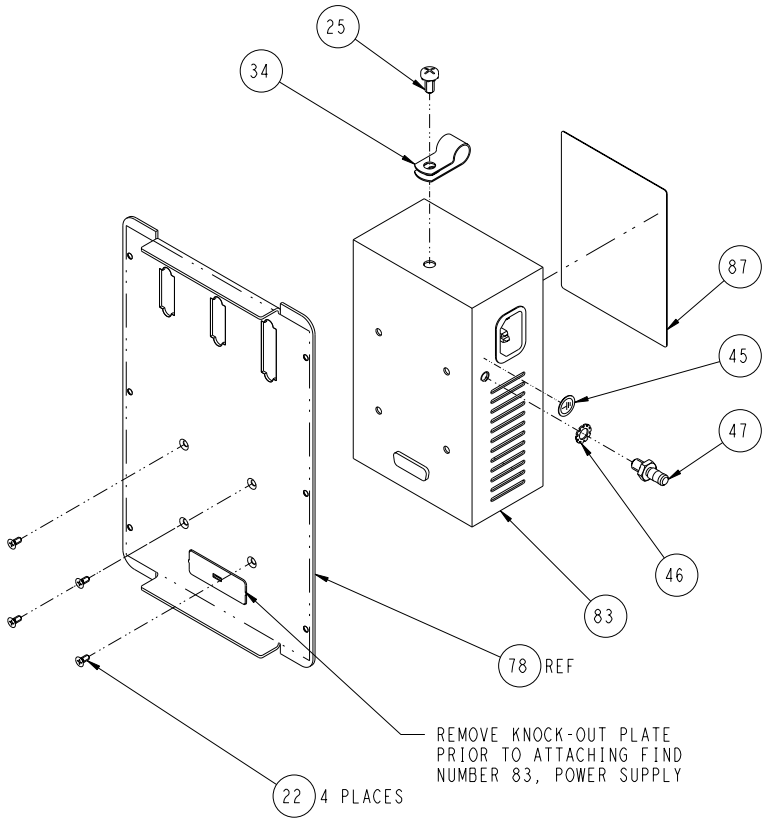

POWER SUPPLY ASSEMBLY
ROTATED 180° FOR CLARITY

Parts List PN 900031-005N/006N

Item	Reference Designation	Item Description	Item Number	Qty
19		LABEL BLANK 2.6IN X.4IN	404525-006	1
22		SCREW 100 FLH 4-40 X .25 GRAY (For PN **900031-005** Only)	4776-833	6
		SCREW 100 FLH 4-40 X .25 GRAY (For PN **900031-006** Only)	4776-833	10
24		SCREW BDGH 4-40 X 1/4,	45074-408	4
25		SCREW SEMS PH 10-32X3/8 (For PN **900031-006** Only)	45018-906	1
33		GASKET EMI TRAMRAC	404874-001	4
34		CLAMP CABLE CUSH-.31 ID (For PN **900031-006** Only)	4528-106	1
45		LABEL SYMBOL EQUIPOTENTIAL	70437-002	1
46		WASHER LOCK SERRATED F/M-6	400041-001	1
47		PLUG MC EQUIPOTENTIAL	400040-001	1
51		LABEL UL LISTED MEDICAL C	408230-011	1
52		LABEL UL LISTED MEDICAL	408230-002	1
54		HOUSING ASSEMBLY TRAM-RAC 4A	404773-003	0
70		BEZEL TRAM-RAC 4A	404479-003	1
71		MOUNT SIDE RAIL RIGHT HAND TRAMRAC 4A	400764-004	1
72		MOUNT SIDE RAIL LEFT HAND TRAMRAC 4A	400764-005	1
75		COVER BOTTOM TRAM-RAC 4A	400766-004	0
76		COVER PL DATA ACQ PBC RAC 4A	404685-003	0
78		COVER BACK TRAM-RAC 4A	404673-007	0
80		LIGHT PIPE TRAM-RAC 4A POWER	2004496-001	1
81	A2	PCB TRAM-RAC 4A PROCESSOR ACQUISITION (See Chapter 6, "Tram-rac 4A Processor Acquisition PCB")	2004288-001	1
82	A3	PCB TRAM-RAC 4A INTERFACE W/PS (For PN **900031-005** Only)	800516-001	1
		PCB TRAM-RAC 4A INTERFACE W/PS (For PN **900031-006** Only) (See Chapter 7, "Tram-rac 4A Interface PCB")	800516-002	1
83	PS1	POWER SUPPLY PAC 4A UNIVERSAL (For PN **900031-006** Only) (See Chapter 8, "Tram-rac 4A Power Supply"	6123-211	1
85		SCR PNHD 6-32 X 1.12 STL COAT	405318-002	4
86		SPRING COMPRESSION	410529-001	4
87		LABEL TRAM-RAC 4A DIA W/O PWR (For PN **900031-005** Only)	411224-004	1
88		LABEL TRAM-RAC 4A PORTS (For PN **900031-005** Only)	411224-002	1
93		LABEL CE MARK	408230-008	1
94		SCR 4-24X3/8 PH PHIL BLT POINT	408217-001	6
95		SCR THRD FORMING HI-LOW #4-24 X 3/8 GREY	2001015-001	18
98		KIT SNAP COVER TRAM-RAC	2002421-002	1
99		GROM NON-MTLC 3/16 ID NEOPRENE BLACK	2006427-001	1

6 Tram-rac 4A Processor Acquisition PCB

For your notes

Theory of Operation

Overview

The Processor Acquisition PCB (pn 2004288-001) provides digital and analog circuits that acquire parameter data from modules inserted into the TRAM-RAC 4A. Parameter data from each module slot is obtained using TRAM-net communications, serial shift register communications, and analog to digital conversion.

The Processor Acquisition PCB contains an 80C31 (U18) and an 80C152 (U3) eight-bit processor.

- The 80C31 is referred to as the data acquisition system (DAS) processor.
- The 80C152 is referred to as the communications (COMM) processor.

A TRAM-net communications hub in the RAC FPGA (U13) combines four module slot TRAM-net nodes, the 80C152 node, and an external auxiliary TRAM-net node into one TRAM-net port connection located on the back of the TRAM-RAC 4A. Static protection circuitry on the Processor Acquisition PCB prevents electro-static discharge damage through module and external RAC connectors. The Processor Acquisition PCB Architecture is shown in Figure 1. Functions shown in shaded blocks are contained in the RAC FPGA (U13).

The Processor Acquisition PCB interfaces to the TRAM-RAC Interface PCB (800516-001) through a 60 pin connector. Power required by the Processor Acquisition PCB is supplied by the TRAM RAC 4A Interface PCB (800516). Four module slot connectors (J1-J4) on the Processor Acquisition PCB interface to parameter modules inserted in the RAC 4A.

Block Diagram

The Tram-rac 4A Processor Acquisition PCB architecture is illustrated in this block diagram.

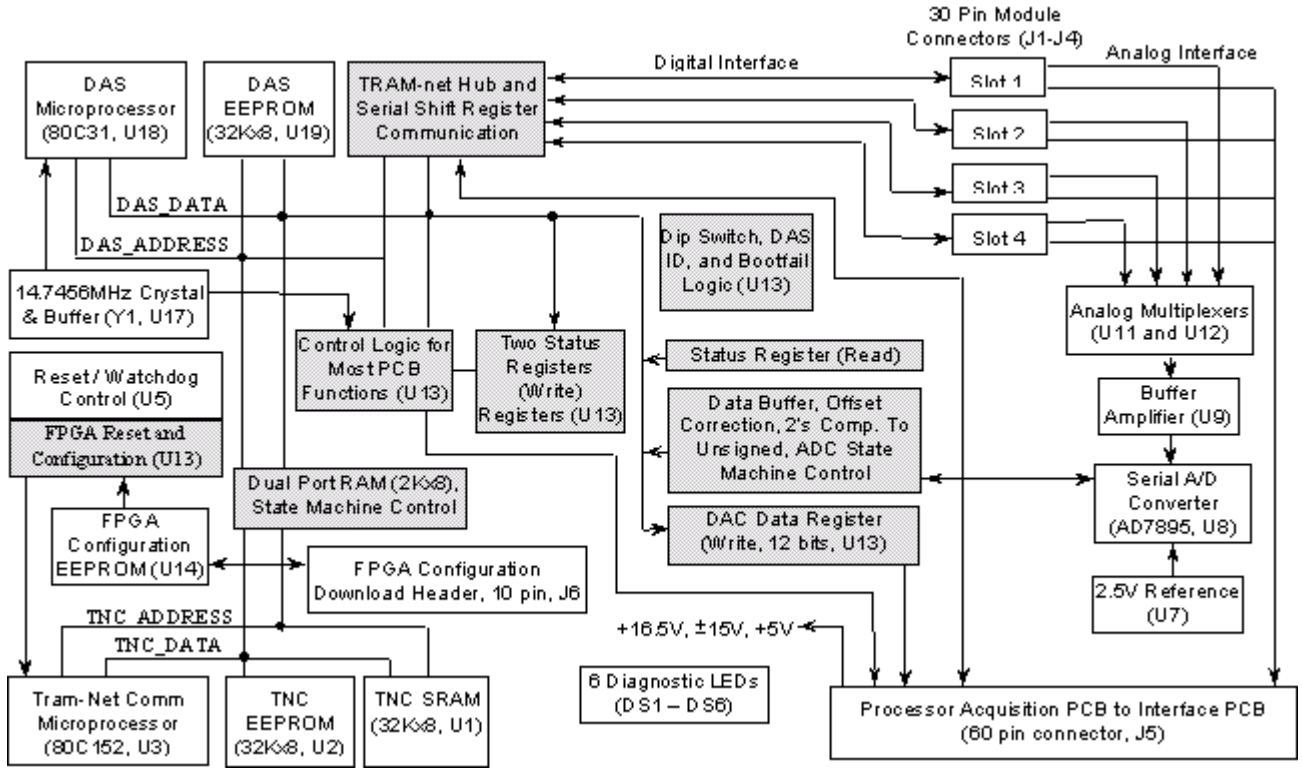
30 Pin Module Connectors (J1-J4)
Digital Interface
Analog Interface
DAS Microprocessor (80C31, U18)
DAS EEPROM (32Kx8, U19)
TRAM-net Hub and Serial Shift Register Communication
Slot 1
Slot 2
Slot 3
Slot 4
DAS_DATA
DAS_ADDRESS
Dip Switch, DAS ID, and Bootfail Logic (U13)
14.7456MHz Crystal & Buffer (Y1, U17)
Analog Multiplexers (U11 and U12)
Control Logic for Most PCB Functions (U13)
Two Status Registers (Write) Registers (U13)
Status Register (Read)
Reset/ Watchdog Control (U5)
Buffer Amplifier (U9)
Data Buffer, Offset Correction, 2's Comp. To Unsigned, ADC State Machine Control
FPGA Reset and Configuration (U13)
Dual Port RAM (2Kx8), State Machine Control
Serial A/D Converter (AD7895, U8)
FPGA Configuration EEPROM (U14)
DAC Data Register (Write, 12 bits, U13)
FPGA Configuration Download Header, 10 pin, J6
2.5V Reference (U7)
TNC_ADDRESS
TNC_DATA
+16.5V, ±15V, +5V
Tram-Net Comm Microprocessor (80C152, U3)
TNC EEPROM (32Kx8, U2)
TNC SRAM (32Kx8, U1)
6 Diagnostic LEDs (DS1 – DS6)
Processor Acquisition PCB to Interface PCB (60 pin connector, J5)

Microprocessors

The two eight bit microprocessors on the board run at an external clock input frequency of 14.7456MHZ. The 80C31 (U18) is referred to as the data acquisition system (DAS) processor while the 80C152 (U3) is referred to as the communications (COMM) processor. The 80C31 provides serial shift register digital communications with each module slot, controls a twelve bit analog to digital converter (ADC), and controls a digital to analog converter (DAC) on the Interface PCB. Patient parameter data acquired by the 80C31 is passed to the 80C152 through a dual port random access memory (RAM) contained in the RAC field programmable gate array (RAC FPGA, U13). The 80C152 collects the parameter data from dual port memory and transmits the data on the TRAM-net communications network. The 80C152 receives TRAM-net data intended for the TRAM-RAC 4A housing and may pass the data to the 80C31 through dual port memory.

Microprocessor Memory

80C31 DAS processor (U18)

The 80C31 DAS processor (U18) executes software code from a 32K byte FLASH memory device (U19). The 80C31 exchanges data with the 80C152 through the 2K byte dual port memory contained in the RAC FPGA (U13). The 80C31 uses a portion of the dual port memory for local data storage and has the ability to execute code from dual port when reprogramming FLASH memory. The 80C31 maps dual port memory into executable code space by asserting the DAS_PROM signal low.

80C152 COMM processor (U3)

The 80C152 COMM processor (U3) executes code from another 32Kx8 FLASH memory device (U2). The 80C152 exchanges data with the 80C31 through the 2K byte dual port memory contained in the RAC FPGA. The 80C152 uses a 32K byte static random access memory (SRAM, U1) for local data storage. The 80C152 communications processor has the ability to execute code from SRAM when reprogramming FLASH memory. The 80C152 maps SRAM into code space by asserting the TNC_PROM signal low.

Reset Generator and Watchdog Circuit

The main reset generator and watchdog timer functions are performed by the MAX705 device (U5). The MAX705 asserts the nCONFIG signal active low for 140ms to 280ms after the +5V supply rises above +4.65V. The MAX705 reset output (nCONFIG node) remains active low while the supply is below +4.65V and is guaranteed to hold the low state down to a supply voltage of 1.2V. An active low nCONFIG signal holds the EP1K30 RAC FPGA (U13) in reset with all pins tri-stated. The FPGA pins have weak internal pull up resistors in the range of 20K to 50K ohms when the nCONFIG signal is low and during FPGA configuration. FPGA configuration occurs when the nCONFIG signal is in the high state. Serial data is clocked from the Atmel AT17LV512A serial EEPROM (U14) into the FPGA using the DCLK signal generated in the EEPROM. FPGA configuration continues for 30ms to 300ms before the FPGA enters user mode. The logic programmed into the FPGA during configuration becomes active in user mode. Once the FPGA enters user mode the RELEASE_RST* output drives low and the TNC_RST* signal transitions high. The 80C152 exits the reset state and begins to execute code from FLASH memory (U2). The 80C152 negates the DAS_RST signal by driving the DAS_RST signal low allowing the 80C31 (U18) to begin code execution.

The MAX705 (U5) contains a watchdog timer circuit that times out in the range of 1.0 to 2.25 seconds. The MAX705 circuit forces a board reset (nCONFIG node low) when the internal watchdog timer expires. The 80C152 and 80C31 strobe the watchdog through a single gate OR device (U4).

PCB Clock Generation

The Processor Acquisition PCB 80C31 processor uses a 14.7456MHz crystal (Y1) to generate the board clock source. The crystal is connected directly to the 80C31 (U18) that contains an internal inverter. The output of the 80C31 inverter drives an external single gate inverter (U17). U17 drives the clock signal to the RAC FPGA (U13) and the 80C152 (U3).

Analog Multiplexers

Eight analog waveforms can be acquired from the four module slots for analog-to-digital conversion. Discrete parameter modules output analog parameter data on the WF_CHX signals. Two analog signals from each module slot are routed to the U11 DG408 multiplexer. A second DG408 multiplexer (U12) has ground and +5V connected to the inputs. Multiplexer signal selection is controlled by the 80C31 and logic in the RAC FPGA. The analog waveform signals have a range of ±10V.

Noise Filter and Buffer Amplifier

The U11 and U12 DG408 multiplexer outputs are connected to 24.9K ohm resistors. The resistors connect to a 470pF capacitor (C34) to form a low pass filter and OR the multiplexer outputs together. The resistor-capacitor filter removes high frequency noise from the selected input signal before the buffer amplifier (U9) stage. The MIC6211 unity gain buffer amplifier (U9) drives the analog-to-digital converter (ADC) input signal with the filtered analog waveform, ground, or +5V.

Analog-to-Digital Converter

The Processor Acquisition PCB contains an AD7895 analog-to-digital converter (U8). The serial 12-bit analog-to-digital converter (ADC) has a bipolar input range of ±10V. U7 is a 2.5V precision external reference for the ADC that provides a ±0.29% maximum gain error. The U6 linear regulator generates +5V for use by the ADC and the 2.5V reference.

An analog-to-digital conversion is initiated when the RAC FPGA receives an ADC convert command from the 80C31 processor. The RAC FPGA generates an active low pulse on the ADC_CONV* signal to start the conversion that requires 3.8µs. The RAC FPGA clocks serial data from the ADC and converts it to parallel form for read access by the 80C31.

The 80C31 controls the conversion process timing by switching the multitiplexers, commanding conversions, and reading the conversion result. The +5V supply from the Interface PCB is converted to verify the conversion process is operating properly. Conversions are to performed on ground through the U12 multiplexer to allow the conversion offset correction in the FPGA. Offset errors in the circuit are removed from all waveform conversion results read by the 80C31. Software checks ground conversion results to verify offset remains within reasonable limits.

When the ground or +5V conversion results are out of tolerance the RAC 4A stops operation and rapidly flashes the green front panel LED.

RAC Field Programmable Gate Array (FPGA, U13)

The RAC FPGA (U13) is an Altera static random access memory type with logic configured by the contents of a 512K bit serial EEPROM (U14). The EEPROM clocks a serial bit stream into the FPGA immediately after power up. The configured FPGA contains miscellaneous glue logic, a 2K byte dual port RAM, a six port TRAM-net communications hub, shift register communications logic, memory decode, analog output control logic, and analog-to-digital conversion control logic. The following describes the logic functions in the RAC FPGA that have not been included in other sections. Connector J6 can be used to reprogram the contents of the serial configuration EEPROM when the RAC 4A is powered up.

COMM and DAS Processor Handshake Signals

The RAC FPGA logic implements the communication latches between the COMM (80C152) and DAS (80C31) processors. When one of the processors has data to pass to the other processor, the data is written to the 2k byte dual port memory. The processor sending data generates an interrupt signal (DAS_ATTNCK or TNC_ATTNCK) to inform the receiving processor that data is available. The interrupt signals are latched in the FPGA and the latched signals (DAS_RDY*, ATTN_DAS* or TNC_RDY*, ATTN_TNC*) are output to both processors. The processor receiving the data asserts the ACK_TNC* or DAS_TNC* signal to clear the interrupt latch, allowing the sending processor to send more data if required.

DAS_PROM and TNC_PROM Delay Logic

The RAC FPGA delays the DAS_PROM and TNC_PROM signals from the DAS and COMM processors. The delayed DAS_PROM_DELAY and TNC_PROM _DELAY signals determine the code execution memory device for each processor. When DAS_PROM_DELAY is high, the 80C31 executes code from the 32K byte FLASH device. Code is executed from dual port memory when DAS_PROM is low during FLASH memory reprogramming. When TNC_PROM_DELAY is high, the 80C152 executes code from the 32K byte FLASH device. When TNC_PROM is low during FLASH memory reprogramming, code is executed from the 32K byte SRAM. The RAC FPGA multiplexes the correct memory control signals based on the state of the DAS_PROM_DELAY and TNC_PROM _DELAY signals.

Processor Memory Map Decode

The RAC FPGA provides memory map decoding logic for the 80C31 and 80C152 processors. Each processor address bus is latched in the FPGA and SRAM, FLASH, and dual port memory control signals are generated. Several registers and the associated decode logic are present in the FPGA for use by the 80C31. The 80C31 processor can access the ADC result, DAC output value, control registers 1 and 2, analog I/O select, and three status registers.

TRAM-net And Shift Register Communication

The RAC FPGA (U13) implements a six port TRAM-net hub and Serial Shift Register communication logic. Figures 2 and 3 show the RAC 4A TRAM-net upward and downward data paths. Six TRAM-net upward data paths are combined into one port that transfers TRAM-net data to the host monitor (SOLAR 8000 / 8000M / 9000 / 9500). The six upward bound ports originate from the four RAC 4A module slots (J1-J4), the 80C152 communications processor, and the external TRAM-RAC 4A auxiliary connector (J10). Each of the RAC 4A module slots are enabled when the associated TRAM-net enable signal input (TN_ENA_SLOTX*) is asserted low. The four TN_ENA_SLOTX* signals are inputs to the RAC 4A and contain a 100K ohm pull down resistors.

The logic performs carrier sense on each of the six upward path and downward path TRAM-net ports. Collisions are detected when more than one upward path port transmits simultaneously. When a collision is detected, the collision presence reporting signal is substituted for the colliding signals. The collision reporting signal contains Manchester code violations and enables all network nodes to detect the collision. The logic enforces a 26-bit blinding time after all upward or downward path transmissions to remove spurious transitions. Spurious transitions may occur after a valid packet transmission due to magnetic field collapse in isolation transformers. Loopback, headhub, carrier sense, and blinding timer functions for the 80C152 TRAM-net node are implemented as shown in Figures 2 and 3.

The RAC FPGA provides logic for the synchronous serial shift register communication protocol that allows the 7000-series parameter acquisition modules to communicate with the 80C31 DAS processor. 7000-series modules are identified by a logic high on the TN_ENA_SLOTX* signal (input to the RAC 4A). The MOD_LOAD/ DATA_IN and the MOD_DATA_OUT* signals are multiplexed with the TRAM-net receive data and transmit data signals respectively, for each module slot.

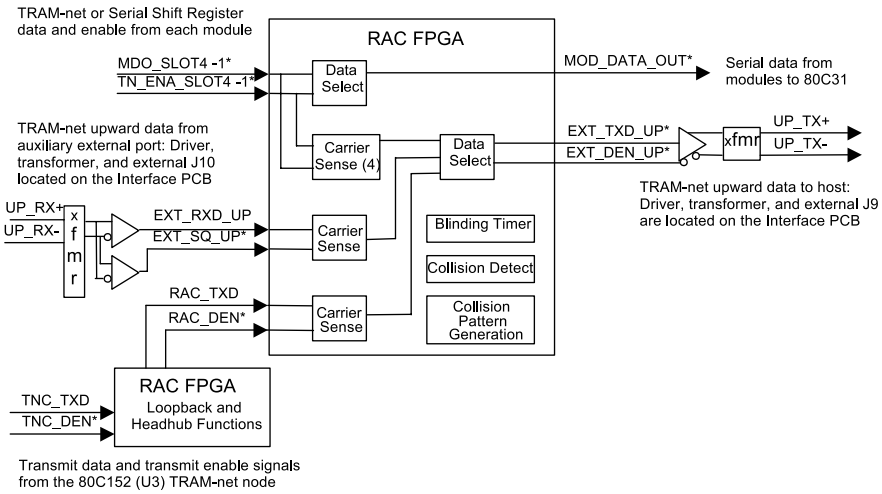

FIGURE 2: Upward TRAM-net Path and Serial Shift Register Data From Modules

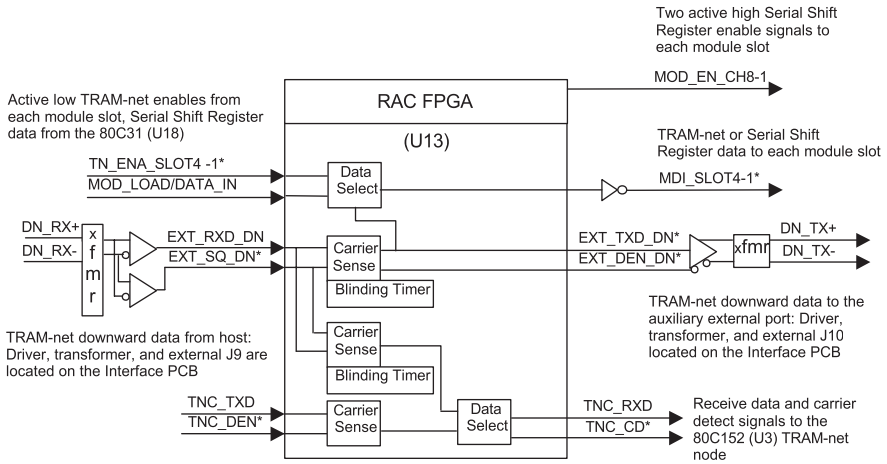

FIGURE 3: Downward TRAM-net Path and Serial Shift Register Data To Modules

Clock Generation

The RAC FPGA (U13) uses the PCLK signal as a global clock input. PCLK is a 14.7456MHz clock signal output from the U17 single gate inverter. Logic divides the PCLK signal down to 122880Hz and outputs the 123KHZ signal to the four module slots.

Indicators and Controls

The TRAM-RAC 4A Processor Acquisition PCB does not contain switches, jumpers, or adjustable circuits. The watch dog circuit may be disabled by removing the 1K ohm resistor (R23) connected to the MAX705 (U5).

The TRAM-RAC 4A Processor Acquisition PCB contains six LEDs. The functionality of each LED is defined in Table 1, "Indicators."

Table 1. Indicators

LED / Color	Signal Name	Function	Condition
DS6 / Green	Power Indicator	Proper Operation ■ Visible on Tram-rac 4A front bezel (lower left)	■ On Continuous: normal operation ■ Flashing Quickly (2Hz): ADC Error ■ Flashing Slowly (0.5Hz): watchdog timeouts ■ LED Off: power off, supply fault, RAC FPGA configuration fault
DS5 / Red	Network Activity	I hear talking on TRAM-net	■ On mostly steady: TRAM-RAC connected ■ Flickers low: TRAM-net not connected(I hear myself talk)
DS4 / Green	Transmit Enable	I am talking on TRAM-net	■ Flickers occasionally: when talking ■ On continuous: while graphing
DS3 / Yellow	Error Detect	I detect an error on this PCB	■ Off: normal operation
DS2 / Red	RAC COMM 80C152	COMM Processor is OK	■ Flashes with DS1 (twice per second): normal operation
DS1 / Red	RAC DAS 80C31	DAS Processor is OK	■ Flashes with DS2 (twice per second): normal operation

NOTE

[1]"I hear talking on my TRAM-net" LED flashes:

- with the "I am talking on TRAM-net" LED and
- alone when someone else is talking.

Input and Output Connectors

This section defines all signal connections with the Processor Acquisition PCB. Pin number, signal name, signal level, input or output, and a description is given for each signal.

Module Interface (J1–J4)

The Tram-rac 4A Processor Acquisition PCB provides four 30-pin module connectors (1866-030) that interface with up to four modules in the Tram-rac 4A. The connector numbers J1–J4 correspond to slots 1–4.

- The superscript number after the pin number indicates which slot(s) provide the given signal(s). Signal names containing numbers (ie.,1-4) indicate that the signals to each slot listed are independent.
- Signals listed with a single pin number, without a superscript, indicate the signal is common to all four slots.

Table 2. J1–J4 (30–Pin Connectors to Parameter Module Slots)

Pin	Signal Name	Signal Level	I/O	Signal Description
A1	GND	0V	O	**Ground:** ■ *Analog discrete parameter modules:* reference for the WF_A output. ■ *Tram-series modules:* +16.5V power return.
$B1^{1-4}$	WF_A1-4	Analog +/– 10 V	I	**Waveform Channels A1- 4:** Analog waveforms from channel A slots 1-4. Art or BP1 signal for TRAM-series modules
$A2^{1-4}$	MOD_EN_B1-4	Open Drain 1K 5V pull up	O	**Module Channels B1-4 enable:** This signal is the module enable for channel B slot 1- 4 of the discrete parameter modules. Signal is asserted high to enable the module to communicate via the synchronous serial "shift register" protocol.
$B2^{1-4}$	MOD_EN_A1-4	Open Drain 1K 5V pull up	O	**Module Channels A1- 4 enable:** Signal is the module enable for channel A slots 1- 4 of the discrete parameter modules. This signal is asserted high to enable the module to communicate via the synchronous serial “shift register” protocol.
A3	AGND	0V	O	**Analog Ground:** ■ *Analog discrete parameter modules:* reference for WR_B output. ■ *Tram-series modules:* reference for the SYNC_ECG signal.
$B3^{1-4}$	WF_B1-4	Analog +/- 10 V	I	**Waveform Channels B1- 4:** Analog waveform from channel B slots 1-4. This pin is the BP2 signal for Tram-series modules.
A4	SYNC_ECG	Analog +/- 10 V	I/O	**Sync ECG:** Tram-series modules provide this 10mV/V signal for use by other modules.
B4	+16.5V	+16.5V	O	**+16.5V power output to the modules**
A5	MOD_DATA_ CLOCK*	Open Drain 1K 5V pull up	O	**Module Data Clock:** Signal is the discrete parameter modules data clock used in the synchronous serial "shift register" protocol. The falling edge is used to shift serial data both into and out of the selected module.
$B5^{1-4}$	No Connection	—	—	—

Table 2. J1–J4 (30–Pin Connectors to Parameter Module Slots)				
Pin	**Signal Name**	**Signal Level**	**I/O**	**Signal Description**
A6[1-4]	MDI_SLOT1-4*	5V CMOS (no tri-state)	O	**Module load/Module Data In:** Signal functions as discrete module load, module data input, and Tram-net receive data to the module for slots 1-4. The module load function is used in the synchronous serial "shift register" protocol to pre-load the module's output shift register prior to transferring data out of the module to the Tram-Rac 4A housing. When the "shift register" communication protocol is used, active low binary input data is transferred to the module's input shift register on this signal with the falling edge of the MOD_DATA_CLOCK* signal. When Tram-net communication is used, input data on this signal is Manchester-encoded and does not require a separate clock.
B6	WF_OUT1	Analog +/- 10 V	I/O	**Waveform Output no 1:** The Tram-series modules generate this signal for use by other modules. This signal is also output to the analog output connector. The waveform signal generated is under software control of the Tram module. Typically, this waveform is the ECG lead II signal.
A 7[1-4]	MDO_SLOT1-4*	TTL	I	**Module Data Out:** Signal is the module data output for slots 1-4. When the discrete parameter synchronous serial "shift register" communication protocol is used, active low binary output data is transferred from the module's output shift register on this signal with the falling edge of the module data clock signal. Otherwise, when the Tram-net communication is used, output data on this signal is Manchester-encoded and requires no separate clock.
B7	WF_OUT2	Analog +/- 10 V	I/O	**Waveform Output no 2:** The Tram-series modules generate this signal for use by other modules. This signal is also output to the analog output connector. The waveform signal generated is under software control of the Tram module. Typically, this waveform is the first displayed trace on the Tramscope monitor.
A8	MOD_DATA_ LATCH*	Open Drain 1K 5V pull up	O	**Module Data Latch:** Signal is the discrete parameter module data latch strobe used in the synchronous serial "shift register" protocol. After eight bits of input data have been shifted into the module using the module data clock, this signal strobes the input data into the module's data latch.
B8	WF_OUT3	Analog +/- 10 V	I/O	**Waveform Output no 3:** The Tram-series modules generate this signal for use by other modules. This signal is also output to the analog output connector. The waveform signal generated is under software control of the Tram module. Typically, this waveform is the ECG lead V signal.
A9[1,3,4]	AGND	0V	O	**Analog Shield Ground:** Discrete parameter modules may use this pin to terminate their shield ground.
A9[2]	WF_OUT4	Analog +/- 10 V	I	**Waveform Output no 4:** The Tram-series modules generate this signal for use by other modules. This signal is also output to the analog output connector. The waveform signal generated is under software control of the Tram module. Typically, this waveform is the BP3 signal.

Table 2. J1–J4 (30–Pin Connectors to Parameter Module Slots)				
Pin	**Signal Name**	**Signal Level**	**I/O**	**Signal Description**
B9	123KHZ	Open Drain 1K 5V pull up	O	**123 kHz Clock:** Signal provided to the modules for the purpose of modulating signals for transfer across the module's isolation barrier using an inductive coupling mechanism.
A10	CALIRATE*	Open Drain 1K 5V pull up	O	**Module Calibrate:** Signal is an active low calibrate control provided to the modules. **NOTE** This function is not currently implemented.
B10[1, 3, 4]	PACER_BLANK	Open Drain 1K 5V pull up	O	**Pacer Blank:** Signal is asserted when a pacemaker spike is detected and provided to a discrete parameter module to indicate that the spike should be rejected. **NOTE** This function is not currently implemented.
B10[2]	WF_OUT5	Analog +/- 10 V	I	**Waveform Output no 5:** The Tram-series modules generate this signal for use by other modules. This signal is also output to the analog output connector. The waveform signal generated is under software control of the Tram module. Typically, this waveform is the BP4 signal.
A11, B11	GND	0V	O	**Ground:** Logic reference and +5V return
A12[1-4]	TN_ENA_ SLOT1-4*	TTL	I	**Tram-net Enable:** Determines whether the module is capable of Tram-net communication, and also indicates to the module that the Tram-Rac 4A housing is capable of supporting Tram-net communication. A low logic level indicates Tram-net capability; a high logic level indicates synchronous serial "shift register" communication support only.
B12	+5V	+5V	O	**+5V digital power**
A13, B13	+15V	+15V	O	**+15V analog power**
A14, A15	–15V	–15V	O	**-15V analog power**
A15, B15	AGND	0V	O	**Analog power return**

Interface PCB (J5)

The TRAM RAC 4A Processor Acquisition PCB (2004288-001) interfaces to the TRAM RAC 4A Interface PCB (800516-001) through a 60-pin connector (J5), internal to the TRAM-RAC 4A. The connector pin out is defined below. The J5 connector used on the Processor Acquisition PCB is a 60-pin, 0.1 inch center, two row header (410333-001).

Table 3. J5 (60-Pin Connector to TRAM-RAC 4A Interface PCB)

Pin(S)	Signal Name	Signal Level	I/O	Signal Description
1, 3, 5, 7, 9, 11	GND	0V	I	**Ground:** Power return for +16.5V supply
2, 4, 6, 8, 10, 12	+16.5V	+16.5V	I	**+16.5v power:** +16.5v power input for module use
13	EXT_RXD_DN	TTL	I	External TRAM_NET downward path receiver data sourced from the host (8000M, 9500…..)
14	EXT_SQ_DN	TTL	I	External TRAM-NET downward path squelch data
15	EXT_TXD_UP	TTL	O	External TRAM-NET upward path transmit data generally routed to the host (8000M, 9500…)
16	EXT_DEN_UP*	TTL	O	External TRAM-NET upward path driver enable
17	EXT_RXD_UP	TTL	I	External TRAM-NET upward path receiver data sourced from the Interface PCB J9
18	EXT_SQ_UP	TTL	I	External TRAM-NET upward squelch data
19	EXT_TXD_DN	TTL	O	External TRAM-NET downward path transmit data generally routed to the Interface PCB J10
20	EXT_DEN_DN*	TTL	O	External TRAM-NET downward path driver
21, 22, 23, 24, 25, 26, 27, 28, 31, 32, 33, 34	DAC_D0 - 12	TTL	O	D/A converter data from 80C31 to the DAC on the Interface PCB
35, 36, 37	OUT_SEL2 - 0	TTL	O	Analog output channel select
38	ANA_OUT	TTL	O	Analog output demultiplexer select
39	DAC*	TTL	O	Digital-To-Analog converter device select
29, 41, 43, 45	GND	0V	I	+5V Ground
30, 40, 42, 44, 46	+5V	+5V	I	+5V Power
47, 49, 51, 53	AGND	0V	I	Analog Ground
48, 50	+15V	+15V	I	+15V Power
52, 54	-15V	–15V	I	-15V Power
55	WF_RTN	0 V	O	Waveform output return (numbers 1 through 5)
56, 57, 58, 59, 60	WF_OUT1 - 5	Analog +/- 10 V	O	These signals are waveform outputs numbers 1 through 5. Signals are generated in modules, routed through the this board to the Interface Board.

ISP Serial EEPROM Interface (J6)

The Processor Acquisition PCB provides a 10-pin header to interface with in system programming (ISP) equipment. This equipment can be used to reprogram the AT17LV512A serial EEPROM device that is used to configure the Altera EP1K30 FPGA (U13). The 10-pin header can be accessed by removing the TRAM-RAC 4A front bezel and sliding the cover out the front.

Table 4. J6 (10–Pin Header to In System Programmer)

Pin(S)	Signal Name	Signal Level	I/O	Signal Description
1	DATA0	TTL	I/O	Data stream input from the In System Programming equipment when programming serial EEPROM (SER_EN* active low). Data stream output from the AT17LV512A when configuring the Altera 1K30 FPGA (U13).
2, 4, 5, 6, 9	No connection	—	—	Pins are unused and not connected to the Processor Acquisition PCB
3	DCLK	TTL	I/O	Clock signal input from the ISP equipment when programming serial EEPROM (SER_EN* active low). 1.67MHz to 16.7MHz clock signal supplied by the AT17LV512A when configuring the Altera 1K30 FPGA (U13).
7	GND	0V	O	Ground supplied to the ISP equipment.
8	+3.3V	+3.3V	O	+3.3V power supplied to the ISP equipment.
10	SER_EN*	TTL	I	Signal driven low by ISP equipment when programming the AT17LV512A serial EEPROM.

Part Location Diagram PN 2004288-001A

1 of 3

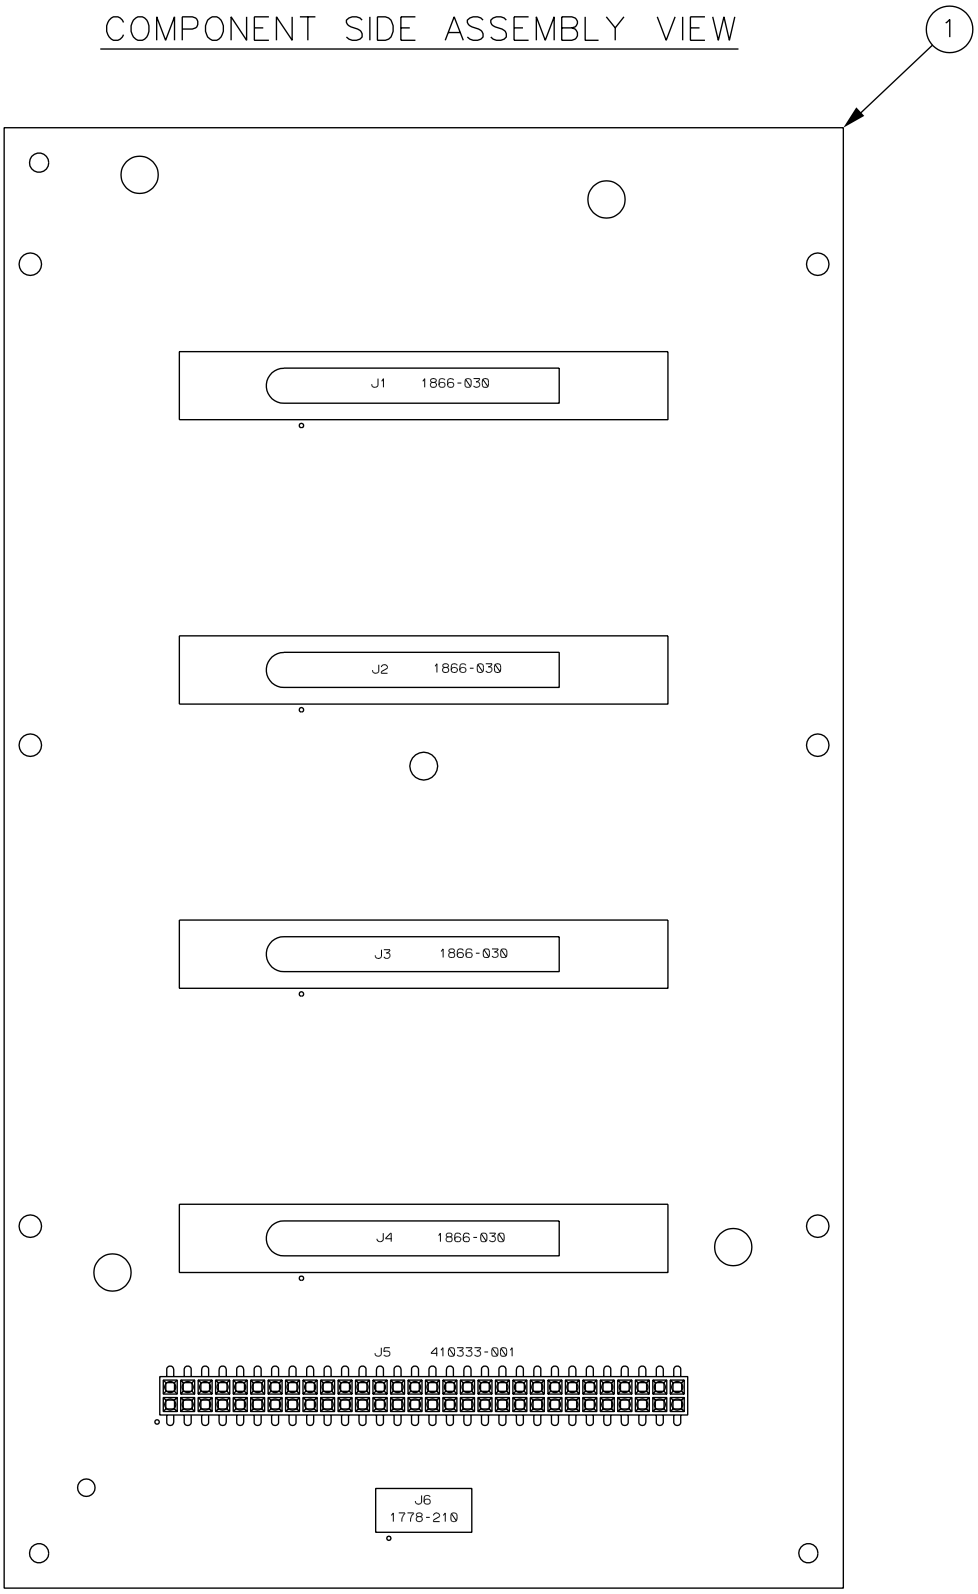

2 of 3

SOLDER SIDE ASSEMBLY VIEW

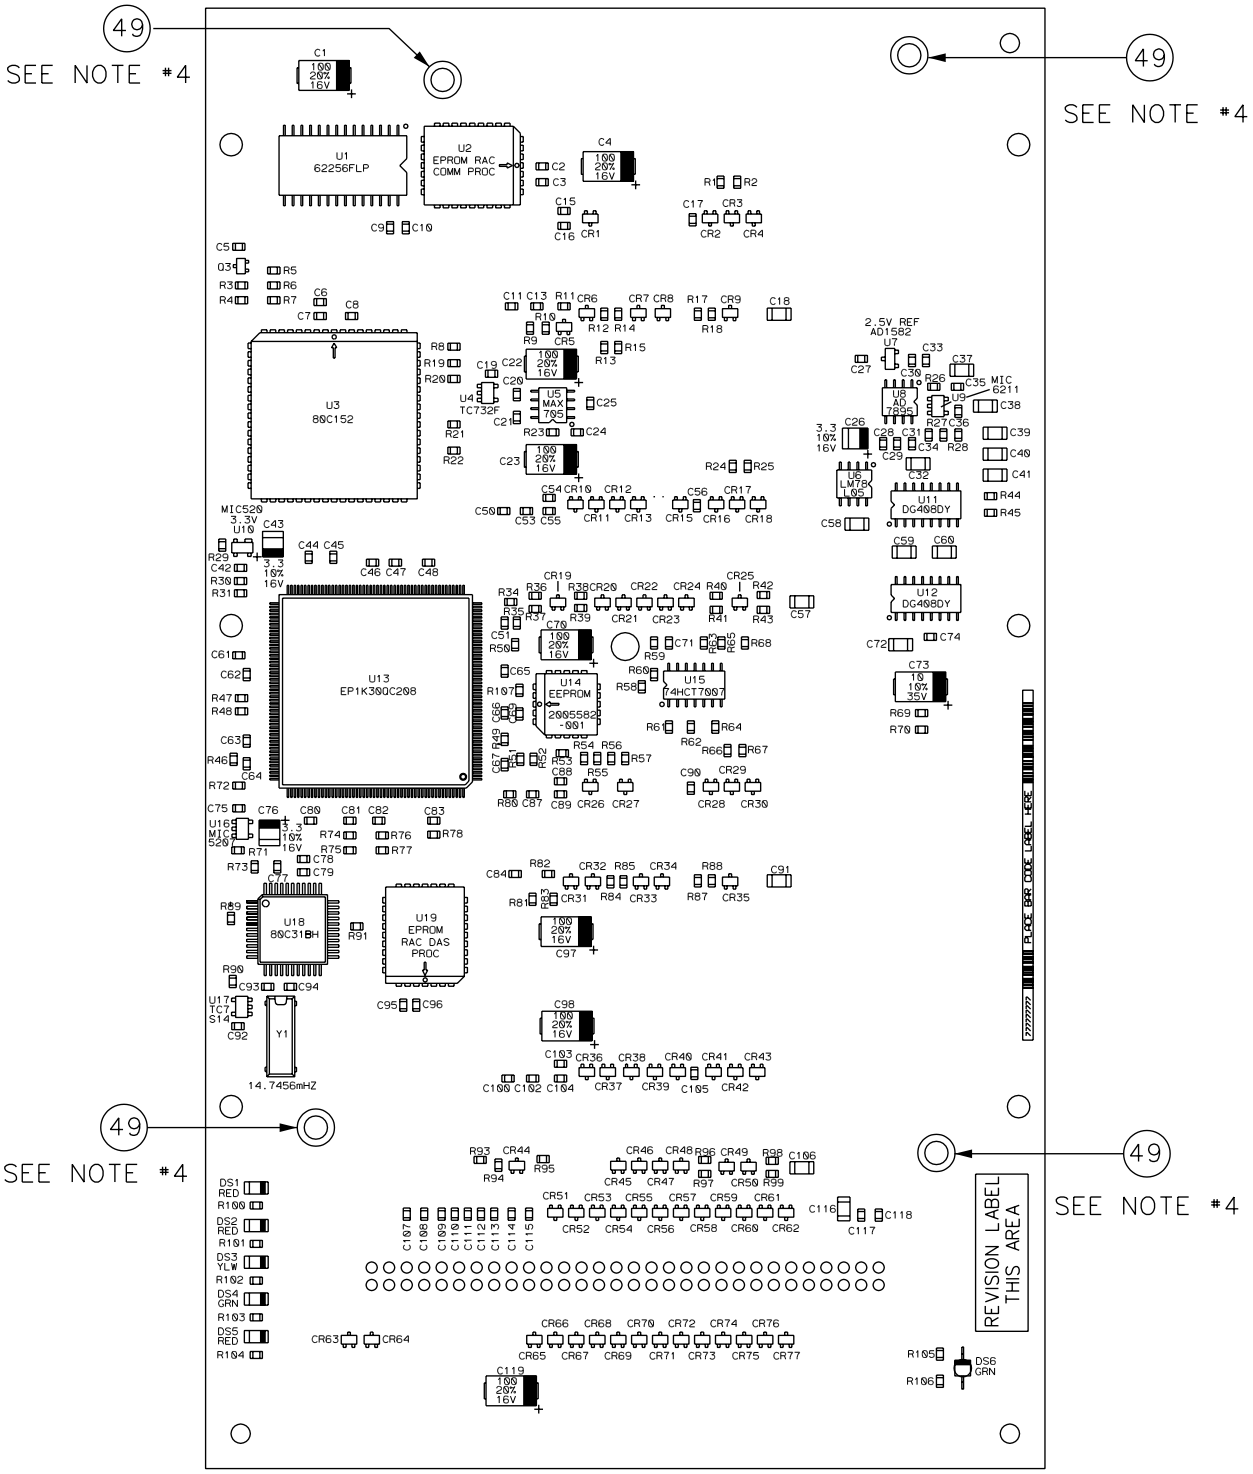

3 of 3

NOTES:

1. UNLESS OTHERWISE SPECIFIED, ALL RESISTANCE VALUES ARE IN OHMS, ALL CAPACITANCE VALUES ARE IN MICROFARADS.
2. THE BAR SHOWN ON ALL POLARIZED CAPACITORS DENOTES POSITIVE TERMINAL.
3. THE FOLLOWING COMPONENT(S) APPEAR ON THE SILKSCREEN, BUT ARE NOT USED ON THIS ASSEMBLY: C12, C14, C49, C52, C85, C86, C99, C101, CR14, CR40, R16, R32, R33, R79, R86 AND R92
4. INSTALL STANDOFFS, ITEM #46 ON SOLDER SIDE OF BOARD.
5. J6 LEADS NOT PROTRUDING THROUGH THE CIRCUIT BOARD IS ACCEPTABLE.

Parts List PN 2004288-001A

Reference Designation	Item Description	Item Number	Qty
C1, 4, 22–23, 70, 97–98, 119	CAP SM TANT 100UF 20% 16V LESR	412662-006	8
C2, 6, 8, 10, 15, 25, 27–30, 33, 42, 44–46, 51, 54, 64–65, 69, 74–75, 77–78, 81, 88, 95, 103, 109, 112, 114	CAP SM X7R 0603 .1UF 10%	411575-002	31
C3, 7, 9, 11, 13, 16–17, 19, 31, 35–36, 47–48, 50, 53, 55–56, 61–63, 66–67, 71, 79, 83–84, 87, 89–90, 92, 96, 100, 102, 104–105, 108, 110, 113, 118	CAP SM X7R 0603 0.01UF 5% 50V	411575-012	39
C5, 20–21, 24, 80, 82, 107, 111, 115, 117	CAP SM X7R 0603 1000PF 5% 50V	411575-003	10
C18, 32, 37–41, 57–60, 72, 91, 106, 116	CAP SM BYPASS 0.1UF 20% 50V	404370-001	15
C26, 43, 76	CAP SM TANT 3.3UF 10% 16V	406883-005	3
C34	CAP SM NPO 0603 470PF 5% 50V	411576-018	1
C73	CAP SM TANT 10UF 10% 35V	406884-013	1
C93–94	CAP SM NPO 0603 22PF 5% 50V	411576-002	2
CR–13, R15–39, R41–77	DIODE DUAL SERIES BAV99 SOT323	411605-001	75
DS1–2, 5	LED SM 1206 RED	414417-002	3
DS3	LED SM 1206 YELLOW	414417-003	1
DS4	LED SM 1206 GREEN	414417-004	1
DS6	LED GRN SUBMN SRFMNT PRFMD CON	405033-002	1
J1–4	CONN PCB 30P M VER (See "Module Interface (J1–J4)" on page 6-11 or "J1–J4 (30–Pin Connectors to Parameter Module Slots)" on page 5-10)	1866-030	4
J5	HDR 2ROW.10CRT PASS-THR (See "Interface PCB (J5)" on page 6-14 or "J5 (60-Pin Connector to Processor Acquisition PCB)" on page 7-9)	410333-001	1
J6	HEADER VERT 2X5 .10 CTR .230H (See "ISP Serial EEPROM Interface (J6)" on page 6-15)	1778-210	1
Q3	TRANSISTOR SM NPN MMBT3904WT1	421106-001	1
R1, 10, 12, 14, 18, 25, 38, 40, 42, 48, 51, 56, 59, 62–65, 67–68, 77, 81, 85, 88, 93, 96, 98, 106	RES SM 0603 100 1% 1/16W	410334-003	27

Reference Designation	Item Description	Item Number	Qty
R2–7, 13, 17, 20, 23–24, 30–31, 34–35, 39, 41, 43, 46–47, 50, 53–55, 57, 66, 72, 74–76, 80, 87, 89, 91, 97, 99–104	RES SM CER 0603 1K 1% 1/16W	410334-008	41
R8, 19, 21–22, 29, 49, 58, 61, 71, 73, 78	RES SM CER 0603 10K 1% 1/16W	410334-013	11
R9,R37,R83,R94	RES SM 0603 100K 1% 1/16W	410334-019	4
R11, 36, 82, 90, 95	RES SM CER 0603 0 OHM JUMPER	410334-027	5
R15, 52, 60, 84	RES SM 0603 4.75K 1% 1/16W	410334-010	4
R44–45, 69–70	RES SM 0603 49.9 OHM 1% 1/16W	410334-040	4
R105	RES SM 0603 200 OHM 1% 1/16W	410334-044	1
R107	RES SM 0603 750 1%	410334-099	1
R26–28	RES SM CER 0603 24.9K 1% 1/16W	410334-147	3
U1	IC SM CMOS RAM 62256FLP	3202-256	1
U2	EPROM SM RAC COMM PROC	405329-002	1
U3	IC COMM CONTROL 80C152JB PLCC	400368-001	1
U4	IC SM OR-GATE TC7S32F	3047-032	1
U5	IC SM PWR SPLY MON MAX705	410066-001	1
U6	IC REG SM LM78L05ACD	400726-001	1
U7	IC SM REFERENCE 2.5V .1% 50PPM	420084-001	1
U8	IC SM 12-BIT ADC AD7895	419736-001	1
U9	IC SM OP AMP MIC6211 SOT-23	420995-001	1
U10	IC SM LDO REG 3.3V MIC520	420140-003	1
U11–12	IC SM 8CH MUX LOW PWR DG408DY	402024-001	2
U13	IC FPGA SM EP1K30QC208-3 2.5/3.3 208PQFP	2005003-001	1
U14	IC EEPROM SM TRAM-RAC 4A RAC FPGA V1A	2005582-001	1
U15	IC HCT SM HEX BUFFER 74HCT7007 SO14	2006707-001	1
U16	IC SM LDO REG 2.5V 180MA MIC5207	422635-002	1
U17	IC SM HCMOS S-TRIG INV TC7S14	416170-001	1
U18	IC PQFP MICROCOMPUTER 80C31BH	402610-002	1
U19	PEPROM RAC DAS PROC V6A	405330-003	1
Y1	XTAL SM 14.7456MHZ +/-100PPM	414847-002	1
—	STANDOFF PCB MT .143DIA .75L	411134-001	4
—	SCHEM TRAM-RAC 4A PROCESSOR/ACQUISITION (See “Schematic Diagram PN 2004289-001A” on page 6-21)	2004289-001	—
—	CKT BD TRAM-RAC 4A PROCESSOR/ACQUISITION (See “Part Location Diagram PN 2004288-001A” on page 6-16)	2004287-001	—

Schematic Diagram PN 2004289-001A

1 of 9

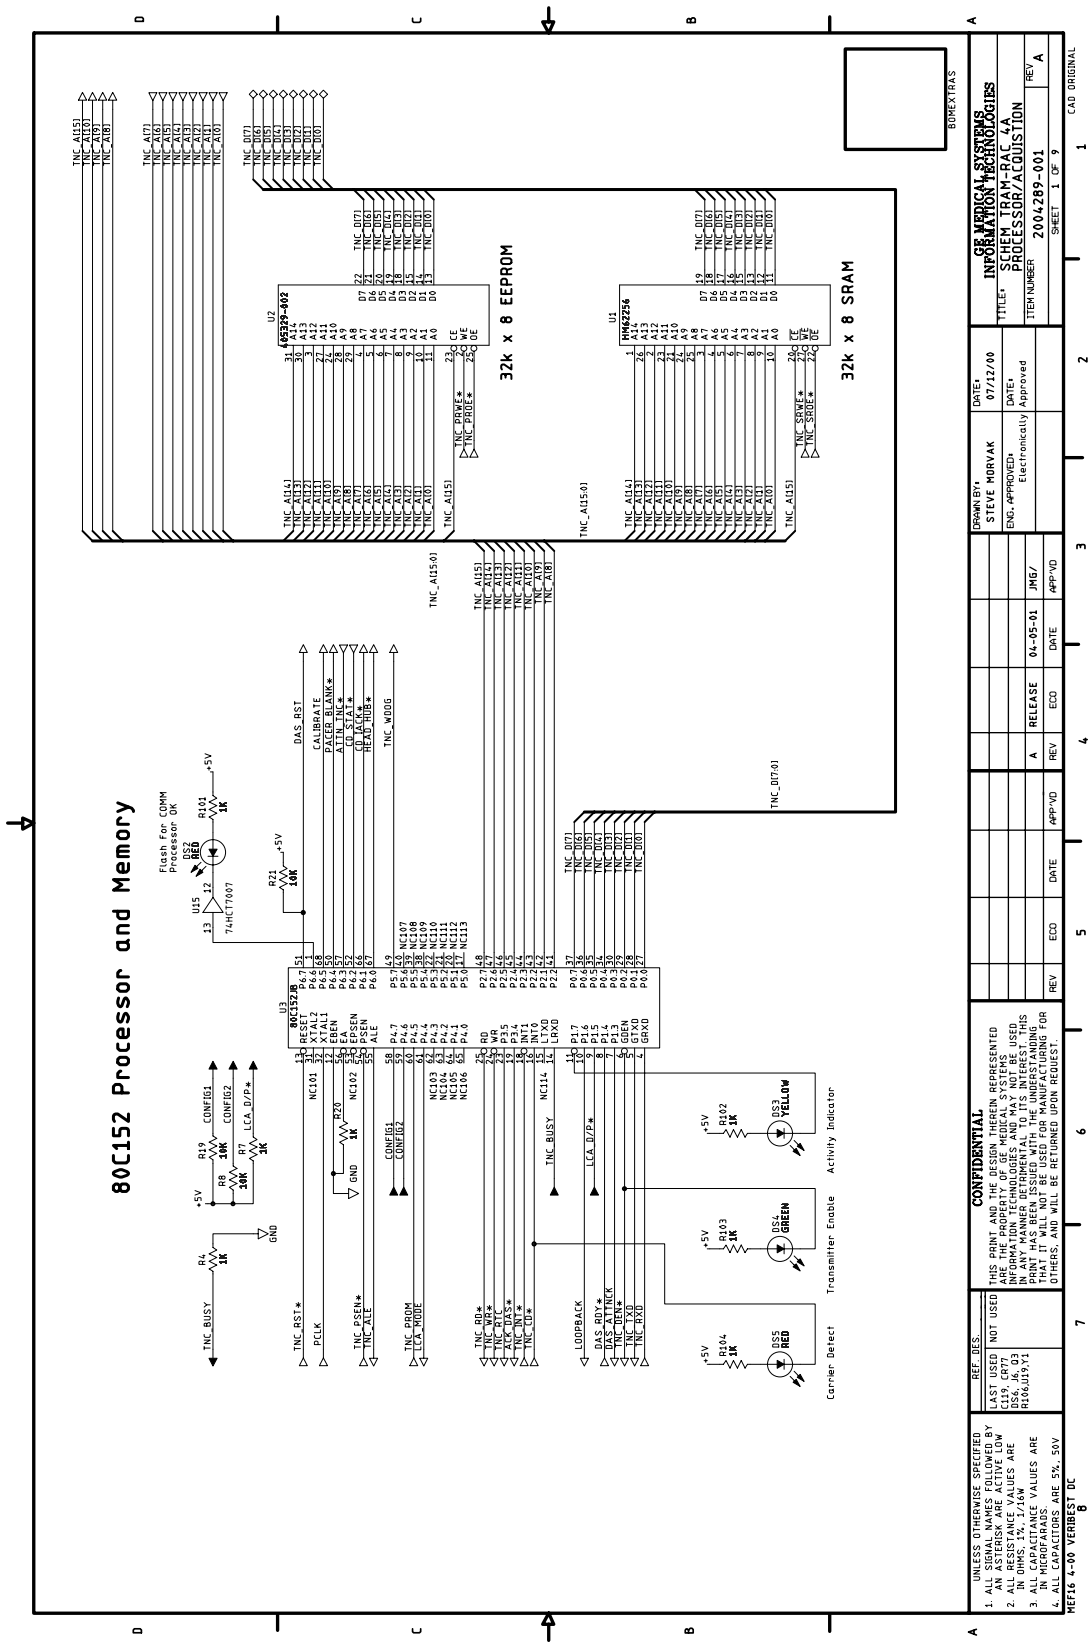

2 of 9

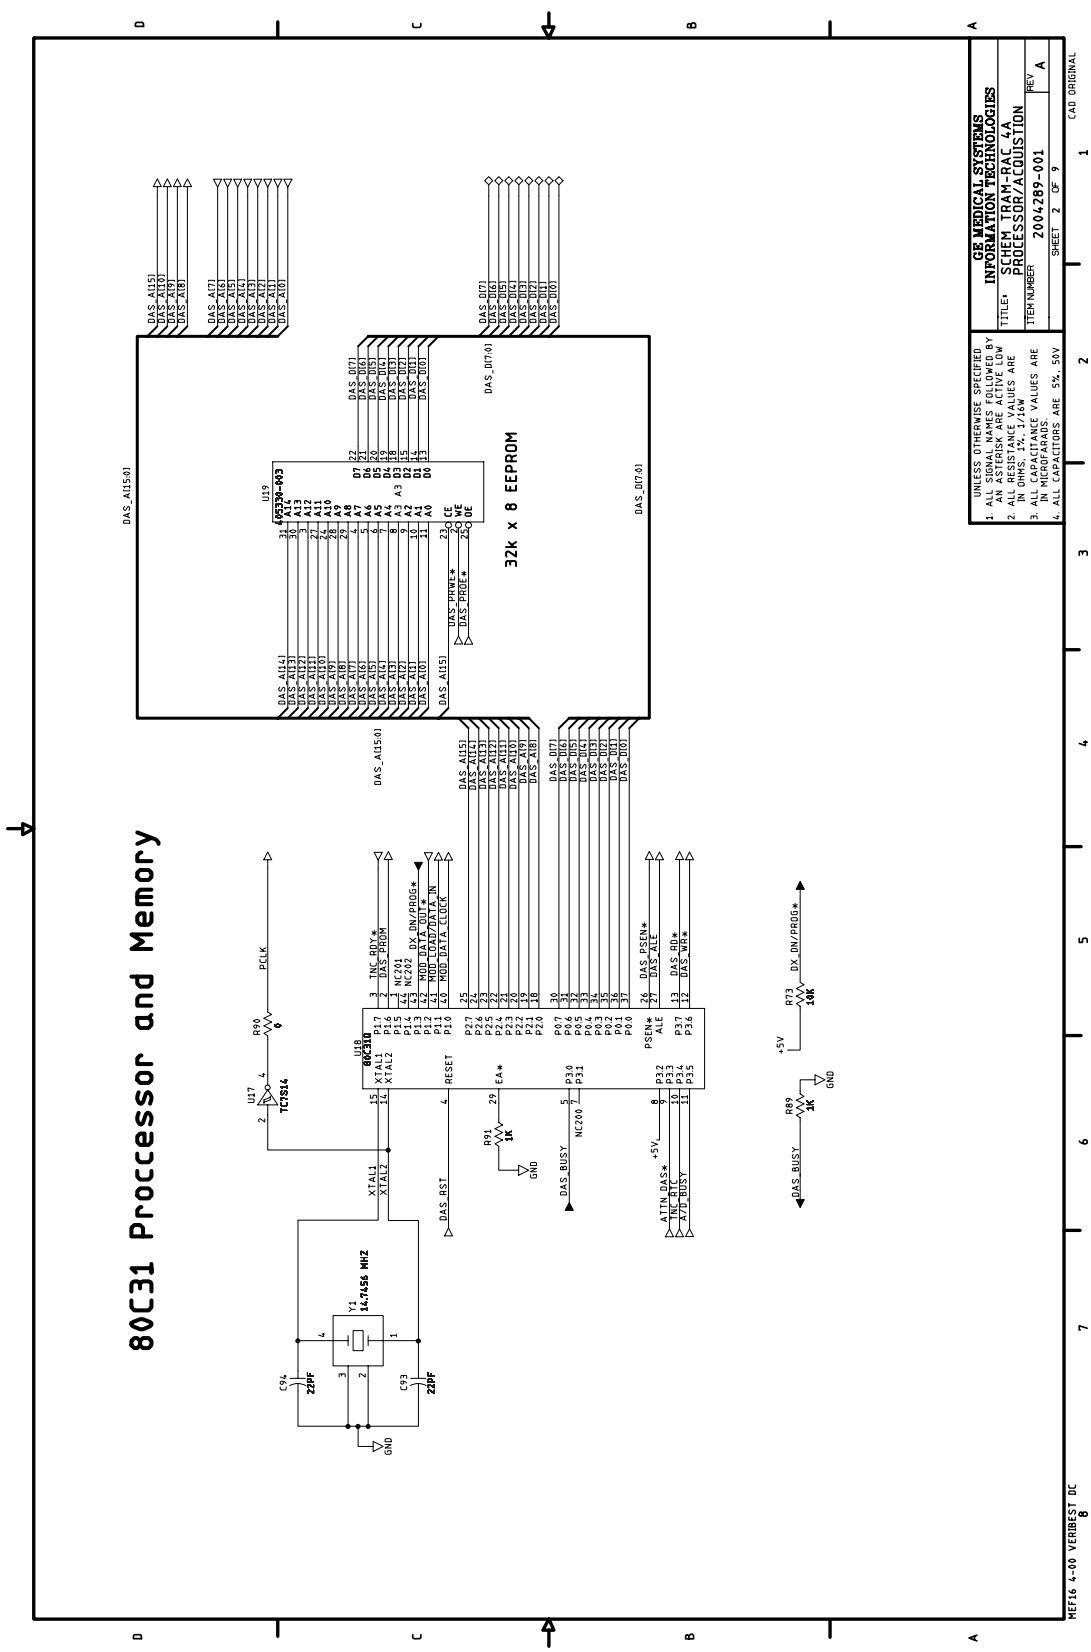
80C31 Processor and Memory
32k x 8 EEPROM
U19
AT29C256-90JI
U18
80C310
U17
TC7S14
Y1
14.7456 MHZ
C94
22PF
C93
22PF
R90
0
R91
1K
R89
1K
R73
10K
GND
+5V
PCLK
XTAL1
XTAL2
RESET
EA*
DAS_RST
DAS_BUSY
DX_DN/PROG*
DAS_PSEN*
DAS_ALE
DAS_RD*
DAS_WR*
DAS_PRWE*
DAS_PRDE*
DAS_A115[0]
DAS_D17[0]
GE DIGITAL SYSTEMS
INFORMATION TECHNOLOGIES
SCHEM,TRAM-RAC 4A
PROCESSOR/ACQUISTION
ITEM NUMBER 2004289-001
REV A
SHEET 2 OF 9
CAD ORIGINAL
UNLESS OTHERWISE SPECIFIED
1. ALL SIGNAL NAMES FOLLOWED BY AN ASTERISK ARE ACTIVE LOW
2. ALL RESISTANCE VALUES ARE IN OHMS, 1%, 1/16W
3. ALL CAPACITANCE VALUES ARE IN MICROFARADS
4. ALL CAPACITORS ARE 5%, 50V
MEF16 4-00 VERIBEST DC
8

3 of 9

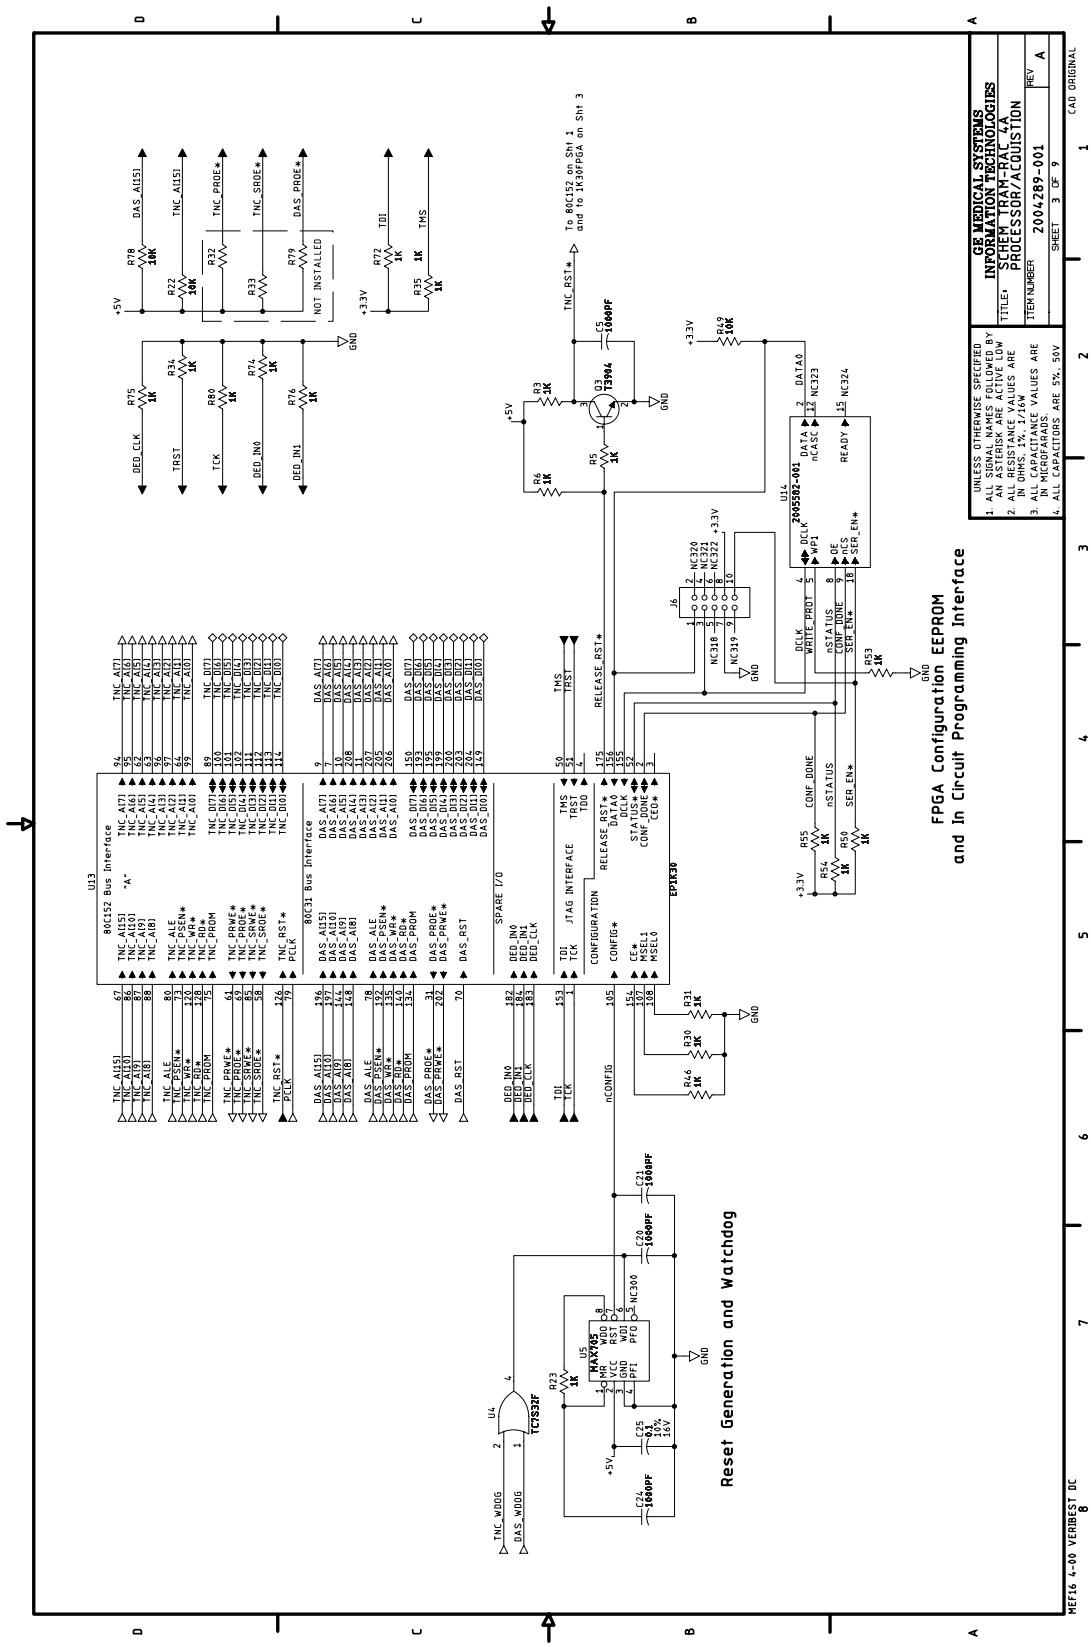
FPGA Configuration EEPROM
and In Circuit Programming Interface
Reset Generation and Watchdog
GE MEDICAL SYSTEMS
INFORMATION TECHNOLOGIES
SCHEM TRAM-RAC 4A
PROCESSOR/ACQUISTION
2004289-001
SHEET 3 OF 9
REV A
CAD ORIGINAL
UNLESS OTHERWISE SPECIFIED
1. ALL SIGNAL NAMES FOLLOWED BY AN ASTERISK ARE ACTIVE LOW
2. ALL RESISTANCE VALUES ARE IN OHMS, 1%, 1/16W
3. ALL CAPACITANCE VALUES ARE IN MICROFARADS
4. ALL CAPACITORS ARE 5%, 50V
80C152 Bus Interface
80C31 Bus Interface
SPARE I/O
JTAG INTERFACE
CONFIGURATION
EP1K30
2005582-001
MAX705
TC7S32F
T3904
NOT INSTALLED
MEF16 4-00 VERIBEST DC

4 of 9

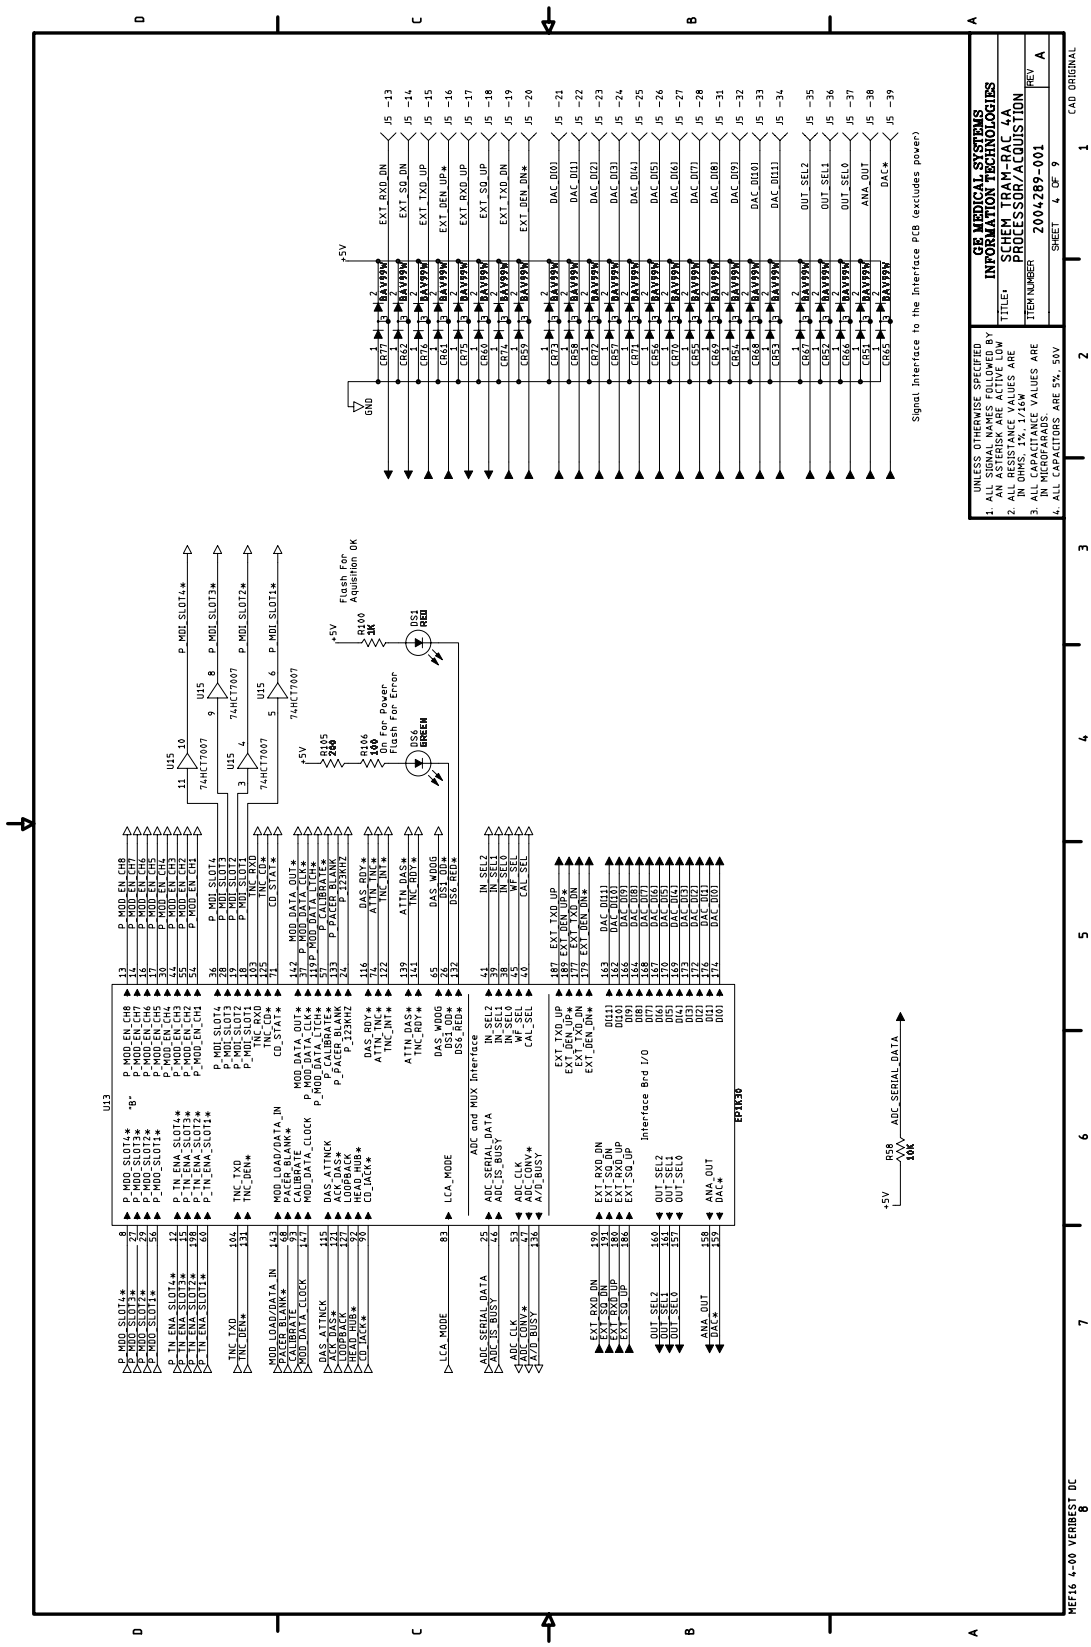
GE MEDICAL SYSTEMS
INFORMATION TECHNOLOGIES
TITLE: SCHEM, TRAM-RAC 4A PROCESSOR/ACQUISITION
ITEM NUMBER 2004289-001
REV A
SHEET 4 OF 9
CAD ORIGINAL
UNLESS OTHERWISE SPECIFIED
1. ALL SIGNAL NAMES FOLLOWED BY AN ASTERISK ARE ACTIVE LOW
2. ALL RESISTANCE VALUES ARE IN OHMS, 1%, 1/16W
3. ALL CAPACITANCE VALUES ARE IN MICROFARADS.
4. ALL CAPACITORS ARE 5%, 50V
Signal Interface to the Interface PCB (excludes power)
Flash For Aquisition OK
On For Power
Flash For Error
Interface Brd I/O
ADC and MUX Interface
EP1K30
MEF16 4-00 VERIBEST DC

5 of 9

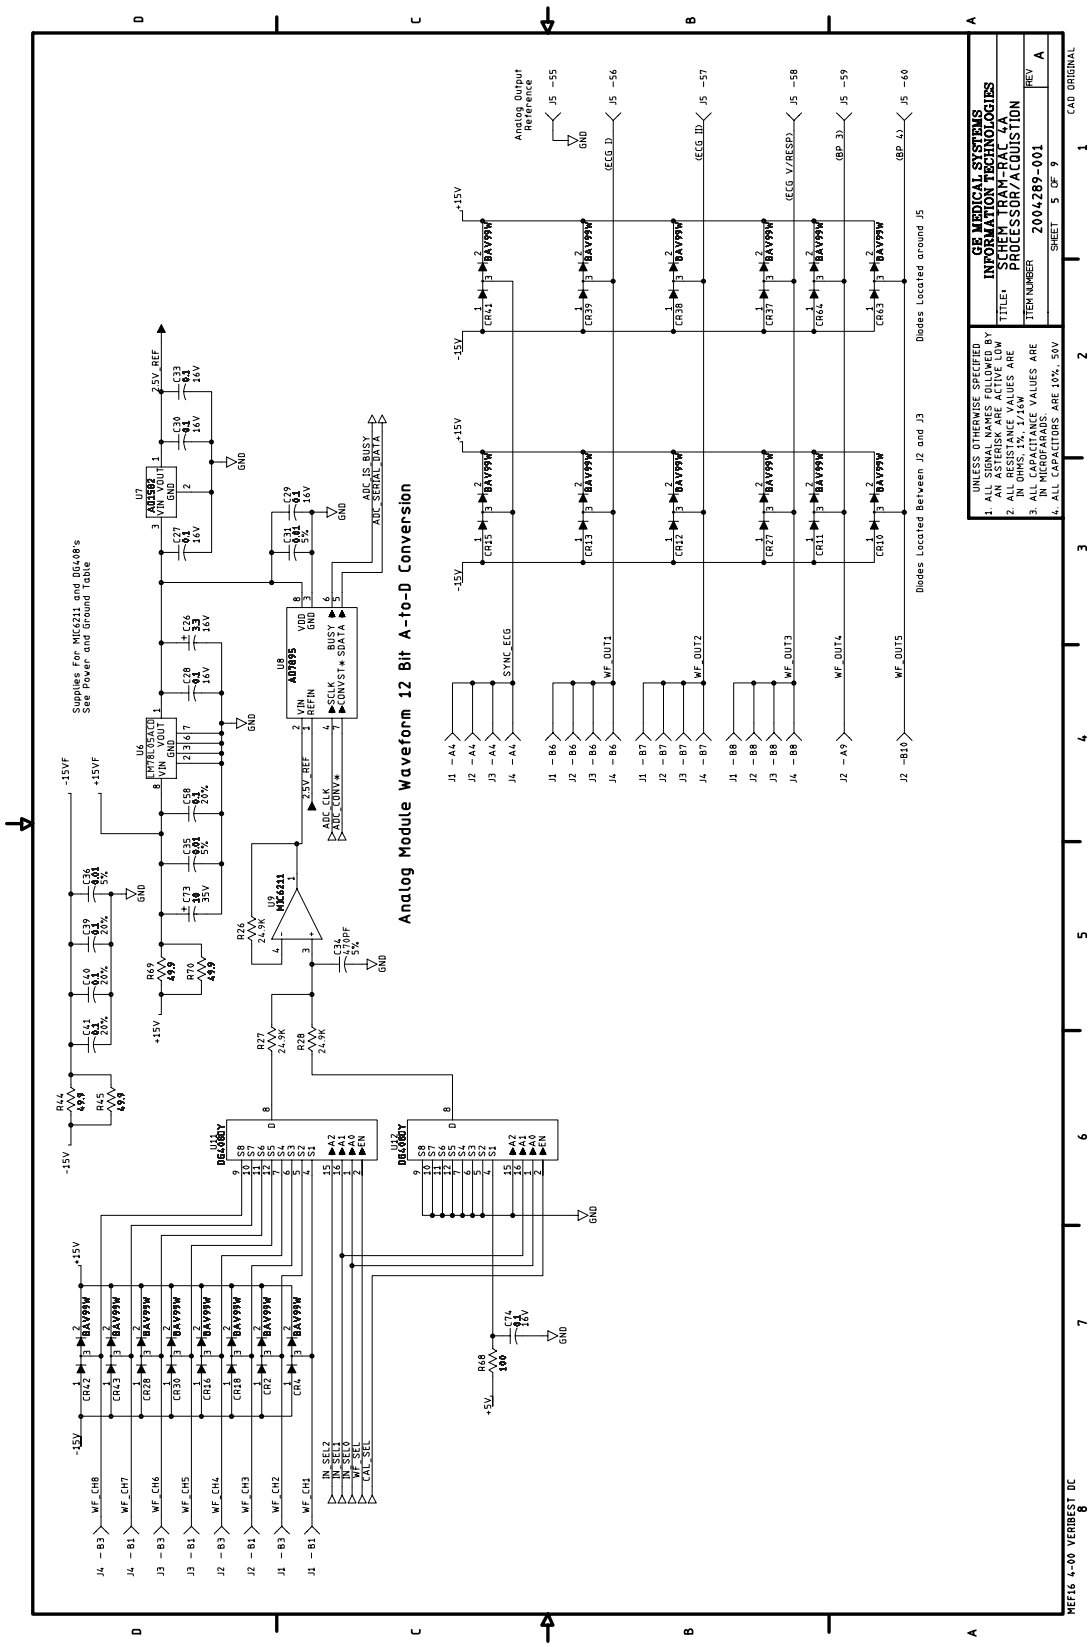
Analog Module Waveform 12 Bit A-to-D Conversion
GE MEDICAL SYSTEMS
INFORMATION TECHNOLOGIES
SCHEM TRAM-RAC 4A
PROCESSOR/ACQUISTION
2004289-001
SHEET 5 OF 9
REV A
Supplies For MIC6211 and DG408's See Power and Ground Table
Analog Output Reference
Diodes Located around J5
Diodes Located Between J2 and J3
UNLESS OTHERWISE SPECIFIED
1. ALL SIGNAL NAMES FOLLOWED BY AN ASTERISK ARE ACTIVE LOW
2. ALL RESISTANCE VALUES ARE IN OHMS, 1%, 1/16W
3. ALL CAPACITANCE VALUES ARE IN MICROFARADS
4. ALL CAPACITORS ARE 10%, 50V
CAD ORIGINAL
MEF16 4-00 VERIBEST DC

6 of 9

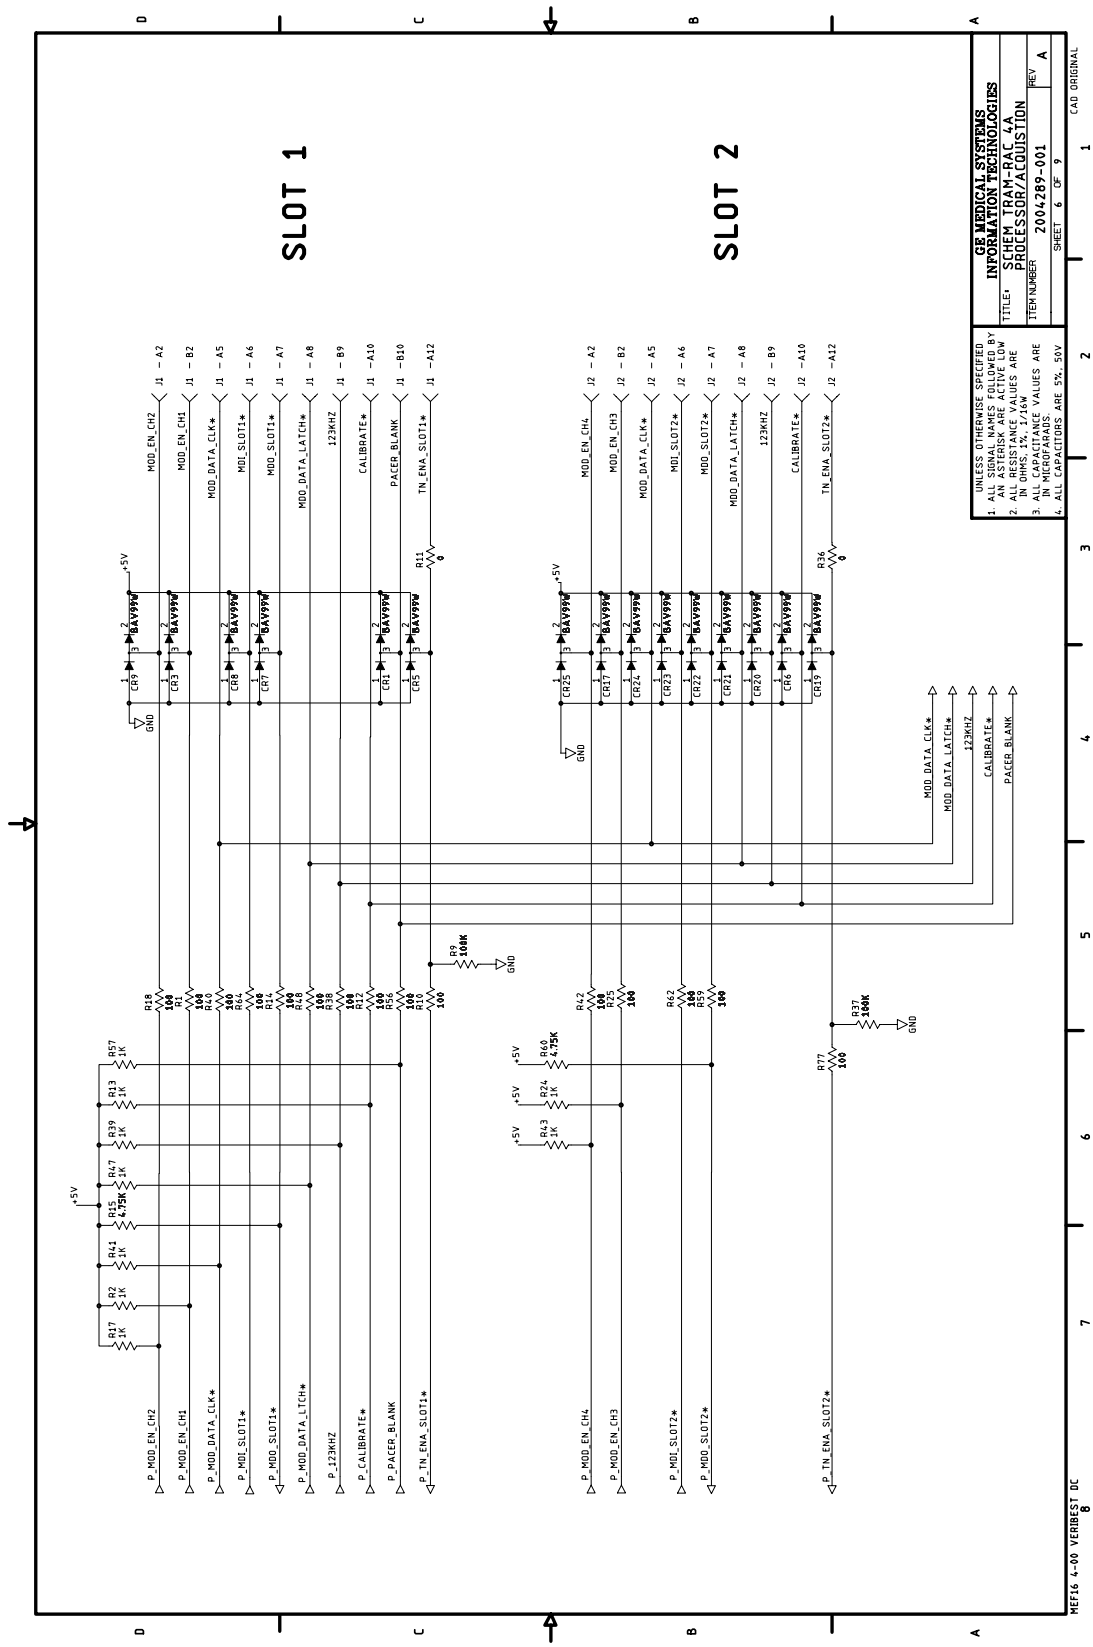
SLOT 1
SLOT 2
GE MEDICAL SYSTEMS
INFORMATION TECHNOLOGIES
TITLE: SCHEM TRAM-RAC 4A PROCESSOR/ACQUISITION
ITEM NUMBER 2004289-001
REV A
SHEET 6 OF 9
CAD ORIGINAL
UNLESS OTHERWISE SPECIFIED
1. ALL SIGNAL NAMES FOLLOWED BY AN ASTERISK ARE ACTIVE LOW
2. ALL RESISTANCE VALUES ARE IN OHMS, 1%, 1/16W
3. ALL CAPACITANCE VALUES ARE IN MICROFARADS
4. ALL CAPACITORS ARE 5%, 50V
MOD_EN_CH2
MOD_EN_CH1
MOD_DATA_CLK*
MOD_SLOT1*
MOD_SLOT1*
MOD_DATA_LATCH*
123KHZ
CALIBRATE*
PACER_BLANK
TN_ENA_SLOT1*
MOD_EN_CH4
MOD_EN_CH3
MOD_DATA_CLK*
MOD_SLOT2*
MOD_SLOT2*
MOD_DATA_LATCH*
123KHZ
CALIBRATE*
TN_ENA_SLOT2*
MOD_DATA_CLK*
MOD_DATA_LATCH*
123KHZ
CALIBRATE*
PACER_BLANK
P_MOD_EN_CH2
P_MOD_EN_CH1
P_MOD_DATA_CLK*
P_MDI_SLOT1*
P_MOD_SLOT1*
P_MOD_DATA_LTCH*
P_123KHZ
P_CALIBRATE*
P_PACER_BLANK
P_TN_ENA_SLOT1*
P_MOD_EN_CH4
P_MOD_EN_CH3
P_MDI_SLOT2*
P_MOD_SLOT2*
P_TN_ENA_SLOT2*
MEF16 4-00 VERIBEST DC

7 of 9

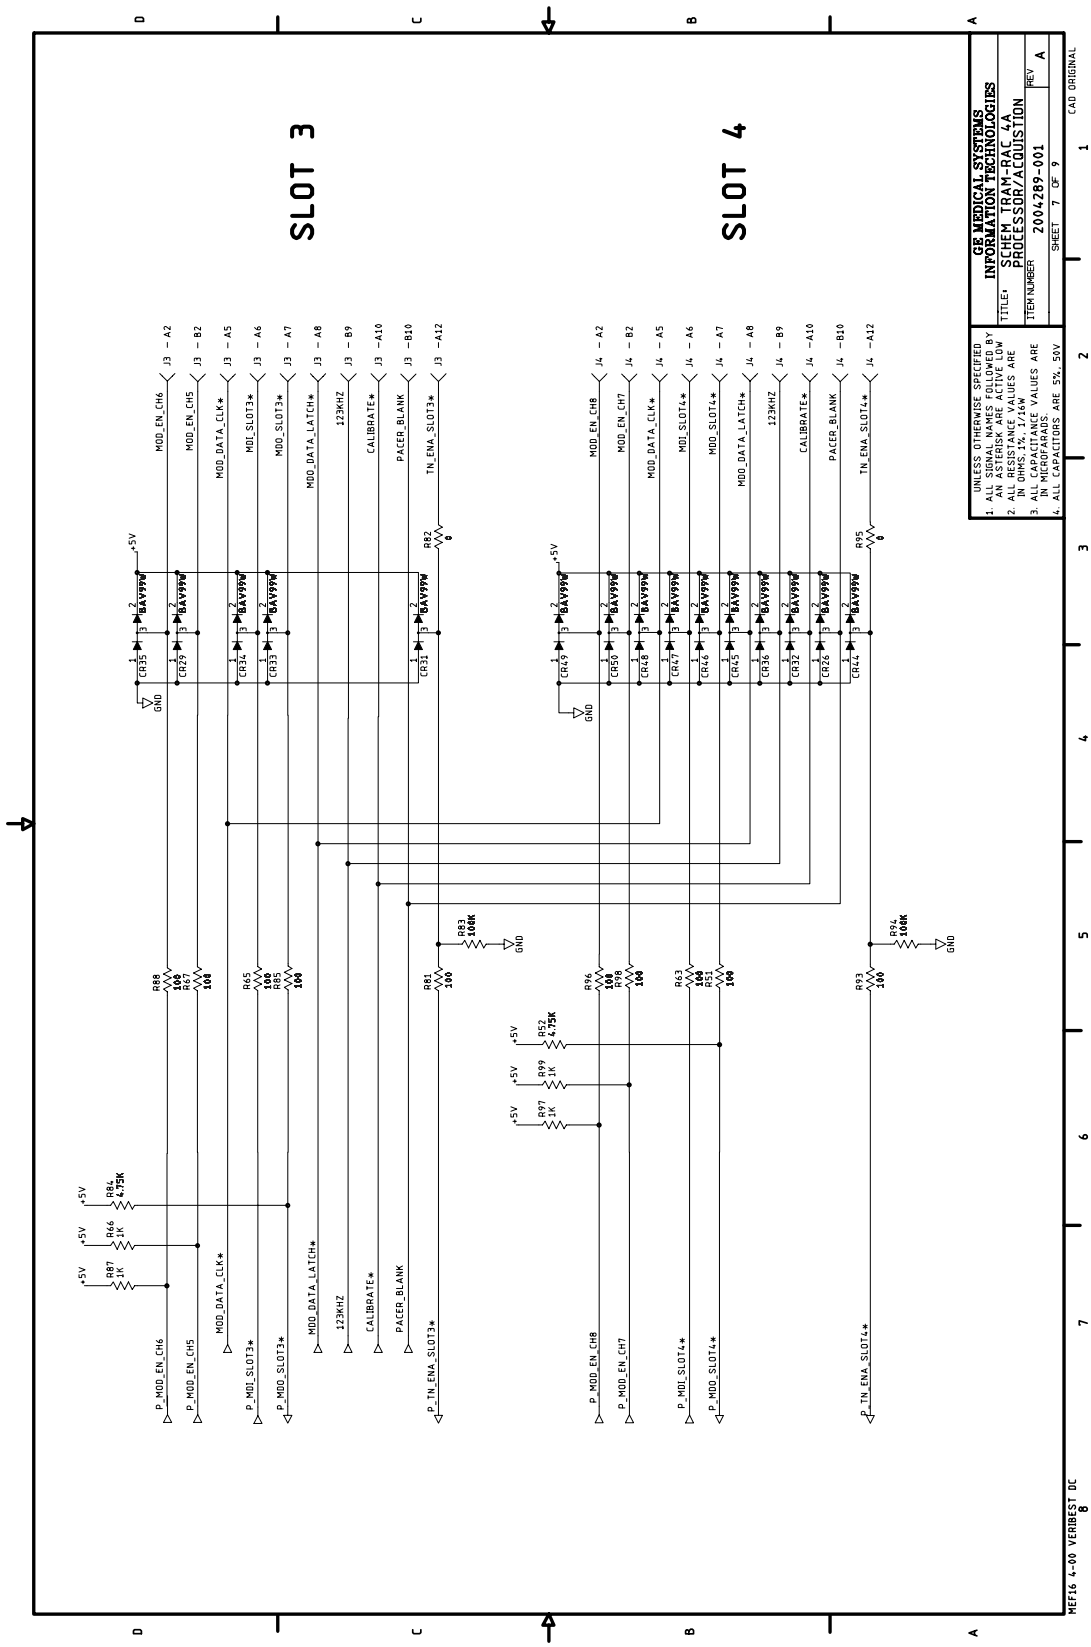
SLOT 3
SLOT 4
GE MEDICAL SYSTEMS
INFORMATION TECHNOLOGIES
SCHEM TRAY-RAC 4A
PROCESSOR/ACQUISITION
ITEM NUMBER 2004289-001
REV A
SHEET 7 OF 9
CAD ORIGINAL
UNLESS OTHERWISE SPECIFIED
1. ALL SIGNAL NAMES FOLLOWED BY AN ASTERISK ARE ACTIVE LOW
2. ALL RESISTANCE VALUES ARE IN OHMS,1%, 1/16W
3. ALL CAPACITANCE VALUES ARE IN MICROFARADS
4. ALL CAPACITORS ARE 5%, 50V
MEF16 4-00 VERIBEST DC
MOD_EN_CH6
MOD_EN_CH5
MOD_DATA_CLK*
MOD_SLOT3*
MOD_SLOT3*
MOD_DATA_LATCH*
123KHZ
CALIBRATE*
PACER_BLANK
TN_ENA_SLOT3*
MOD_EN_CH8
MOD_EN_CH7
MOD_DATA_CLK*
MOD_SLOT4*
MOD_SLOT4*
MOD_DATA_LATCH*
123KHZ
CALIBRATE*
PACER_BLANK
TN_ENA_SLOT4*
BAV99W
+5V
GND
P_MOD_EN_CH6
P_MOD_EN_CH5
P_MOD_SLOT3*
P_MOD_SLOT3*
P_TN_ENA_SLOT3*
P_MOD_EN_CH8
P_MOD_EN_CH7
P_MOD_SLOT4*
P_MOD_SLOT4*
P_TN_ENA_SLOT4*

8 of 9

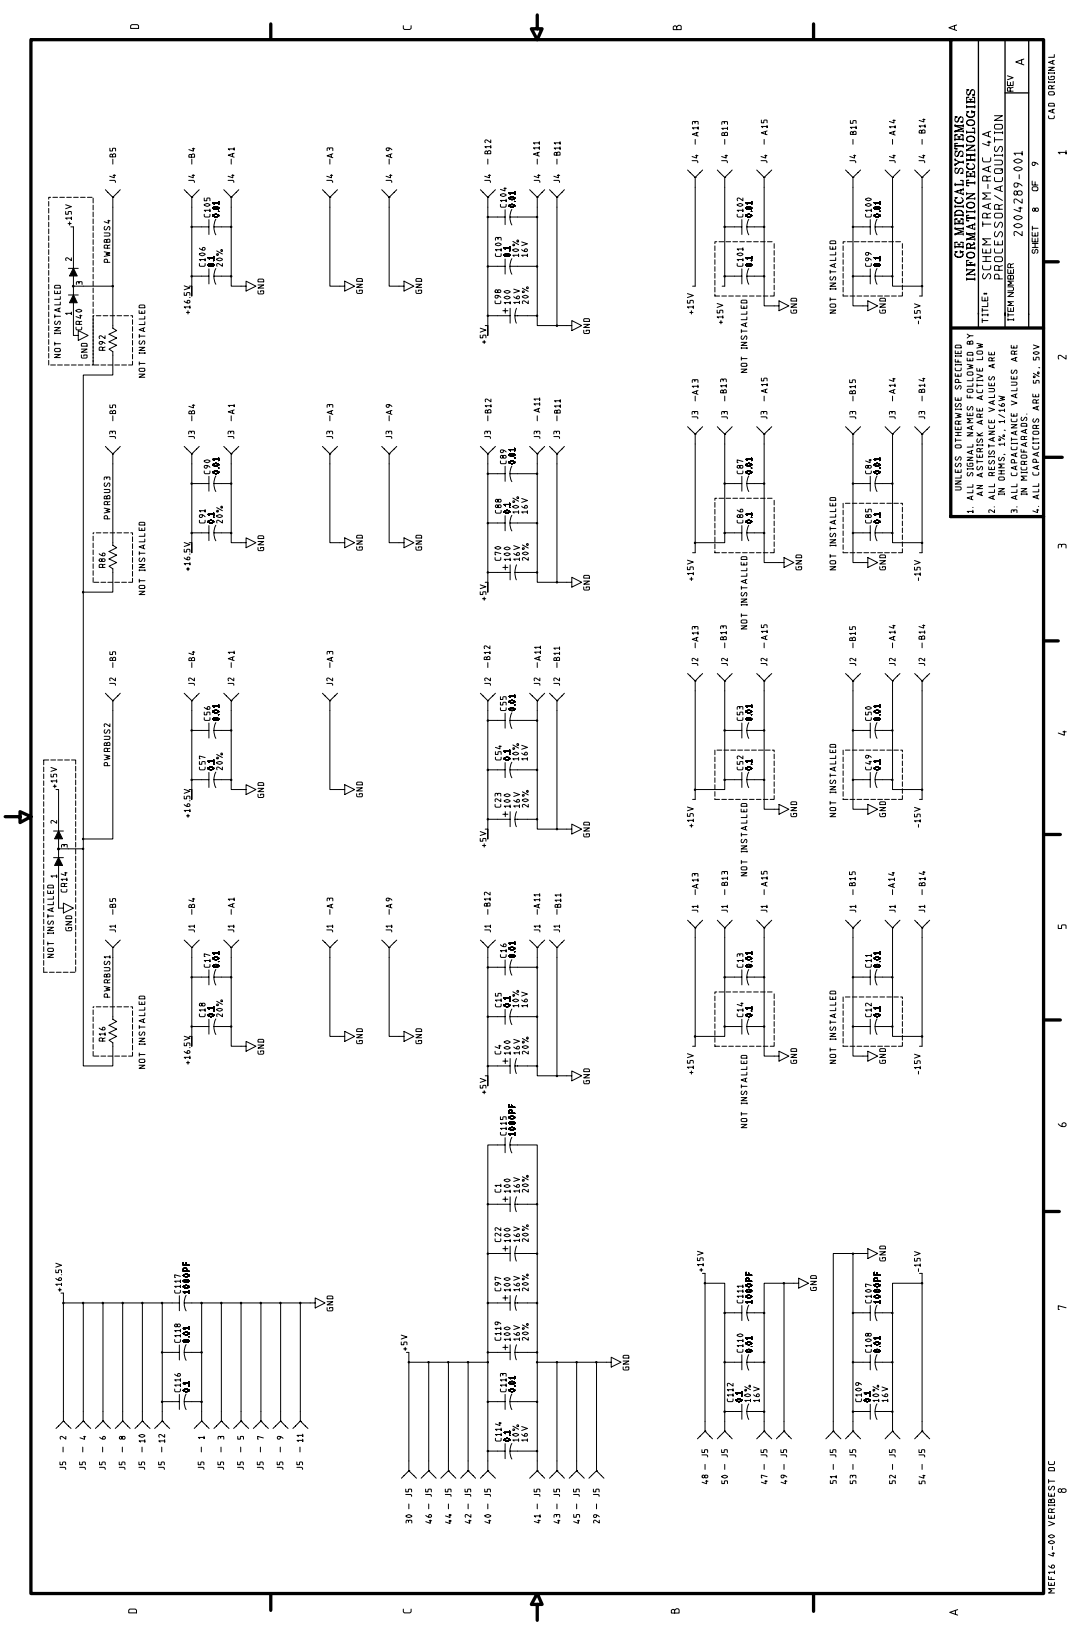
GE MEDICAL SYSTEMS
INFORMATION TECHNOLOGIES
TITLE: SCHEM TRAM-RAC 4A
PROCESSOR/ACQUISITION
ITEM NUMBER 2004289-001
REV A
SHEET 8 OF 9
CAD ORIGINAL
UNLESS OTHERWISE SPECIFIED
1. ALL SIGNAL NAMES FOLLOWED BY AN ASTERISK ARE ACTIVE LOW
2. ALL RESISTANCE VALUES ARE IN OHMS, 1%, 1/16W
3. ALL CAPACITANCE VALUES ARE IN MICROFARADS
4. ALL CAPACITORS ARE 5%, 50V
PWRBUS1
PWRBUS2
PWRBUS3
PWRBUS4
NOT INSTALLED
+16.5V
+5V
+15V
-15V
GND

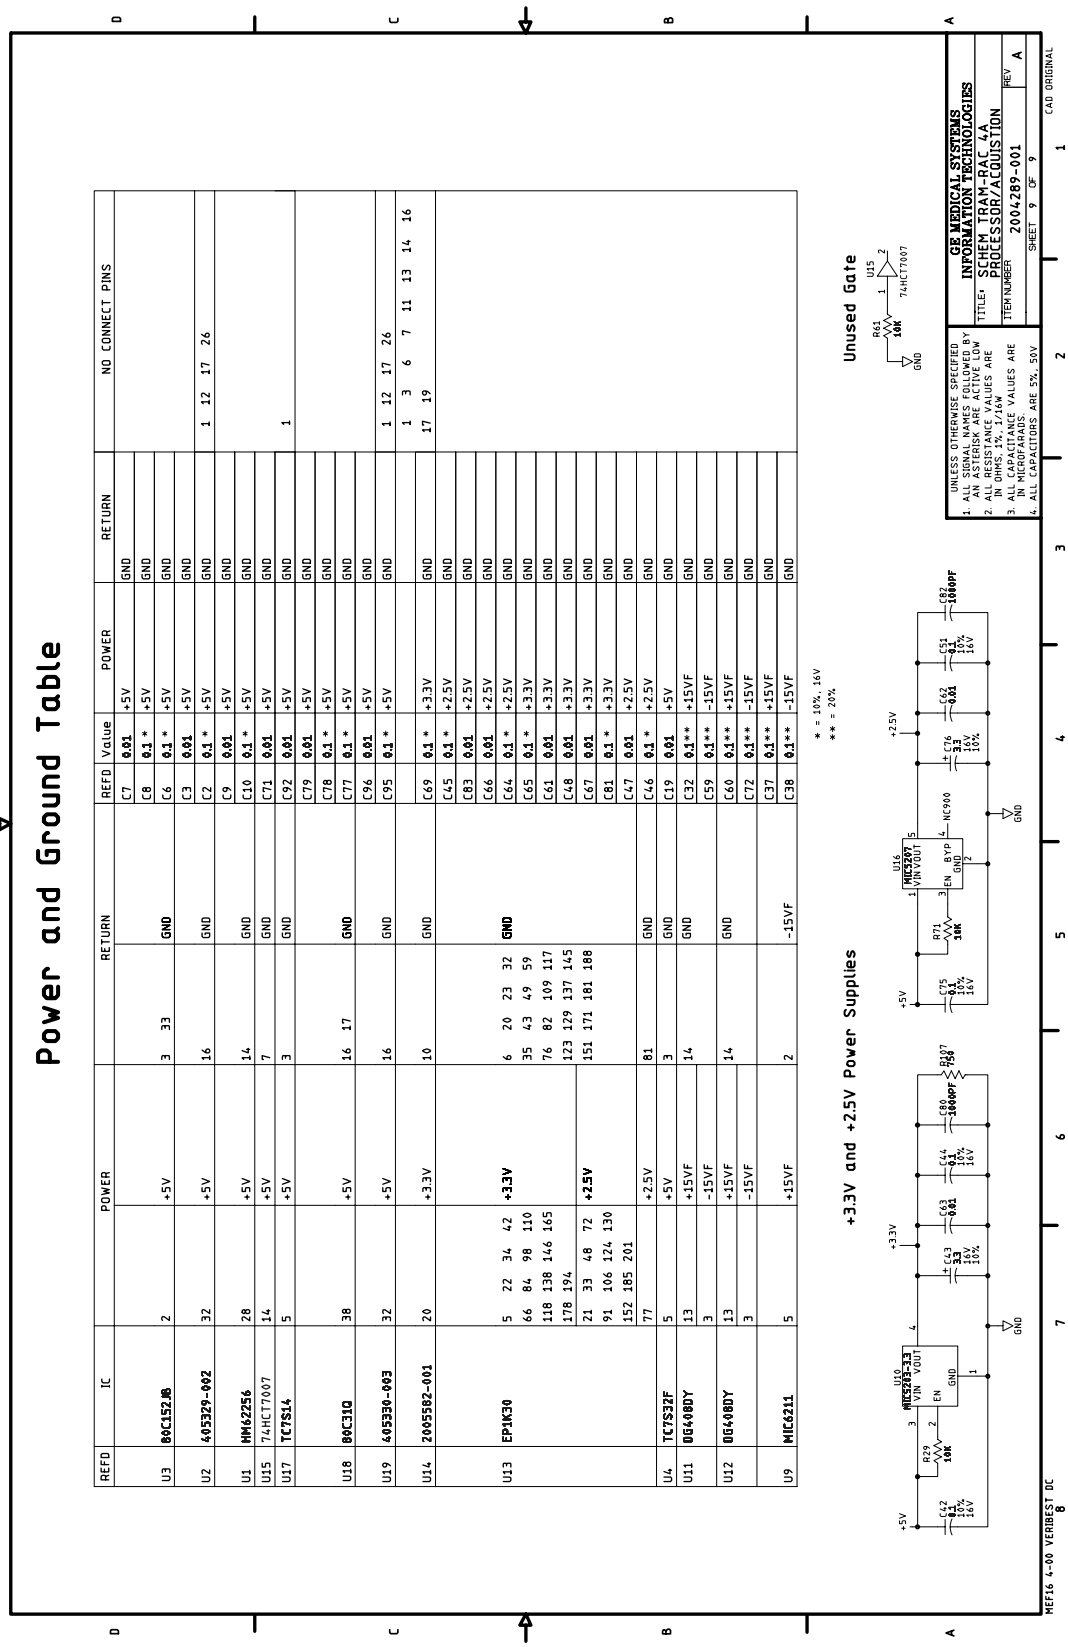
Power and Ground Table
REFD
IC
POWER
RETURN
REFD
Value
POWER
RETURN
NO CONNECT PINS
U3 80C152JB 2 +5V 3 33 GND
U2 405329-002 32 +5V 16 GND
U1 MM62256 28 +5V 14 GND
U15 74HCT7007 14 +5V 7 GND
U17 TC7S14 5 +5V 3 GND
U18 80C31Q 38 +5V 16 17 GND
U19 405330-003 32 +5V 16 GND
U14 2005582-001 20 +3.3V 10 GND
U13 EP1K30 5 22 34 42 66 84 98 110 118 138 146 165 178 194 21 33 48 72 91 106 124 130 152 185 201 +3.3V 6 20 23 32 35 43 49 59 76 82 109 117 123 129 137 145 151 171 181 188 +2.5V GND
U4 TC7S32F 77 +2.5V 81 GND
U11 DG408DY 5 +5V 3 GND
13 +15VF 14 GND
3 -15VF
U12 DG408DY 13 +15VF 14 GND
3 -15VF
U9 MIC6211 5 +15VF 2 -15VF
C7 0.01 +5V
C8 0.1 * +5V
C6 0.1 * +5V
C3 0.01 +5V
C2 0.1 * +5V 1 12 17 26
C9 0.01 +5V
C10 0.1 * +5V
C71 0.01 +5V
C92 0.01 +5V 1
C79 0.01 +5V
C78 0.1 * +5V
C77 0.1 * +5V
C96 0.01 +5V
C95 0.1 * +5V 1 12 17 26
1 3 6 7 11 13 14 16
C69 0.1 * +3.3V
17 19
C45 0.1 * +2.5V
C83 0.01 +2.5V
C66 0.01 +2.5V
C64 0.1 * +2.5V
C65 0.1 * +3.3V
C61 0.01 +3.3V
C48 0.01 +3.3V
C67 0.01 +3.3V
C81 0.1 * +3.3V
C47 0.01 +2.5V
C46 0.1 * +2.5V
C19 0.01 +5V
C32 0.1** +15VF
C59 0.1** -15VF
C60 0.1** +15VF
C72 0.1** -15VF
C37 0.1** +15VF
C38 0.1** -15VF
GND
* = 10%, 16V
** = 20%
+3.3V and +2.5V Power Supplies
Unused Gate
R61 10K
U15 74HCT7007
GND
UNLESS OTHERWISE SPECIFIED
1. ALL SIGNAL NAMES FOLLOWED BY AN ASTERISK ARE ACTIVE LOW
2. ALL RESISTANCE VALUES ARE IN OHMS, 1%, 1/16W
3. ALL CAPACITANCE VALUES ARE IN MICROFARADS
4. ALL CAPACITORS ARE 5%, 50V
GE MEDICAL SYSTEMS
INFORMATION TECHNOLOGIES
TITLE: SCHEM,TRAM-RAC 4A
PROCESSOR/ACQUISITION
ITEM NUMBER 2004289-001
REV A
SHEET 9 OF 9
CAD ORIGINAL
MEF16 4-00 VERIBEST DC

For your notes

7 Tram-rac 4A Interface PCB

For your notes

Theory of Operation

Overview

Several functions are performed by the Tram-rac 4A Interface PCB. Two Tram-net connections and interfaces are provided, one for the patient monitor data and one for an auxiliary device. The analog output circuitry to generate eight analog waveforms and output connector are provided. Five additional analog outputs are supplied from the data acquisition PCB to the analog output connector. The PCB may be configured either to take input power from a patient monitor, or to accept the AC power supply (-002 version). A DC/DC converter residing on this PCB produces +5 V and ±15 V power for the Tram-rac 4A housing and discrete parameter modules.

This PCB is connected to the Processor Acquisition PCB within the Tram-rac 4A housing, and is connected to the AC power supply if it is the -002 version.

The functions of the Tram-rac 4A Interface PCB include generation of analog waveform outputs, conversion of DC power for the Tram-rac 4A housing, and providing interfaces to the upper and lower levels of the Tram-net network. Each of these functions is discussed next in detail.

Block Diagram

The architecture of the Tram-rac 4A Interface PCB is illustrated in the block diagram below.

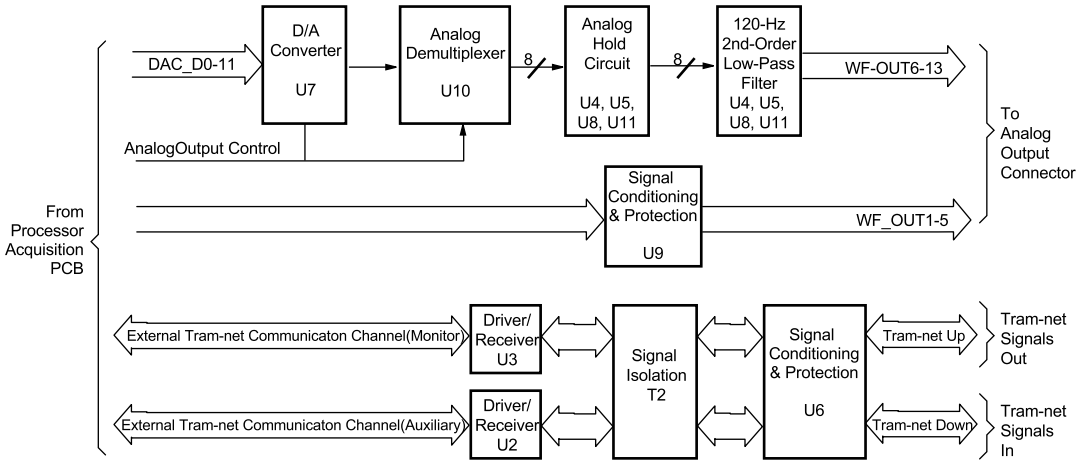

Analog Waveform Generation

In addition to five analog waveforms provided by the Processor Acquisition PCB, the Interface PCB produces eight analog waveform outputs. These waveforms are generated using an 12-bit digital-to-analog converter (DAC) U7. The DAS control processor on the Tram-rac 4A Processor Acquisition PCB controls DAC U7 to produce sequential samples of the eight analog signals. Each analog signal consists of 240 samples per second, so a total of 1920 samples are output each second. The individual analog signals are demultiplexed from the output of the DAC by analog multiplexer U10 which is configured as a 1-to-8 demultiplexer under control of the DAS control processor on the Tram-rac4A Processor Acquisition PCB.

The demultiplexer circuit feeds eight analog hold circuits which hold the analog samples until they are refreshed by the DAC with the next samples. Finally, the analog signals are filtered to remove the high-frequencies introduced by the digital sampling process. The signals are supplied to external devices through a 15-pin subminiature D-type connector.

Digital-to-Analog Converter

A12-bit DAC U7 with built-in voltage reference and output amplifier. It produces a voltage output with 1 LSB maximum linearity error. It is configured for bipolar ±10 V operation. The gain error is 0.2% maximum, and the typical zero error is ±10 mV (±20 mV maximum).

The data bus and control signals for U7 come from the Tram-rac4 Processor Acquisition PCB.

Analog Demultiplexer

The analog multiplexer U10 is configured as a 1-to-8 demultiplexer. It consists of eight bi-directional switches with one side of each switch common with all switches. The maximum switch on-resistance is 550 ohms. The switches guarantee break-before-make action to avoid interference between channels.

Analog Hold Circuit

The analog hold circuit consists of a 4700 pF hold capacitor (C5, C13, C16, C26, C30, C34, C42, and C49) with a 249 ohm current-limiting resistor (R7, R11, R18, R23, R29, R35, R39, and R48) at the input and a voltage-follower operational amplifier (U4A, U5A, U8A, and U11A) circuit at the output. The operational amplifier circuit provides a high impedance to the hold capacitor so that it has a negligible effect on the capacitor's charge between refresh samples by the DAC. The series resistor, along with the on-resistance of the multiplexer U10, limit the charge/discharge current of the hold capacitor to damp its response to step changes in voltages due to the DAC. The dwell time for each sample (as determined by the DAS control processor on the Tram-rac4A Processor Acquisition PCB) must be at least ten times longer than the R-C time constant of 3.8 us (maximum).

Low-Pass Filter

A two-pole, Butterworth, low-pass filter using U4B, U5B, U8B, and U11B is employed to remove the high-frequency steps caused by the DAC as it produces successive samples of the analog waveform. The low-pass cut-off frequency of the filter is 120 Hz, which is half the sample rate of the analog waveform. The offset error attributable to the low-pass filter is typically 4 mV (10 mV maximum). The maximum gain error is 2% due to the use of 1% tolerance resistors to set the gain.

Tram Analog Outputs

Five analog signals, which typically are produced by a Tram module inserted in the Tram-rac 4A housing, are included with the analog outputs generated by the Tram-rac 4A housing on the same output connector. These signals are not filtered or buffered. They are, however, protected from over-voltage and electrostatic discharge by the diode array U9.

Electrostatic Discharge Protection

A single diode array U6 is used to protect all of the analog output signals from excessive voltages typically caused by electrostatic discharge (ESD). The signals are clamped to the ±15 V power supplies if they exceed that voltage range.

Tram-net Interfaces

The Tram-rac 4A housing appears as a six-port intermediate hub on the Tram-net communication network. Two Tram-net interfaces are provided on the Tram-rac4 Interface PCB. One interface is the upward path toward the header hub (contained within the patient monitor) of the Tram-net network. The second interface, the auxiliary channel, is one of the six ports available to the next device downward along the network path from the Tram-rac 4A housing.

Transceiver Circuit

Both Tram-net interfaces use identical transceiver circuits. A dual differential line driver/receiver (U2 and U3) is used for each interface. This device contains two driver/receiver pairs. One pair is used to perform the TTL-to-differential signal level conversion between the digital logic and isolation transformers which couple to the Tram-net media.

The other receiver is used to implement a squelch receiver. The squelch receiver biases its input away from the idle-line voltage level to reject noise received on the data lines. This makes the receiver less sensitive to noise, but also distorts the shape of the waveform received by the squelch receiver. The waveshape is not important since the squelch receiver is only used by the hub circuit to detect activity. Once the hub circuit detects activity, the normal receiver interprets the signals. The squelch receiver is biased negatively by 250 mV (minimum) using an external resistor divider network.

Media Interface

The transceiver circuit is isolated from the media (twisted-pair wire) by a pulse transformer T2. The receive channel is terminated in 110 ohms, the characteristic impedance of the media.

The Tram-rac 4A housing attaches to the media by a 9-pin subminiature D-type connector. A male connector on the Tram-rac 4A housing interfaces to the upper-level hub; a female connector interfaces to the lower-level device or hub.

Power Generation and Distribution

The Tram-rac4 Interface PCB receives +16.5 V power into the Tram-rac 4A housing, converts it to +5 V and ±15 V, and then distributes all four voltages to other parts of the Tram-rac 4A housing. The +16.5 V power is received either from the patient monitor via the upper-level hub Tram-net connector, or from the Tram-rac power supply which connects directly to the interface PCB via a 15-pin subminiature D connector. The two configurations account for the two versions of the PCB assembly which are available, the -001 and -002, respectively.

DC/DC Converter

A DC/DC converter U1 is used to generate +5 V and ±15 V power from the +16.5 V source. Since the +5 V output is limited to considerably less than its maximum capability, the ±15 V outputs are capable of delivering a greater maximum current than specified in the data sheets. The output of the DC/DC converter is limited to 25 W total. The DC/DC converter has a soft-start circuit at its input to limit the current surge when a Tram-rac 4A housing is connected while the patient monitor is powered.

Signal Conditioning

The -001 version provides signal conditioning with choke T1 and MOS-FET Q1.

NOTE

The Tram-net **IN** connector has a plastic shell when the power supply is installed to isolate chassis ground. Otherwise, it has a metal shell to connect the chassis ground of the monitor. Use plastic screws to secure the plastic connector to avoid making the chassis ground connection.

Indicators and Controls

Listed below is the function of any indicators, switches, jumpers, or controls located on the Tram-rac4 Interface PCB. There are no calibration procedures due to the complexity of the circuitry.

Table 1. Interface PCB Indicators

LED/Color	Signal Name	Function	Normal Condition
DS1/Red	Network Activity from Auxiliary Device	"I hear talking on Tram-net"	■ Flickers ON[1] only if auxiliary device connected ■ ON steady while graphing
DS2/Red	Transmit Enable to Auxiliary Device	"I am talking on Tram-net"	■ Flickers ON[1] only if auxiliary device connected ■ ON steady while graphing
DS3/Red	Network Activity from Monitor	"I hear talking on Tram-net"	■ Flickers ON[1] ■ ON steady while graphing
DS4/Red	Transmit Enable to Monitor	"I am talking on Tram-net"	■ Flickers ON[1] ■ ON steady while graphing

NOTE

[1]Because "I hear when I am talking', the "talking" LED flashes with the "hearing" LED, but the "hearing" LED also flashes alone when it "hears someone else talking."

Input and Output Connectors

The following tables are organized by connector for all connections to the Tram-rac4 Interface PCB. Each signal includes information such as symbol name, pin number, function, and whether it is an input or output.

Table 2. J5 (60-Pin Connector to Processor Acquisition PCB)				
Pin	**Signal Name**	**Signal Level**	**I/O**	**Signal Description**
1, 3, 5, 7, 9, 11	GND	0V	O	**GROUND:** Power return for +16.5V supply.
2, 4, 6, 8, 10, 12	+16.5V	+16.5V	O	**+16.5V POWER:** +16.5V power input for the module slots.
13	EXT_RXD_DN	TTL	O	**EXTERNAL TRAM-NET DOWNWARD PATH RECEIVE DATA:** This signal is the receive data for the external, downward path Tram-net channel.
14	EXT_SQ_DN	TTL	O	**EXTERNAL TRAM-NET DOWNWARD PATH SQUELCH DATA:** This signal is the squelch data for the external, downward path Tram-net channel.
15	EXT_TXD_UP	TTL	I	**EXTERNAL TRAM-NET UPWARD PATH TRANSMIT DATA:** This signal is the transmit data for the external, upward path Tram-net channel.
16	EXT_DEN_UP*	TTL	I	**EXTERNAL TRAM-NET UPWARD PATH DRIVER ENABLE:** This signal is the active-low driver enable for the external, upward path Tram-net channel.
17	EXT_RXD_UP	TTL	O	**EXTERNAL TRAM-NET UPWARD PATH RECEIVE DATA:** This signal is the receive data for the external, upward path Tram-net channel.
18	EXT_SQ_UP	TTL	O	**EXTERNAL TRAM-NET UPWARD PATH SQUELCH DATA:** This signal is the squelch data for the external, upward path Tram-net channel.
19	EXT_TXD_DN	TTL	I	**EXTERNAL TRAM-NET DOWNWARD PATH TRANSMIT DATA:** This signal is the transmit data for the external, downward path Tram-net channel.
20	EXT_DEN_DN*	TTL	I	**EXTERNAL TRAM-NET DOWNWARD PATH DRIVER ENABLE:** This signal is the active-low driver enable for the external, downward path Tram-net channel.
21 22 25 26 27 28 31 32 33 34	DAC_D0 DAC_D1 DAC_D4 DAC_D5 DAC_D6 DAC_D7 DAC_D8 DAC_D9 DAC_D10 DAC_D11	TTL	I	**D/A CONVERTER DATA:** The 12-bit data for the analog
35, 36,	OUT_SEL2,	TTL	I	**ANALOG OUTPUT CHANNEL SELECT:** The analog output
38	ANA_OUT	TTL	I	**ANALOG OUTPUT DEMULTIPLEXER SELECT:** The enable signal for the analog output demultiplexer.
39	DAC*	TTL	I	**DIGITAL-TO-ANALOG CONVERTER DEVICE SELECT:** This active-low signal selects the DAC device during DAC write operations.

Table 2. J5 (60-Pin Connector to Processor Acquisition PCB)				
Pin	**Signal Name**	**Signal Level**	**I/O**	**Signal Description**
29, 41, 43, 45	GND	0V	O	**+5V GROUND:** The return signal for the +5V power supply.
30, 40, 42, 44, 46	+5V	+5V	O	**+5V POWER:** +5V power supply.
47, 49, 51, 53	AGND	0V	O	**ANALOG GROUND:** The return signal for the +15V power supplies.
48, 50	+15V	+15V	O	**+15V POWER:** +15V power supply.
52, 54	-15V	–15V	O	**–15V POWER:** –15V power supply.
55	WF_RTN	0 V	I	**WAVEFORM OUTPUT RETURN (NUMBERS 1 THROUGH 5):** This signal is the reference for waveform outputs 1-5.
56 57 58 59 60	WF_OUT1 WF_OUT2 WF_OUT3 WF_OUT4 WF_OUT5	Analog +/- 10 V	I	**WAVEFORM OUTPUTS NUMBERS 1 THROUGH 5:** Programmable waveform outputs (unbuffered), typically from a Tram or discrete parameter module.

Table 3. Connector J8 (15-Pin Connector to Optional Power Supply)				
Pin	**Signal Name**	**Signal Level**	**I/O**	**Signal Description**
1, 7, 8, Shell	GND	0V	I	**GROUND:** Power return for +16.5V supply, and chassis ground reference.
2, 9	-15V	–15V	I	**–15V POWER:** –15 V power.
3, 10	+15V	+15V	I	**+15V POWER:** +15 V power.
4, 11	AGND	0V	I	**ANALOG GROUND:** +5 V, +15 V, and –15 V power return.
5, 12	+5V	+5V	I	**+5V POWER:** +5 V power.
6	GND_CONV	0V	I	**CONVERTER GROUND:** +16.5 V power return for DC/DC converter.
13	+16.5V_CONV	+16.5V	I	**CONVERTER +16.5V POWER:** +16.5 V power for DC/DC converter.
14, 15	+16.5V	+16.5V	I	**+16.5V POWER:** +16.5 V power.

Table 4. Connector J9 (9-Pin Tram-net Connector to Patient Monitor)				
Pin	**Signal Name**	**Signal Level**	**I/O**	**Signal Description**
1	UP_TX+	Differential	O	**TRAM-NET UPWARD PATH NON-INVERTED TRANSMIT:** Non-inverting driver output to the upper-level hub.
2, 8	GND_IN	0V	I	**GROUND IN:** Power return for +16.5V supply into the Tram-rac 4A housing from the upper-level hub.
3	UP_TX-	Differential	O	**TRAM-NET UPWARD PATH INVERTED TRANSMIT:** Inverting driver output to the upper-level hub.
4, 6	+16.5V_IN	+16.5V	I	**+16.6V POWER IN:** +16.5 V power supply into the Tram-rac 4A housing from the upper-level hub.
5	DN_RX–	Differential	I	**TRAM-NET DOWNWARD PATH INVERTED RECEIVE:** Inverting receiver input from the upper-level hub.
7	Not Used			
9	DN_RX+	Differential	I	**TRAM-NET DOWNWARD PATH NON-INVERTED RECEIVE:** Non-inverting receiver input from the upper-level hub.
Shell	CGND_IN	0V	I	**CHASSIS GROUND IN:** Shield ground into the Tram-rac 4A housing from the upper-level hub.

Table 5. Connector J10 (9-Pin Tram-net Connector to Another Tram-net Device)				
Pin	**Signal Name**	**Signal Level**	**I/O**	**Signal Description**
1	UP_RX+	Differential	O	**TRAM-NET UPWARD PATH NON-INVERTED RECEIVE:** Non-inverting receiver input from the lower-level device or hub.
2, 8	GND_OUT	0V	I	**GROUND OUT:** Power return for +16.5V supply from the Tram-rac 4A housing to the lower-level device or hub.
3	UP_RX-	Differential	O	**TRAM-NET UPWARD PATH INVERTED RECEIVE:** Inverting receiver input from the lower-level device or hub.
4, 6	+16.5V_OUT	+16.5V	I	**+16.5V POWER OUT:** +16.5V power supply from the Tram-rac 4A housing to the lower-level device or hub.
5	DN_TX-	Differential	I	**TRAM-NET DOWNWARD PATH INVERTED TRANSMIT:** Inverting transmitter output to the lower-level device or hub.
7	Not Used			
9	DN_TX+	Differential	I	**TRAM-NET DOWNWARD PATH NON-INVERTED TRANSMIT:** Non-inverting transmitter output to the lower-level device or hub.
Shell	CGND_OUT	0V	I	**CHASSIS GROUND OUT:** Shield ground from the Tram-rac 4A housing to the lower-level device or hub.

Table 6. Connector J11 (15-Pin Analog Output Connector)

NOTE

The Tram module must be in the top slot to receive the Tram signals listed below. For dual BP discrete parameter modules, waveform A is from the right connector and waveform B is from the left connector.

NOTE[1]

The superscript number "1" indicates that this signal remains unchanged after entering the Tram-rac 4A housing and is controlled by Tram module software.

NOTE[2]

The superscript number "2" indicates that this signal is generated by the DAC on the interface PCB assembly.

Pin	Signal Name	Signal Level	Type	Signal Description
1	WF_RTN	0V	O	**WAVEFORM RETURN:** Signal return for WF_OUT1 through WF_OUT5.
2	WF_OUT2[1]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 2:** Analog waveform output number 2, typically waveform Tram Trace 1.
3	WF_OUT4[1]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 4:** Analog waveform output number 4, typically waveform Tram BP3 or SPO2.
4	WF_OUT6[2]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 6:** Analog waveform output number 6, slot 1 waveform A.
5	WF_OUT8[2]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 8:** Analog waveform output number 8, slot 2 waveform A or Tram ART 1 or BP1.
6	WF_OUT10[2]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 10:** Analog waveform output number 10, slot 3 waveform A.
7	WF_OUT12[2]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 12:** Analog waveform output number 12, slot 4 waveform A.
8	AGND	0V	O	**ANALOG GROUND:** Signal return for WF_OUT6 through WF_OUT13.
9	WF_OUT1[1]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 1:** Analog waveform output number 1, typically waveform Tram ECG II.
10	WF_OUT3[1]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 3:** Analog waveform output number 3, typically waveform Tram ECG V.
11	WF_OUT5[1]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 5:** Analog waveform output number 5, slot 2 waveform B or Tram BP4 or RESP.
12	WF_OUT7[2]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 7:** Analog waveform output number 7, slot 1 waveform B.
13	WF_OUT9[2]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 9:** Analog waveform output number 9, slot 2 waveform B or Tram BP2 or SPO2.
14	WF_OUT11[2]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 11:** Analog waveform output number 11, slot 3 waveform B.
15	WF_OUT13[2]	Analog +/–10V	O	**WAVEFORM OUTPUT NO. 13:** Analog waveform output number 13, slot 4 waveform B.
Shell	CGND	0V	O	**CHASSIS GROUND:** Chassis/shield ground

Part Location Diagram PN 800516-001J/002J

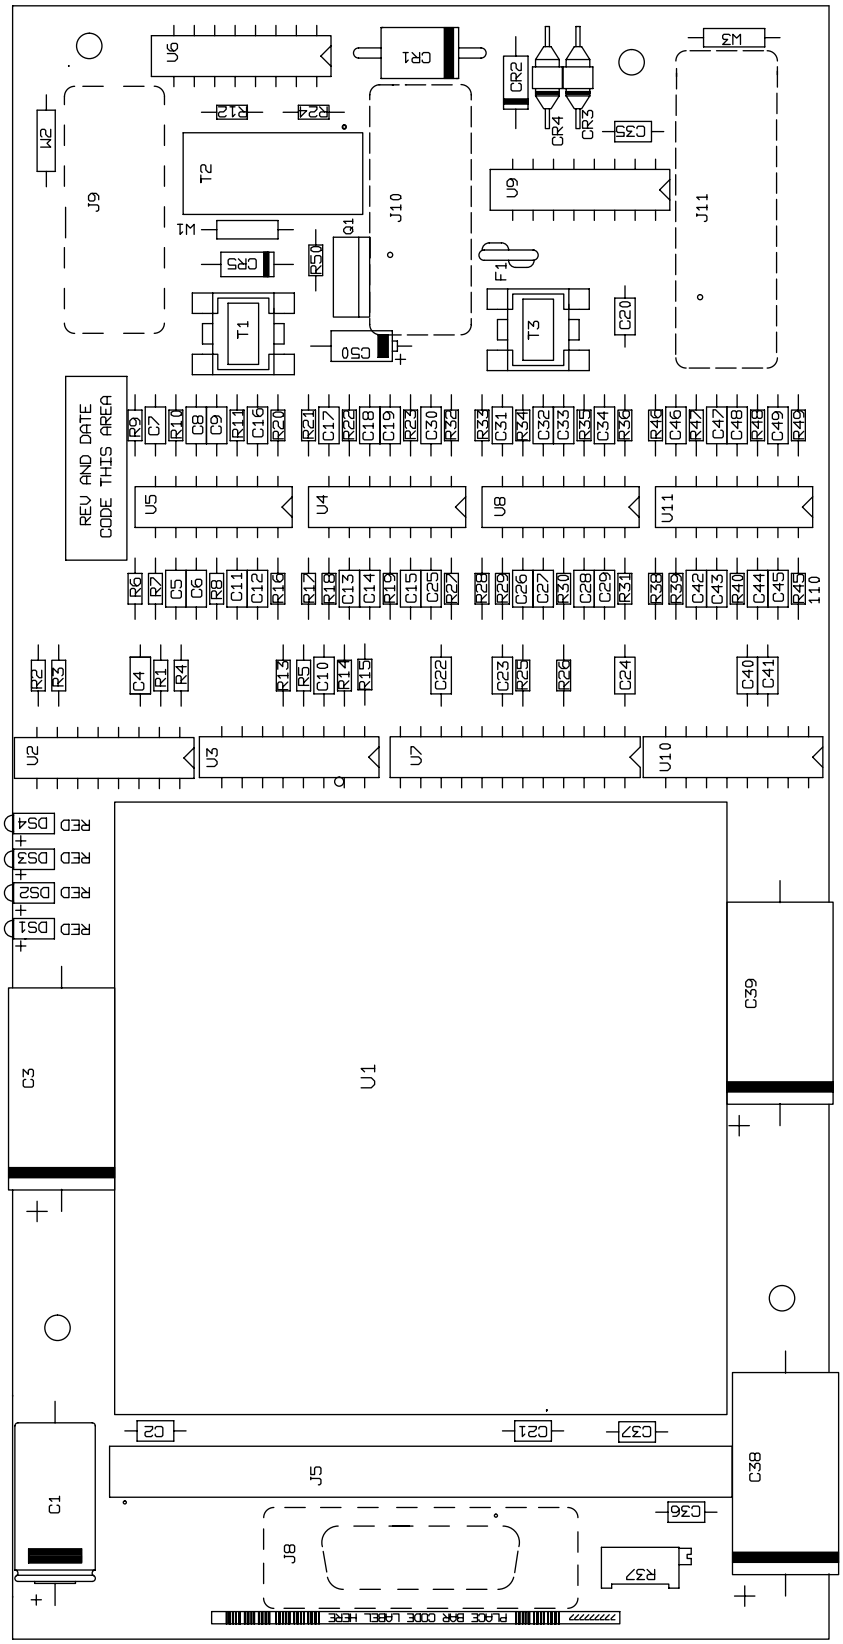

Parts List PN 800516-001

Table 7. Parts List: PN 800516-001			
Reference Designation	**Item Description**	**Item Number**	**Qty**
C1	CAP AL AX 100UF 20% 35V	1265-101	1
C2, 4, 6, 9–10, 14, 19–23, 27, 33, 35–37, 40–41, 43, 48	CAP CER Z5U .1UF +80/-20% 50V	1287-104	20
C3, 38–39	CAP AL 470uF 20% 50V	1264-471	3
C5, 7–8, 11–13, 15–18, 25–26, 28–32, 34, 42, 44–47, 49	CAP CER X7R .0047UF 10% 50V	1282-472	24
C24	CAP CER COG 22PF 10% 50V	1281-220	1
C50	CAP TANT 1.0UF 10% 35V	1224-105	1
CR1	DIODE RECT 4A 100V	2401-410	1
CR2, 5	DIODE RECT 1A 50V 1N4001	2401-001	2
CR3, 4	DIODE TVS515	2002-515	2
DS1–4	DIODE VSBL RED RTANG PC MT 5V	2498-002	4
F1	CURRENT PROT PTC 250MA	1913-025	1
J5	BOARD SPACER .75IN 2X30 .1CTR (See Table 2, "J5 (60-Pin Connector to Processor Acquisition PCB)," on page 7-9)	410676-001	1
J9	CONN D VERT 9M PC MT W/FFS (See Table 4, "Connector J9 (9-Pin Tram-net Connector to Patient Monitor)," on page 7-11)	410573-001	1
J10	CONN D VERT 9F PC MT W/FFS (See Table 5, "Connector J10 (9-Pin Tram-net Connector to Another Tram-net Device)," on page 7-11)	1747-509	1
J11	CONN D VERT 15F PC MT W/FFS (See Table 6, "Connector J11 (15-Pin Analog Output Connector)," on page 7-12)	1747-516	1
Q1	TRANSISTOR MFET P CHAN IRF9531	2706-101	1
R1, 4–5, 7, 11, 15, 18, 23, 29, 35, 39, 48	RES MINI MF 249 1% 1/4W	1023-133	12
R2–3, 13–14	RES MINI MF 4.99K 1% 1/4W	1023-258	4
R6, 8, 10, 17, 19–20, 22, 28, 30, 32, 34, 36, 38, 40, 47, 49–50	RES MINI MF 280K 1% 1/4W	1023-426	17
R9, 12, 16, 21, 24, 27, 31, 33, 45–46	RESISTOR, MINI MF 1% 1/4W 110	1023-100	10
R25–26	RES MINI MF 49.9 1% 1/4W	1023-067	2

Table 7. Parts List: PN 800516-001			
Reference Designation	**Item Description**	**Item Number**	**Qty**
T1, 3	CHOKE COMMON MODE 20UH	407418-001	2
T2	TRANSFORMER QUAD ISO STARLAN	404053-001	1
U1	CONVERTER DC/DC 25W 5V +/-15V	409028-001	1
U2–3	IC DIP DIFF XCVR DUAL DS8923	410461-001	2
U4–5, 8, 11	IC DIP AMPL QUAD MC34184	403321-001	4
U6, 9	IC DIP ESD/OVP ARRAY 14 PAIR	411120-001	2
U7	IC 12 BIT D/A CONVERTER AD767	400643-001	1
U10	IC MUX 8CH MOS 508	3304-508	1
W1–2	RES O OHM	1001-000	2
—	CKT BD TRAM-RAC 4A INTERFACE (See “Part Location Diagram PN 800516-001J/002J” on page 7-13)	800517-001	1
—	SCHEM TRAM-RAC 4A INTER (See “Schematic Diagram PN SD800516-001D” on page 7-18)	SD800516-001	1
—	SCREW BDGH 4-40 X 1/4	45074-408	6

Parts List PN 800516-002

Table 8. Parts List: PN 800516-002			
Ref Des	**Item Description**	**Item Number**	**Qty**
C1	CAP AL AX 100UF 20% 35V	1265-101	1
C2, 4, 6,C9–10, 14, 19–23, 27, 33, 36–37, 40–41, 43, 48	CAP CER Z5U .1UF +80/-20% 50V	1287-104	19
C3, 38–39	CAP AL 470uF 20% 50V	1264-471	3
C5, 7–8, 11–13, 15–C18, 25–26, 28–32, 34, 42, 44–47, 49	CAP CER X7R .0047UF 10% 50V	1282-472	24
C24	CAP CER COG 22PF 10% 50V	1281-220	1
CR3–4	DIODE TVS515	2002-515	2
DS1–4	DIODE VSBL RED RTANG PC MT 5V	2498-002	4
F1	CURRENT PROT PTC 250MA	1913-025	1
J5	BOARD SPACER .75IN 2X30 .1CTR (See Table 2, "J5 (60-Pin Connector to Processor Acquisition PCB)," on page 7-9)	410676-001	1
J8	CONN D PLUG 15 PIN (See Table 3, "Connector J8 (15-Pin Connector to Optional Power Supply)," on page 7-10)	402452-001	1
J9	CONN D VERT 9M PC MT W/FFS (See Table 4, "Connector J9 (9-Pin Tram-net Connector to Patient Monitor)," on page 7-11)	410573-001	1
J10	CONN D VERT 9F PC MT W/FFS (See Table 5, "Connector J10 (9-Pin Tram-net Connector to Another Tram-net Device)," on page 7-11)	1747-509	1
J11	CONN D VERT 15F PC MT W/FFS (See Table 6, "Connector J11 (15-Pin Analog Output Connector)," on page 7-12)	1747-516	1
R1, 4–5, 7, 11, 15, 18, 23, 29, 35, 39, 48	RES MINI MF 249 1% 1/4W	1023-133	12
R2–3, 13–14	RES MINI MF 4.99K 1% 1/4W	1023-258	4
R6, 8, 10, 17, 19–20, 22, 28, 30, 32, 34, 36, 38, 40, 47, 49	RES MINI MF 280K 1% 1/4W	1023-426	16
R9, 12, 16, 21, 24, 27, 31, 33, 45–46	RESISTOR, MINI MF 1% 1/4W 110	1023-100	10
R25–26	RES MINI MF 49.9 1% 1/4W	1023-067	2
T2	TRANSFORMER QUAD ISO STARLAN	404053-001	1

Table 8. Parts List: PN 800516-002			
Ref Des	**Item Description**	**Item Number**	**Qty**
T3	CHOKE COMMON MODE 20UH	407418-001	1
U1	CONVERTER DC/DC 25W 5V +/-15V	409028-001	1
U2–3	IC DIP DIFF XCVR DUAL DS8923	410461-001	2
U4–5, 8, 11	IC DIP AMPL QUAD MC34184	403321-001	4
U6, 9	IC DIP ESD/OVP ARRAY 14 PAIR	411120-001	2
U7	IC 12 BIT D/A CONVERTER AD767	400643-001	1
U10	IC MUX 8CH MOS 508	3304-508	1
—	CKT BD TRAM-RAC 4A INTERFACE (See “Part Location Diagram PN 800516-001J/002J” on page 7-13)	800517-001	1
—	SCHEM TRAM-RAC 4A INTER (See “Schematic Diagram PN SD800516-001D” on page 7-18)	SD800516-001	1
—	SCREW BDGH 4-40 X 1/4	45074-408	6

Schematic Diagram PN SD800516-001D

1 of 7

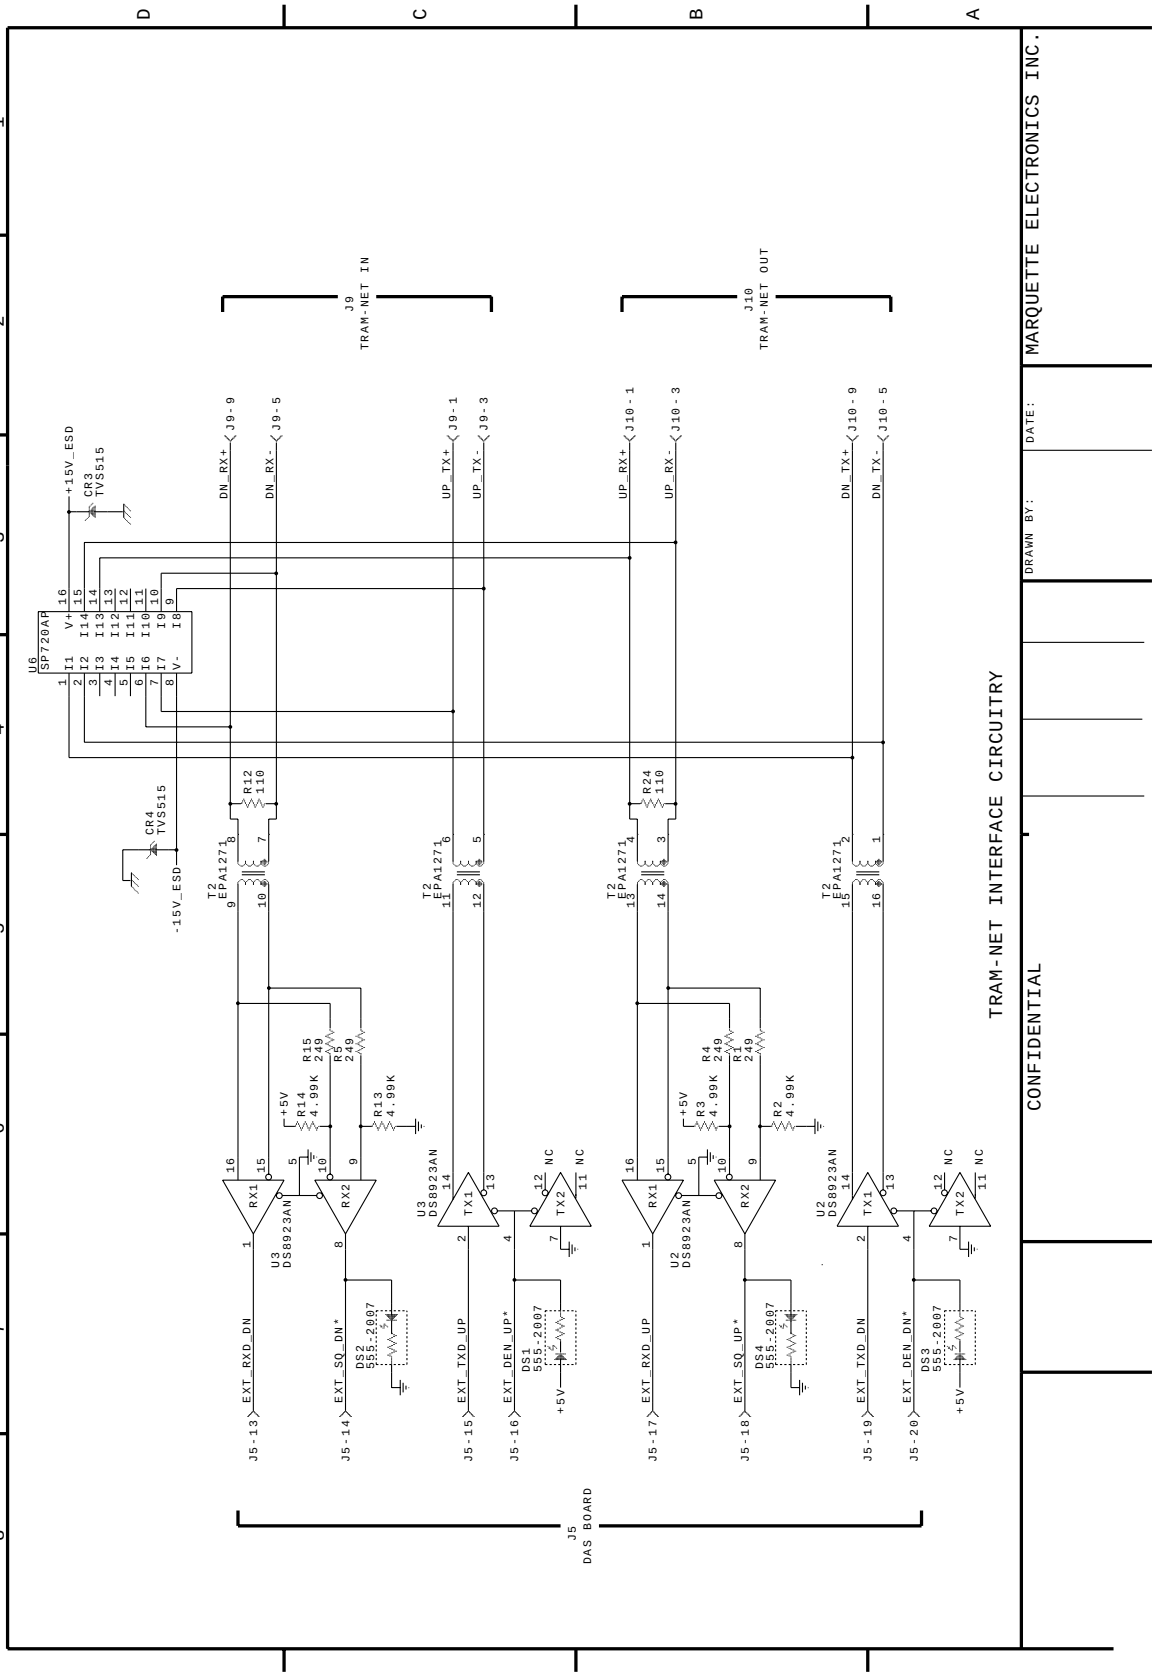

2 of 7

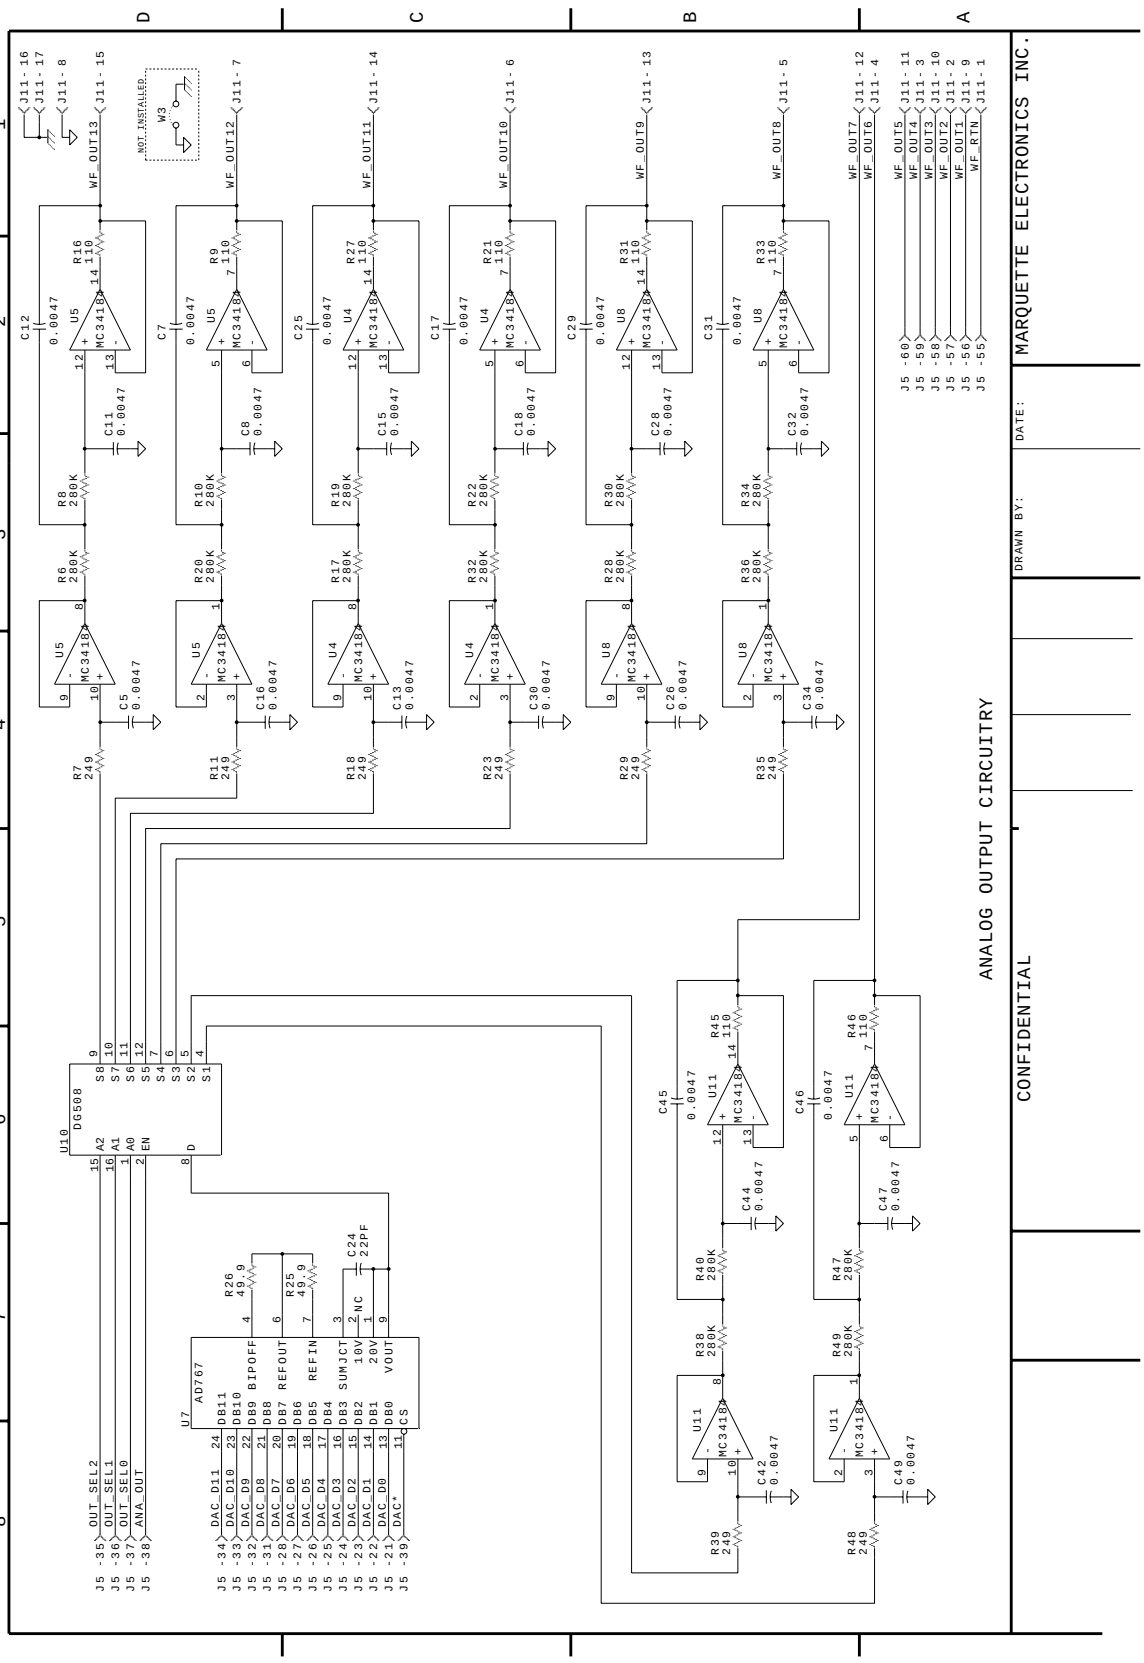
ANALOG OUTPUT CIRCUITRY
CONFIDENTIAL
MARQUETTE ELECTRONICS INC.
DRAWN BY:
DATE:
NOT INSTALLED
U10 DG508
U7 AD767
U5 MC3418
U4 MC3418
U8 MC3418
U11 MC3418
OUT_SEL2
OUT_SEL1
OUT_SEL0
ANA_OUT
DAC*
WF_OUT13
WF_OUT12
WF_OUT11
WF_OUT10
WF_OUT9
WF_OUT8
WF_OUT7
WF_OUT6
WF_OUT5
WF_OUT4
WF_OUT3
WF_OUT2
WF_OUT1
WF_RTN

3 of 7

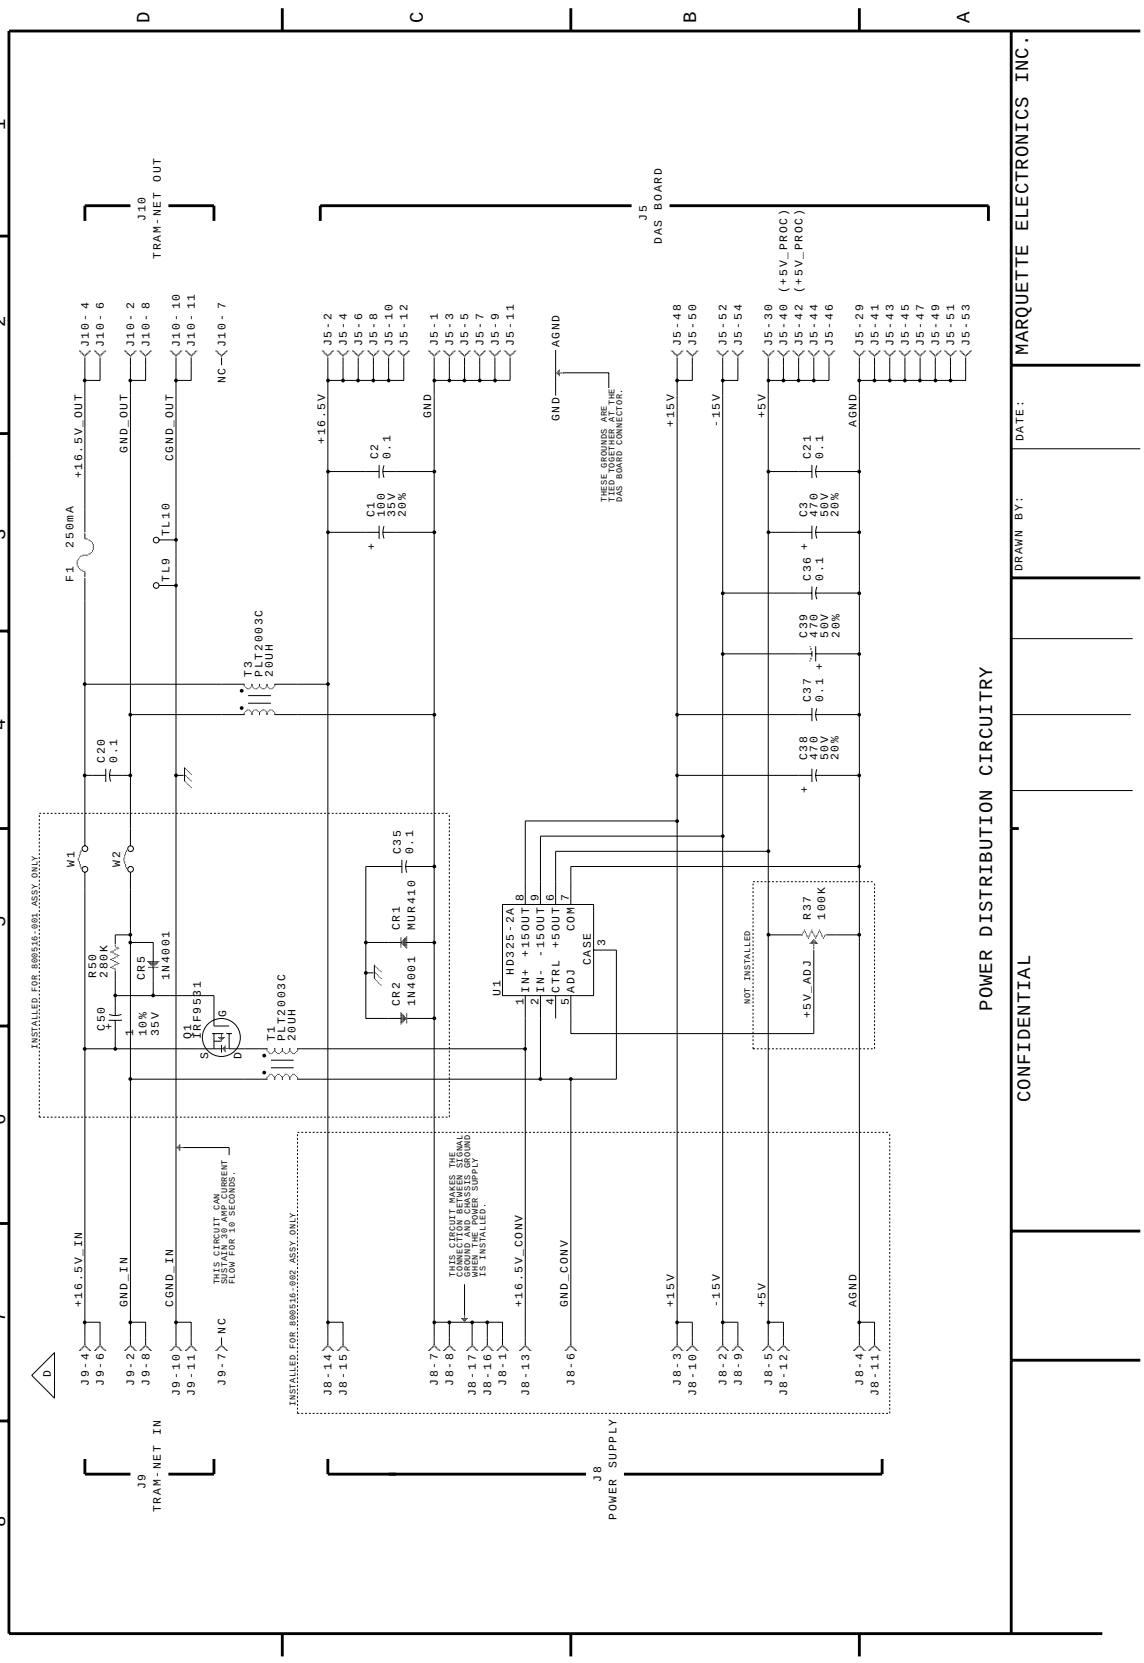
POWER DISTRIBUTION CIRCUITRY
MARQUETTE ELECTRONICS INC.
CONFIDENTIAL
DRAWN BY:
DATE:
J9 TRAM-NET IN
J10 TRAM-NET OUT
J5 DAS BOARD
J8 POWER SUPPLY
+16.5V_IN
GND_IN
CGND_IN
+16.5V_OUT
GND_OUT
CGND_OUT
+16.5V
GND
AGND
+15V
-15V
+5V
+5V_PROC
+16.5V_CONV
GND_CONV
F1 250mA
W1
W2
R50 280K
C50 1 10% 35V
CR5 1N4001
Q1 IRF9531
C20 0.1
C1 100 50V 20%
C2 0.1
C35 0.1
CR1 MUR410
CR2 1N4001
T1 PLT2003C 20UH
T3 PLT2003C 20UH
U1 HD325-2A
IN+ +150UT
IN- -150UT
CTRL +5OUT
ADJ COM
CASE
C36 0.1
C37 0.1
C38 470 50V 20%
C39 470 50V 20%
C3 470 50V 20%
C21 0.1
R37 100K
+5V_ADJ
NOT INSTALLED
INSTALLED FOR 800516-001 ASSY ONLY
INSTALLED FOR 800516-002 ASSY ONLY
THIS CIRCUIT CAN SUPPLY MAXIMUM CURRENT FLOW FOR 10 SECONDS.
THIS CIRCUIT MAKES THE CONNECTION BETWEEN GROUND AND CHASSIS GROUND WHEN THE POWER SUPPLY IS INSTALLED.
THESE GROUNDS ARE AT THE SAME POTENTIAL AT THE DAS BOARD CONNECTOR.

4 of 7

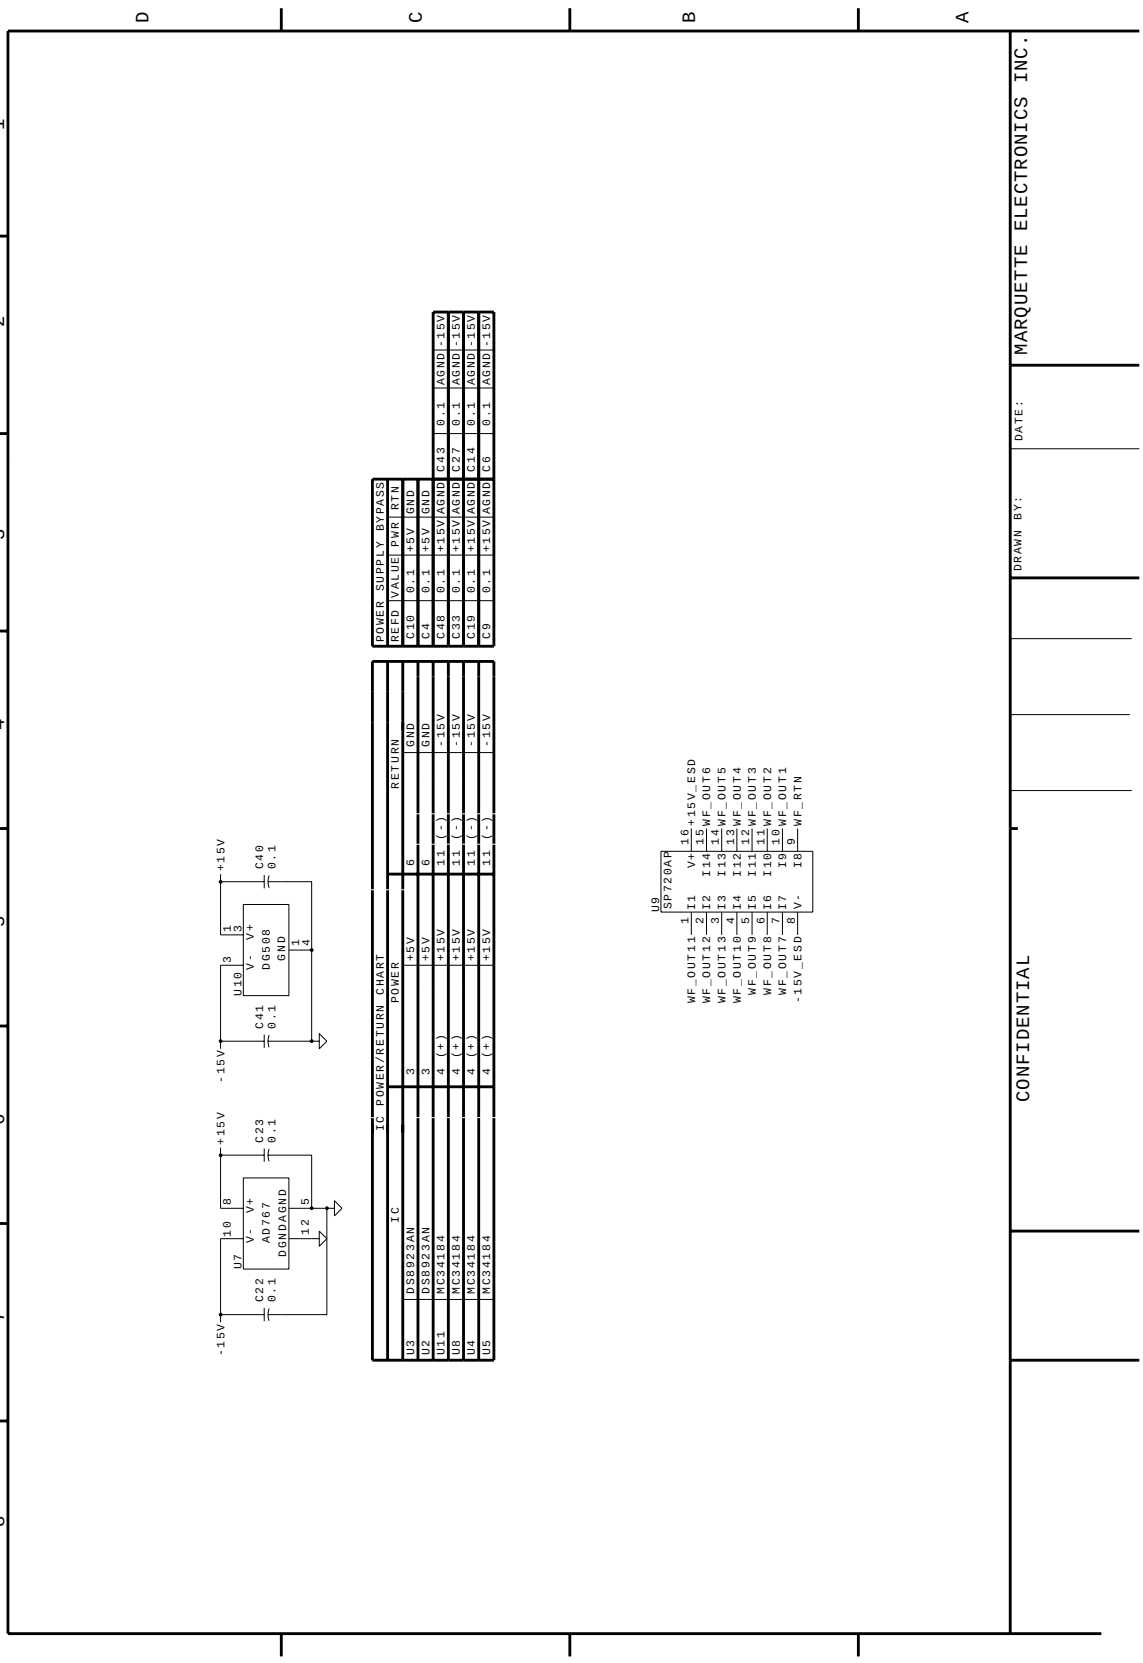
CONFIDENTIAL
MARQUETTE ELECTRONICS INC.
DRAWN BY:
DATE:
IC POWER/RETURN CHART
IC
POWER
RETURN
U3 DS8923AN 3 +5V 6 GND
U2 DS8923AN 3 +5V 6 GND
U11 MC34184 4 (+) +15V 11 (-) -15V
U8 MC34184 4 (+) +15V 11 (-) -15V
U4 MC34184 4 (+) +15V 11 (-) -15V
U5 MC34184 4 (+) +15V 11 (-) -15V
POWER SUPPLY BYPASS
REFD VALUE PWR RTN
C10 0.1 +5V GND
C4 0.1 +5V GND
C48 0.1 +15V AGND
C33 0.1 +15V AGND
C19 0.1 +15V AGND
C9 0.1 +15V AGND
C43 0.1 AGND -15V
C27 0.1 AGND -15V
C14 0.1 AGND -15V
C6 0.1 AGND -15V
U9
SP720AR
WF_OUT11 1 I1
WF_OUT12 2 I2
WF_OUT13 3 I3
WF_OUT10 4 I4
WF_OUT9 5 I5
WF_OUT8 6 I6
WF_OUT7 7 I7
-15V_ESD 8 V-
V+ 16 +15V_ESD
I14 15 WF_OUT6
I13 14 WF_OUT5
I12 13 WF_OUT4
I11 12 WF_OUT3
I10 11 WF_OUT2
I9 10 WF_OUT1
I8 9 WF_RTN
U7
AD767
C22 0.1
C23 0.1
U10
DG508
C41 0.1
C40 0.1
+15V
-15V

5 of 7

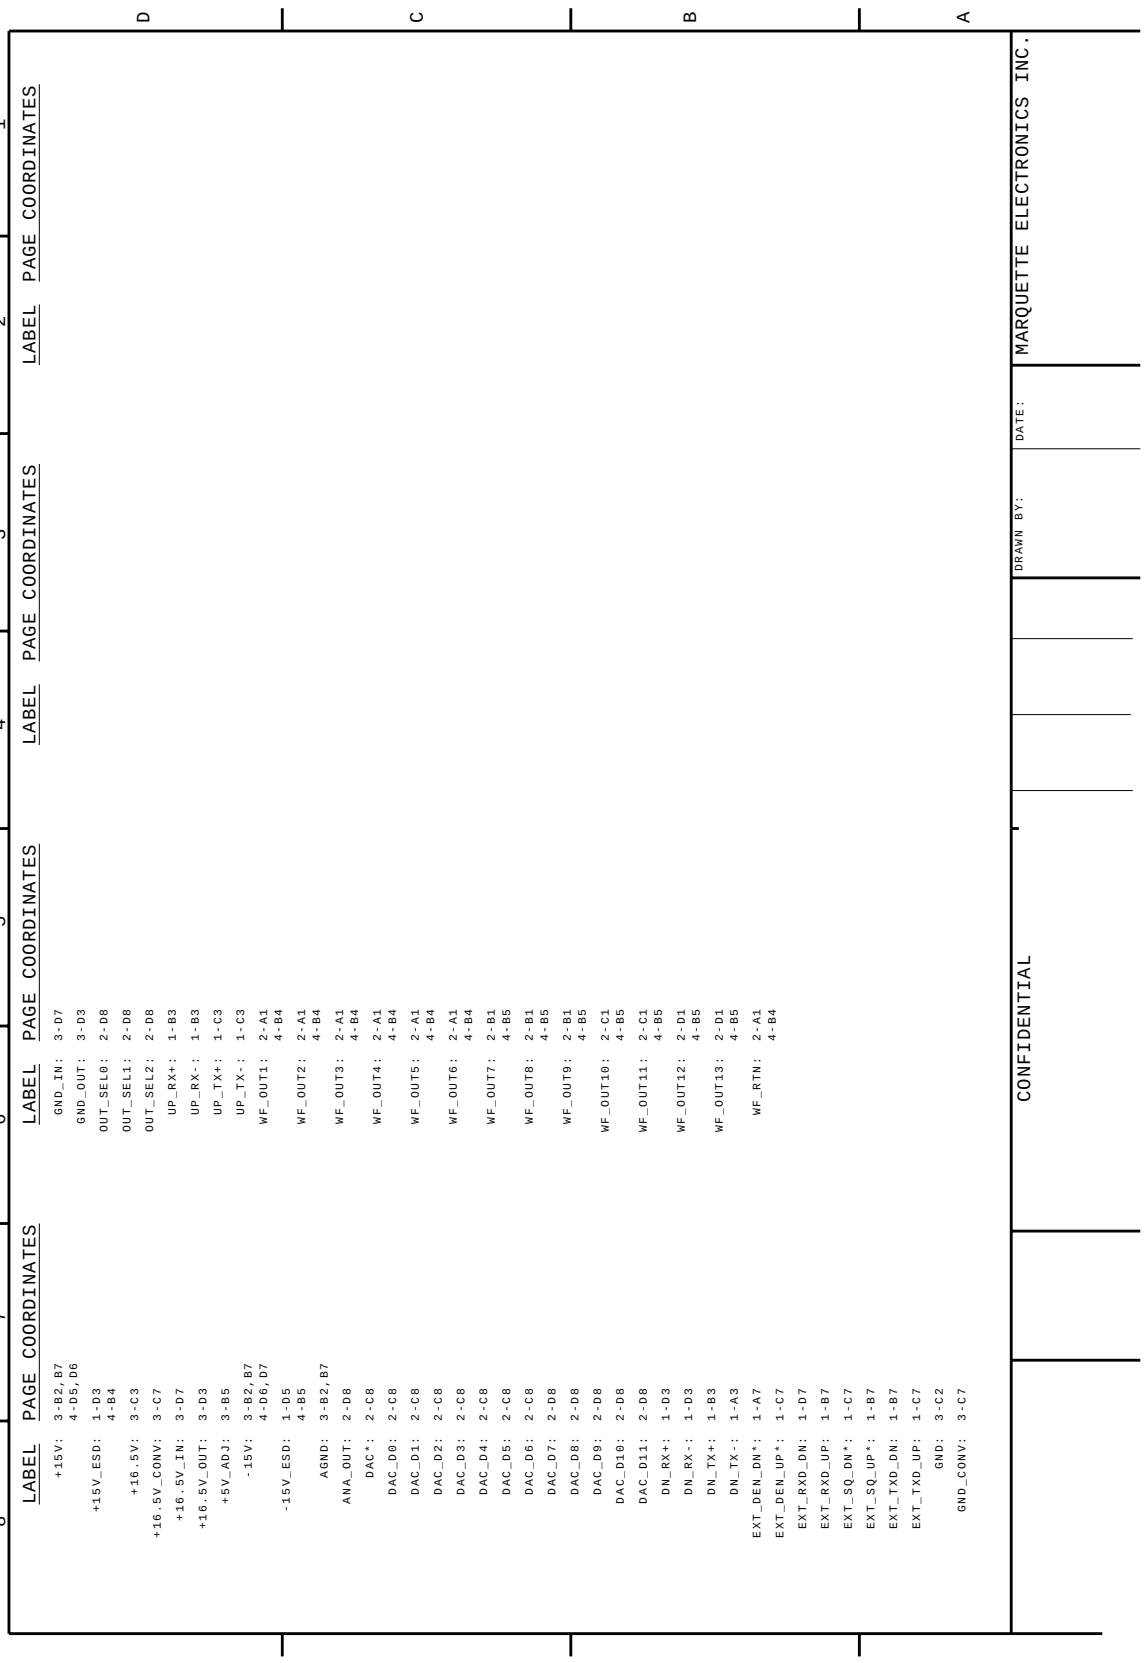
LABEL PAGE COORDINATES
+15V: 3-B2, B7
4-D5, D6
+15V_ESD: 1-D3
4-B4
+16.5V: 3-C3
+16.5V_CONV: 3-C7
+16.5V_IN: 3-D7
+16.5V_OUT: 3-D3
+5V_ADJ: 3-B5
-15V: 3-B2, B7
4-D6, D7
-15V_ESD: 1-D5
4-B5
AGND: 3-B2, B7
ANA_OUT: 2-D8
DAC*: 2-C8
DAC_D0: 2-C8
DAC_D1: 2-C8
DAC_D2: 2-C8
DAC_D3: 2-C8
DAC_D4: 2-C8
DAC_D5: 2-C8
DAC_D6: 2-C8
DAC_D7: 2-D8
DAC_D8: 2-D8
DAC_D9: 2-D8
DAC_D10: 2-D8
DAC_D11: 2-D8
DN_RX+: 1-D3
DN_RX-: 1-D3
DN_TX+: 1-B3
DN_TX-: 1-A3
EXT_DEN_DN*: 1-A7
EXT_DEN_UP*: 1-C7
EXT_RXD_DN: 1-D7
EXT_RXD_UP: 1-B7
EXT_SQ_DN*: 1-C7
EXT_SQ_UP*: 1-B7
EXT_TXD_DN: 1-B7
EXT_TXD_UP: 1-C7
GND: 3-C2
GND_CONV: 3-C7
LABEL PAGE COORDINATES
GND_IN: 3-D7
GND_OUT: 3-D3
OUT_SEL0: 2-D8
OUT_SEL1: 2-D8
OUT_SEL2: 2-D8
UP_RX+: 1-B3
UP_RX-: 1-B3
UP_TX+: 1-C3
UP_TX-: 1-C3
WF_OUT1: 2-A1
4-B4
WF_OUT2: 2-A1
4-B4
WF_OUT3: 2-A1
4-B4
WF_OUT4: 2-A1
4-B4
WF_OUT5: 2-A1
4-B4
WF_OUT6: 2-A1
4-B4
WF_OUT7: 2-B1
4-B5
WF_OUT8: 2-B1
4-B5
WF_OUT9: 2-B1
4-B5
WF_OUT10: 2-C1
4-B5
WF_OUT11: 2-C1
4-B5
WF_OUT12: 2-D1
4-B5
WF_OUT13: 2-D1
4-B5
WF_RTN: 2-A1
4-B4
LABEL PAGE COORDINATES
LABEL PAGE COORDINATES
CONFIDENTIAL
DRAWN BY:
DATE:
MARQUETTE ELECTRONICS INC.
D
C
B
A
1
2
3
4
5
6
7
8

6 of 7

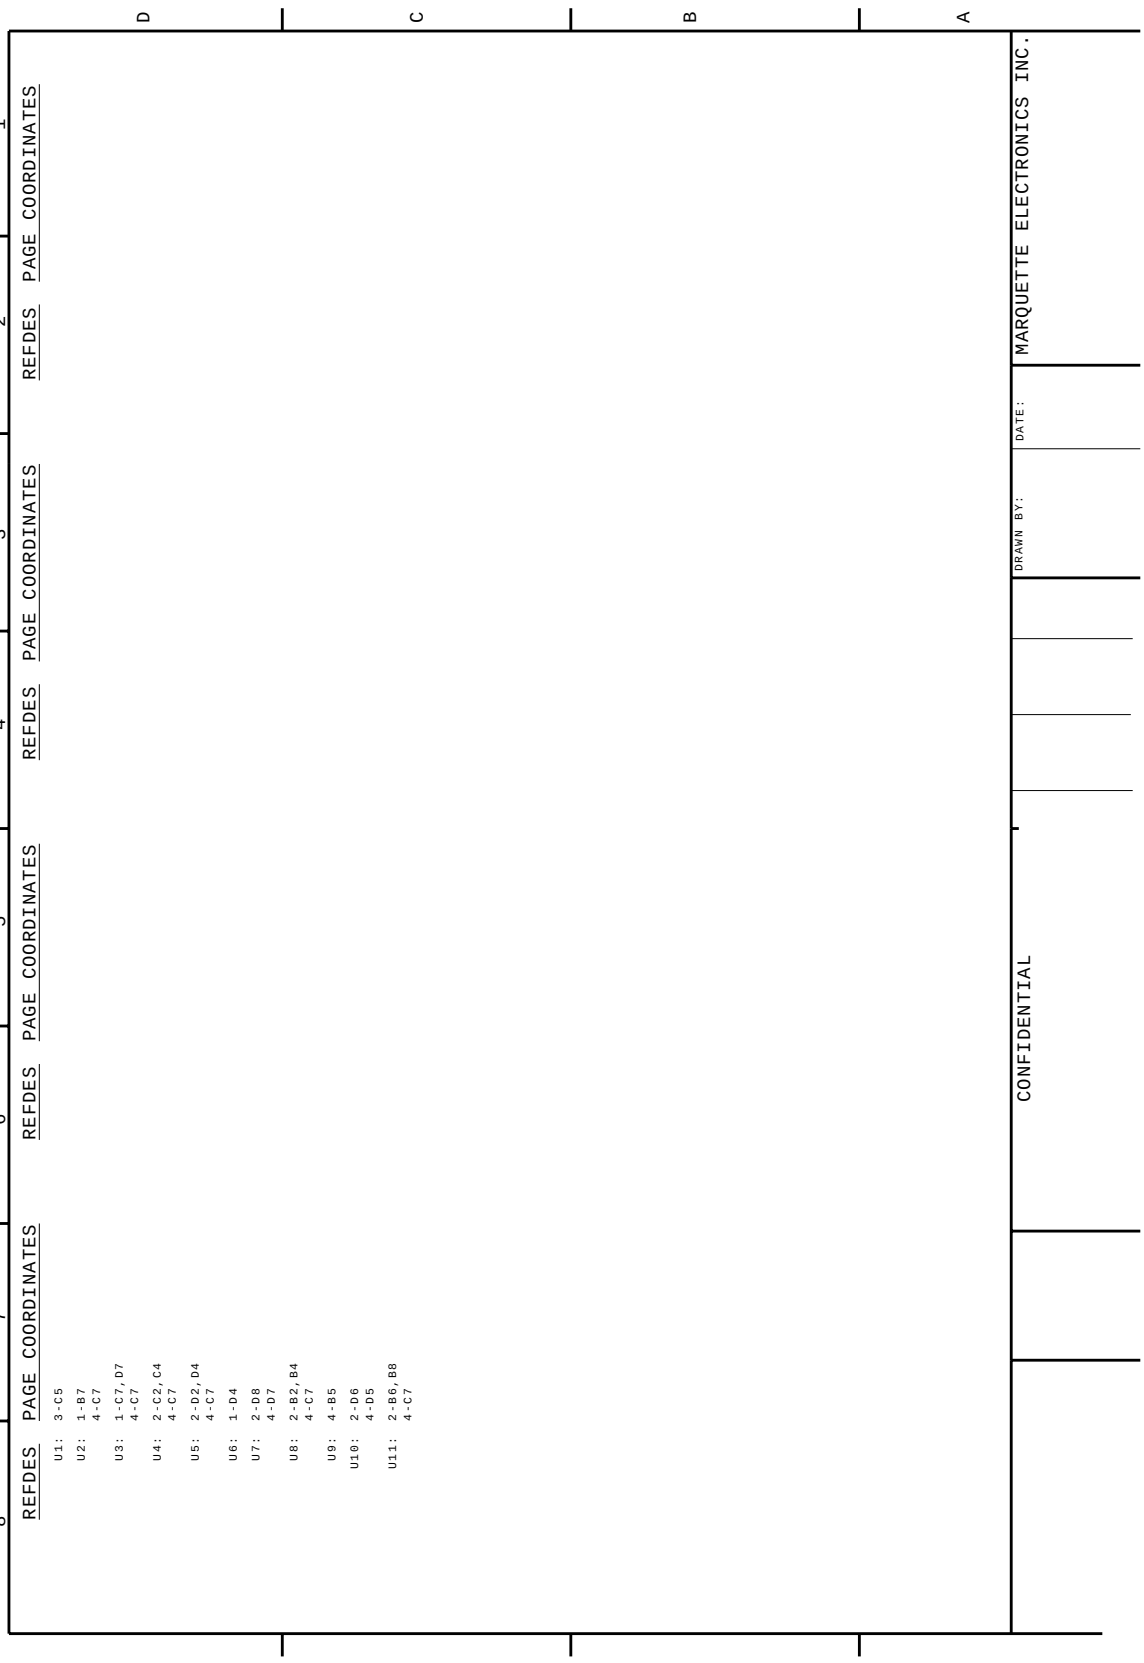
REFDES PAGE COORDINATES
U1: 3-C5
U2: 1-B7
4-C7
U3: 1-C7, D7
4-C7
U4: 2-C2, C4
4-C7
U5: 2-D2, D4
4-C7
U6: 1-D4
U7: 2-D8
4-D7
U8: 2-B2, B4
4-C7
U9: 4-B5
U10: 2-D6
4-D5
U11: 2-B6, B8
4-C7
REFDES PAGE COORDINATES
REFDES PAGE COORDINATES
REFDES PAGE COORDINATES
REFDES PAGE COORDINATES
CONFIDENTIAL
DRAWN BY:
DATE:
MARQUETTE ELECTRONICS INC.

7 of 7

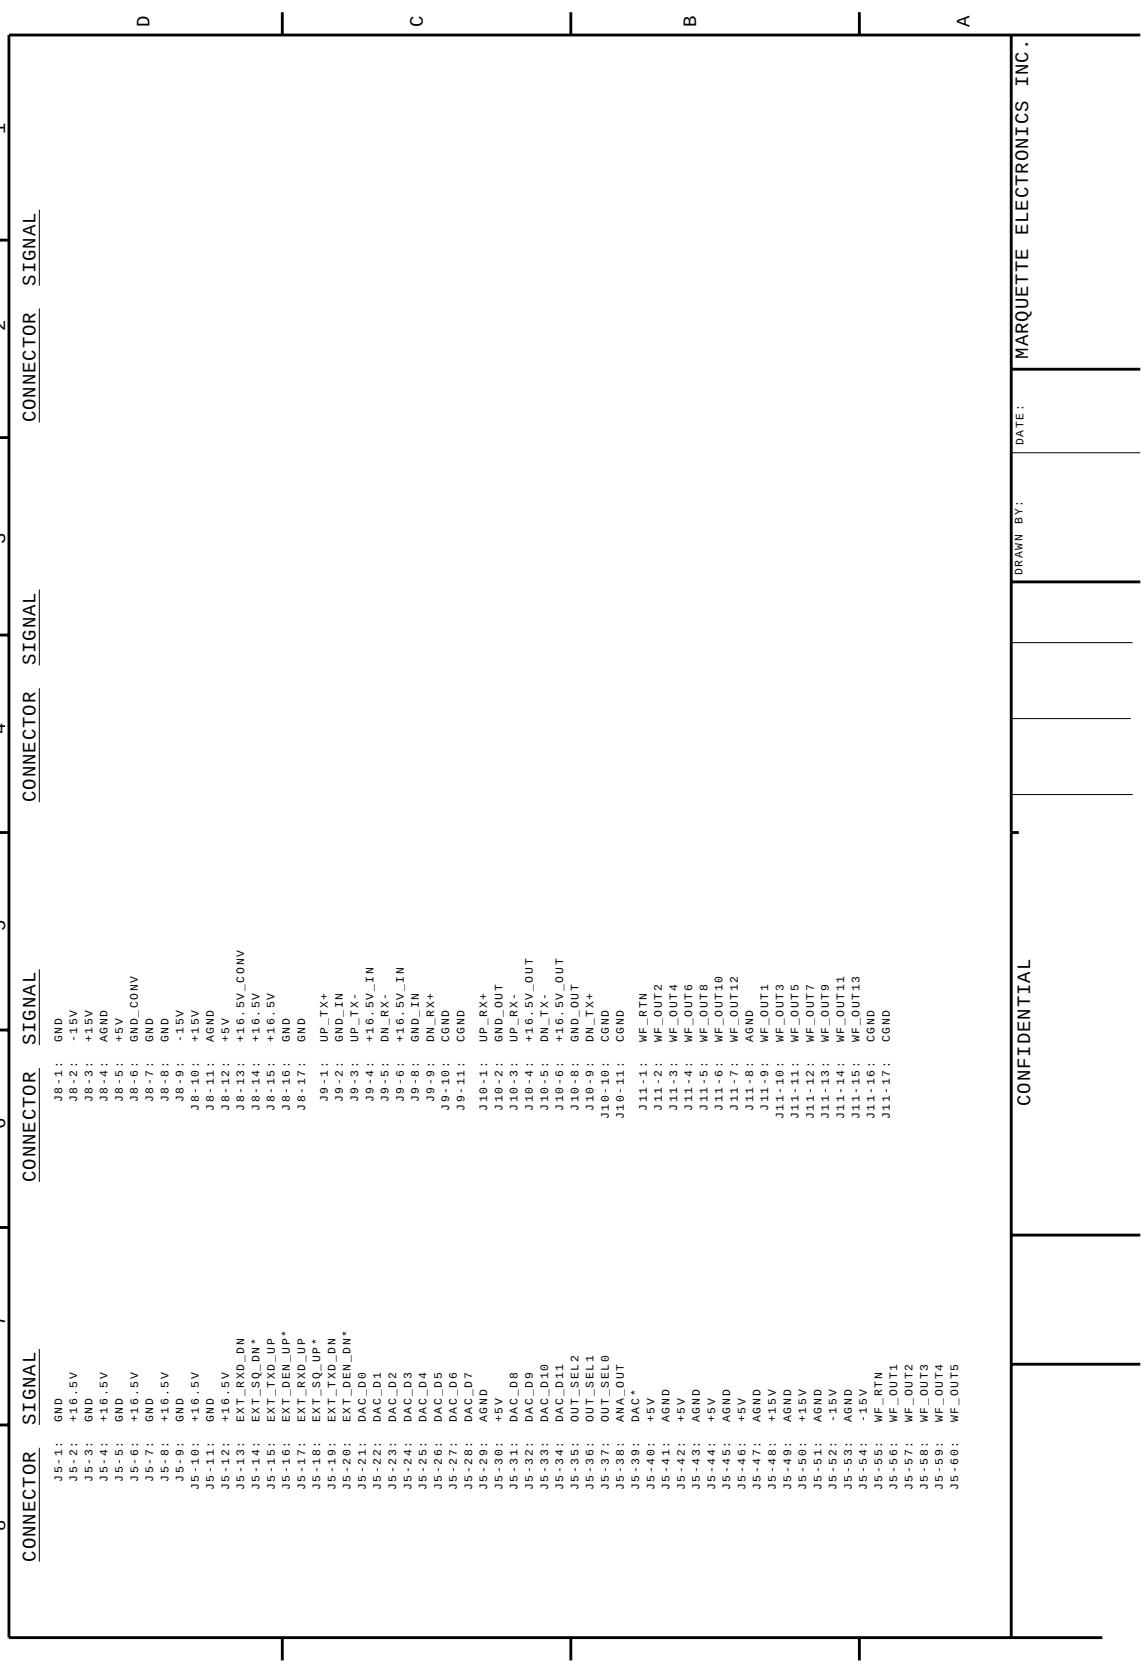

CONNECTOR	SIGNAL
J5-1:	GND
J5-2:	+16.5V
J5-3:	GND
J5-4:	+16.5V
J5-5:	GND
J5-6:	+16.5V
J5-7:	GND
J5-8:	+16.5V
J5-9:	GND
J5-10:	+16.5V
J5-11:	GND
J5-12:	+16.5V
J5-13:	EXT_RXD_DN
J5-14:	EXT_SQ_DN*
J5-15:	EXT_TXD_UP
J5-16:	EXT_DEN_UP*
J5-17:	EXT_RXD_UP
J5-18:	EXT_SQ_UP*
J5-19:	EXT_TXD_DN
J5-20:	EXT_DEN_DN*
J5-21:	DAC_D0
J5-22:	DAC_D1
J5-23:	DAC_D2
J5-24:	DAC_D3
J5-25:	DAC_D4
J5-26:	DAC_D5
J5-27:	DAC_D6
J5-28:	DAC_D7
J5-29:	AGND
J5-30:	+5V
J5-31:	DAC_D8
J5-32:	DAC_D9
J5-33:	DAC_D10
J5-34:	DAC_D11
J5-35:	OUT_SEL2
J5-36:	OUT_SEL1
J5-37:	OUT_SEL0
J5-38:	ANA_OUT
J5-39:	DAC*
J5-40:	+5V
J5-41:	AGND
J5-42:	+5V
J5-43:	AGND
J5-44:	+5V
J5-45:	AGND
J5-46:	+5V
J5-47:	AGND
J5-48:	+15V
J5-49:	AGND
J5-50:	+15V
J5-51:	AGND
J5-52:	-15V
J5-53:	AGND
J5-54:	-15V
J5-55:	WF_RTN
J5-56:	WF_OUT1
J5-57:	WF_OUT2
J5-58:	WF_OUT3
J5-59:	WF_OUT4
J5-60:	WF_OUT5

CONNECTOR	SIGNAL
J8-1:	GND
J8-2:	-15V
J8-3:	+15V
J8-4:	AGND
J8-5:	+5V
J8-6:	GND_CONV
J8-7:	GND
J8-8:	GND
J8-9:	-15V
J8-10:	+15V
J8-11:	AGND
J8-12:	+5V
J8-13:	+16.5V_CONV
J8-14:	+16.5V
J8-15:	+16.5V
J8-16:	GND
J8-17:	GND
J9-1:	UP_TX+
J9-2:	GND_IN
J9-3:	UP_TX-
J9-4:	+16.5V_IN
J9-5:	DN_RX-
J9-6:	+16.5V_IN
J9-8:	GND_IN
J9-9:	DN_RX+
J9-10:	CGND
J9-11:	CGND
J10-1:	UP_RX+
J10-2:	GND_OUT
J10-3:	UP_RX-
J10-4:	+16.5V_OUT
J10-5:	DN_TX-
J10-6:	+16.5V_OUT
J10-8:	GND_OUT
J10-9:	DN_TX+
J10-10:	CGND
J10-11:	CGND
J11-1:	WF_RTN
J11-2:	WF_OUT2
J11-3:	WF_OUT4
J11-4:	WF_OUT6
J11-5:	WF_OUT8
J11-6:	WF_OUT10
J11-7:	WF_OUT12
J11-8:	AGND
J11-9:	WF_OUT1
J11-10:	WF_OUT3
J11-11:	WF_OUT5
J11-12:	WF_OUT7
J11-13:	WF_OUT9
J11-14:	WF_OUT11
J11-15:	WF_OUT13
J11-16:	CGND
J11-17:	CGND

CONFIDENTIAL

DRAWN BY: DATE: MARQUETTE ELECTRONICS INC.

8 Tram-rac 4A Power Supply

For your notes

Theory of Operation

Overview

The AC-to-DC power supply (pn 6123-211) is manufactured for GE Medical Systems *Information Technologies* by a vendor. The parts list does not supply part numbers, but a description is provided for each vendor part.

NOTE

The fuse assembly is not a field serviceable component.

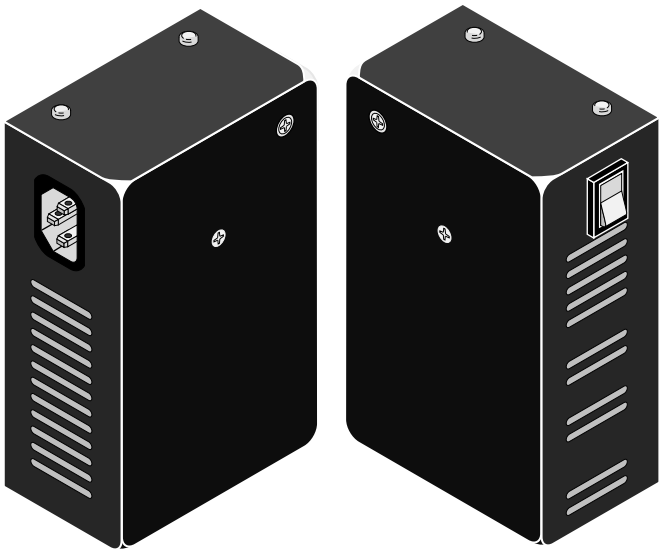

Indicators and Controls

Listed below is the function of any indicators, switches, jumpers, or controls located on the power supply. There are no calibration procedures because the power supply is not field repairable.

Table 1. Adjustments			
LED/Color	**Signal Name**	**Function**	**Normal Condition**
R112	16.5 Voltage	16.5 DC Voltage	Set in Factory

Table 2. Switches			
Symbol	**Signal Name**	**Function**	**Normal Condition**
SW1	Power	Power ON/OFF	ON for normal operation

Input and Output Connectors

The following tables contain all connections to the Tram-rac4 Interface PCB. Each signal includes such information as whether it is an input or output, the nominal voltage range for each signal, the type of signal, and the maximum frequency the signal may have. This is organized by connector.

Table 3. Connector P1 (15-Pin Connector to Tram-rac4 Interface PCB)				
Pin	**Signal Name**	**Signal Level**	**I/O**	**Signal Description**
1, 7, 8, Shell	GND	0V	O	**GROUND:** Power return for +16.5V supply, and chassis ground reference.
2, 9	-15V	–15V	O	**–15V POWER:** –15 V power.
3, 10	+15V	+15V	O	**+15V POWER:** +15 V power.
4, 11	AGND	0V	O	**ANALOG GROUND:** +5 V, +15 V, and –15 V power return.
5, 12	+5V	+5V	O	**+5V POWER:** +5 V power.
6	GND_CONV	0V	O	**CONVERTER GROUND:** +16.5 V power return for DC/DC converter.
13	+16.5V_CONV	+16.5V	O	**CONVERTER +16.5V POWER:** +16.5 V power for DC/DC converter.
14, 15	+16.5V	+16.5V	O	**+16.5V POWER:** +16.5 V power.

	Table 4. Connector P2 (3-Pin Connector to AC Power Source)			
Pin	**Signal Name**	**Signal Level**	**I/O**	**Signal Description**
L	L	0–280 VAC	I	**LINE:** 0 to 280V AC from wall receptacle
N	N	0–3 VAC	I	**NEUTRAL:** 0 to 3V AC from wall receptacle
G	G	0V	I	**CHASSIS GROUND:** 0V DC from wall receptacle.

Part Location Diagram PN 6123-211A

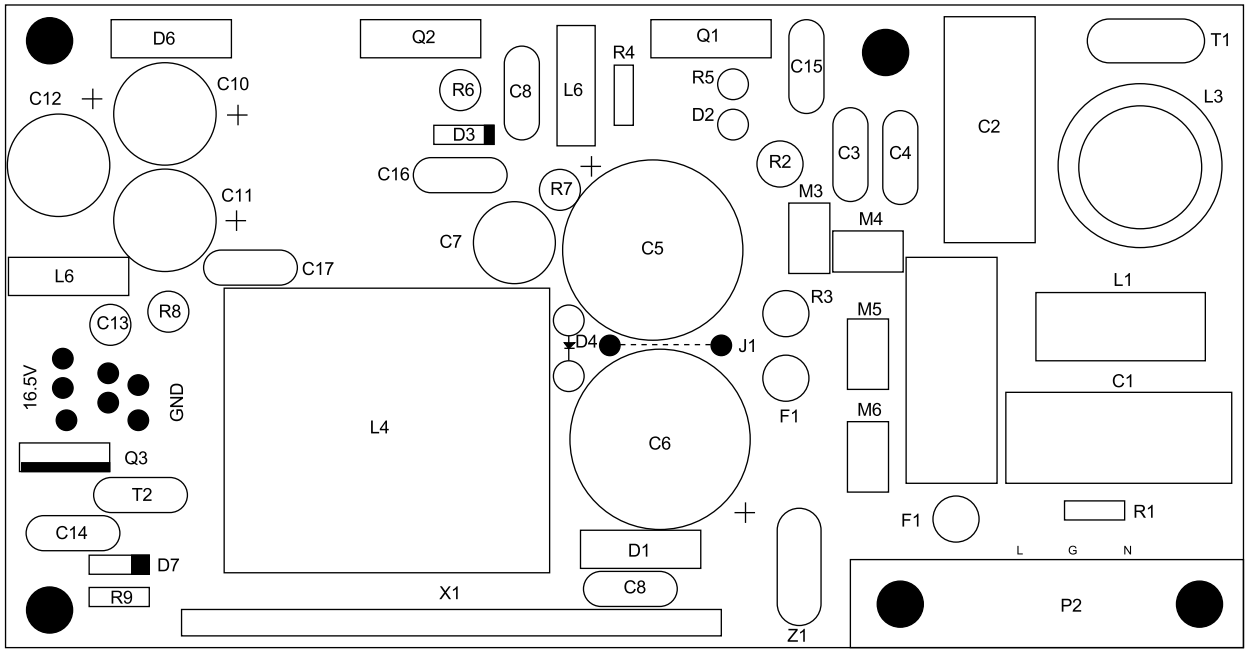

Main PCB Assembly

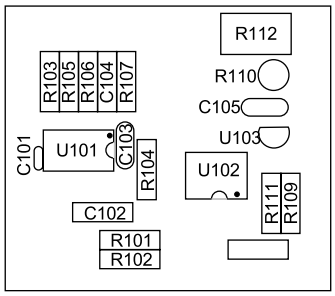

Daughter PCB Assembly

Parts List PN 6123-211A

Table 5. Main PCB

NOTE
GE Medical Systems *Information Technologies* part numbers are not given because this part is manufactured by a vendor.

Reference Designation	Description	Part Number	Qty
C1	Cap, 0.68µF, 250V	–	1
C2	Cap, 0.33µF, 250V	–	1
C3, 4, 15	Cap, 680pF, 20%, 250V	–	3
C5, 6	Cap, Cer, 470µF, 200V	–	2
C7	Cap, Cer, 330µF, 25V	–	1
C8	Cap, 0.47µF, 20%, 50V	–	1
C10, 11, 12	Cap, Cer, 1000µF, 25V	–	1
C13	Cap, 10µF, 25V	–	1
C14	Cap, 0.1µF, 20%, 50V	–	1
C16	Cap, 100pF, 10%, 1KV	–	1
C17	Cap, 0.001µF, 10%, 1KV	–	1
D1	Bridge Rectifier, Diode, 4A, 600V	–	1
D2, 3	Diode, 1A, 600V BYV26C	–	1
D4	Diode, 1A, 100V MUR110	–	1
D6	Diode, 15A, 200V MUR1520	–	1
D7	Diode, Zener, 18V, 1/2W 1N5248B	–	1
F1, 2	Fuse Assembly, 2A **NOTE** ■ This is not a field serviceable component.	–	1
J1	Jumper, 20 AWG	–	1
L1	Inductor, 28mH	–	1
L2, 3	Inductor, 288µH	–	2
L4	Inductor, Transformer, 75W	–	1
L5	Inductor, 8µH, 4A	–	1
L6	Inductor, Transformer Gate, 1.23mH	–	1
M1	Circuit Board, Main PCB (See "Part Location Diagram PN 6123-211A")	–	1
M3, 4, 5, 6	Switch Assembly (Not Shown)	–	4
M7, 8	Sleeve, Teflon	–	1
M9	Screw, PNH, Phillips, 6–32 x 3/8	–	1
M10	Nut, Keps, Hex, 6-12 x 1/4	–	1

Table 5. Main PCB

NOTE
GE Medical Systems *Information Technologies* part numbers are not given because this part is manufactured by a vendor.

Reference Designation	Description	Part Number	Qty
M21	Ferrite Bead (on D2)	–	1
M22, 23	Insulator	–	1
M24	Spacer, Plastic	–	1
P1 (PS1-J7)	Connector Assembly, 16.5V, 7-Pin (See "Connector P1 (15-Pin Connector to Tram-rac4 Interface PCB)")	–	1
P2 (PS1-J8)	Connector Assembly, AC Input, 3-Pin (See "Connector P2 (3-Pin Connector to AC Power Source)")	–	1
Q1, 2	Transistor, FET, 8A, 500V IRF840	–	2
Q3	SCR, 8A, 50V MCR72-2	–	1
R1	Res, 180K, 5%, 1/2W	–	1
R2, 3	Res, 47K, 5%, 2W	–	2
R4	Res, 20 Ohm, 5%, 1/4W	–	1
R5	Res, 47K, 5%, 1/4W	–	1
R6	Res, 0.24 Ohm, 2%, 2W	–	1
R7	Res, 100 Ohm, 5%, 1/2W	–	1
R8	Res, 10 Ohm, 5%, 1/2W	–	1
R9	Res, 44.2K, 1%, 1/4W	–	1
T1	Thermistor	–	1
T2	Thermistor, 100°C	–	1
X1	Daughter PCB (Details listed below.) (See "Part Location Diagram PN 6123-211A")	–	1
Z1	Varistor, Metal Oxide, 280VAC, 22J	–	1
–	Inductor, 20.6µH (L8)	–	1
–	Inductor, 20.6µH (L8)	–	1

Table 6. Daughter PCB

NOTE

GE Medical Systems *Information Technologies* part numbers are not given because this part is manufactured by a vendor.

Reference Designation	Description	Part Number	Qty
C101	Cap, 220pF, 100V	–	1
C102	Cap, 0.22µF, 10%, 50V	–	1
C103	Cap, 0.01µF, 10%, 100V	–	1
C104	Cap, 0.002µF, 10%, 100V	–	1
C105	Cap, 0.1µF, 50V	–	1
M1	Circuit Board, Daughter PCB (See "Part Location Diagram PN 6123-211A")	–	1
R101	Res, 20 Ohm, 5%, 1/4W	–	1
R102	Res, 47K, 5%, 1/4W	–	1
R103	Res, 680 Ohm, 5%, 1/4W	–	1
R104	Res, 1.33K, 1%, 1/4W	–	1
R105, 111	Res, 1.0K, 1%, 1/4W	–	1
R106	Res, 909 Ohm, 1%, 1/4W	–	1
R107	Res, 5.23K, 1%, 1/4W	–	1
R108	Res, 255 Ohm, 1%, 1/4W	–	1
R109	Res, 31.6, 1%, 1/4W	–	1
R110	Res, 5.11K, 1%, 1/4W	–	1
R112	Res, Variable, 1K	–	1
U101	Monostable Multivibrator UC2842	–	1
U102	Isolator, Optically-Coupled MOC81011	–	1
U103	Volt Ref, Programmable TL431CLP	–	1

Schematic Diagram PN SD6123-211A